



URC UR2-DTA DTA Remote Control Instruction Manual

[Home](#) » [URC](#) » URC UR2-DTA DTA Remote Control Instruction Manual 

Contents

- 1 URC UR2-DTA DTA Remote Control
- 2 Introduction
- 3 Replacing Batteries
- 4 Operations
- 5 Programming the Remote Control
- 6 A. Quick Set-Up Method
- 7 B. Quick Set-up Code Tables
- 8 C. Pre-Programmed 3-Digit Code
- 9 Auto-Search Method
- 10 E. Finding a Component Button's
- 11 F. Programming Volume Control
- 12 Setup Code Tables
- 13 Documents / Resources
 - 13.1 References
- 14 Related Posts



URC UR2-DTA DTA Remote Control



UR2-DTA DTA Remote Control

The UR2-DTA is a universal remote control designed to operate S/A, Pace Micro, Motorola, and IPTV set tops, as well as the majority of TV equipment on the market. It provides convenient control over your DTA box, IPTV set tops, and televisions.

Replacing Batteries

Before programming or operating the remote control, you need to install two new AA alkaline batteries. Follow these steps:

1. Remove the battery compartment cover on the back of your remote control.
2. Check battery polarity carefully and install the batteries as shown in the illustration below.
3. Replace the battery compartment cover.

Operations

The default setting for volume control is through the DTA. However, you have the option to control volume and mute through your TV. Refer to Section F for programming instructions.

Button Functions

The remote control offers various button functions to control your devices.

Programming the Remote Control

There are three methods to program your remote control:

1. Quick Set-Up Method

2. Pre-Programmed 3-Digit Code Method
3. Auto-Search Method

IMPORTANT SETUP NOTE!

During setup mode, the DTA LED will light for 20 seconds. If you don't press a button within this time, the LED light will turn off and exit setup mode. You will need to start over.

Quick Set-Up Method

1. Turn on the component you want to program. For programming the TV, turn on the TV.
2. Press and hold the **[DEVICE]** key for 5 seconds until the DTA LED blinks once and stays on.
3. Continue holding the **[DEVICE]** key and press the number key assigned to your brand in the Quick Set-up Code Table.
4. Release both the **[DEVICE]** key and the number key to save the code. The DTA LED will blink twice to confirm that the code is stored.
5. Point the remote control at the component.
6. Press the power button. If the component turns off, it is successfully programmed. If not, proceed with the Pre-Programmed 3-Digit Code Method or Scanning Method.
7. Repeat the above steps for all components (DTA, TV).

B. Quick Set-up Code Tables

Use the Quick Set-up Code Tables below to find the number associated with your brand:

DTA Quick Number	Manufacturer/Brand
0	PACE DTA
1	SA/CISCO, SAMSUNG, PACE DIGITAL
2	MOTOROLA DIGITAL
3	MOTOROLA DTA
4	EVOLUTION DTA
5	CISCO IPTV
6	ADB IPTV
7	TECHNICOLOR
8	AMINO 140/540 IPTV
9	MOTOROLA IPTV

TV Quick Number	Manufacturer/Brand
0	SANYO
1	SONY
2	SAMSUNG
3	LG
4	TOSHIBA
5	PANASONIC
6	PHILIPS
7	HITACHI
8	SHARP
9	VIZIO

C. Pre-Programmed 3-Digit Code Method

1. Turn on the component you want to program (TV, DTA).
2. Press the **[DEVICE]** button (TV or DTA) to be programmed and the **[SEL]** button simultaneously for 3 seconds.
The DTA LED light will turn on for 20 seconds, indicating that the unit is ready to be programmed.
3. Point the remote control toward the component and enter the 3-digit code number assigned to your brand.
4. If the component turns off, the entered code is correct. If it doesn't turn off, continue entering code numbers listed for that brand until the component turns off.
5. Once you find the correct code, save it by pressing the same **[DEVICE]** button one more time. The DTA LED light will blink twice to confirm that the code was successfully stored.

Now you can enjoy controlling your devices using the UR2-DTA DTA Remote Control!

Introduction


The UR2-DTA is designed to operate the S/A, Pace Micro, Motorola and IPTV set tops, plus the majority of TV equipment on the market as shown below.

- **DTA** : DTA boxes, IPTV set tops
- **TV** : Televisions

Replacing Batteries

Before you program or operate the remote control, you must install two new AA alkaline batteries.


- **STEP1** Remove the battery compartment cover on the back of your remote control.
- **STEP2** Check battery polarity carefully, and install the batteries as shown in the illustration below.
- **STEP3** Replace the battery compartment cover.

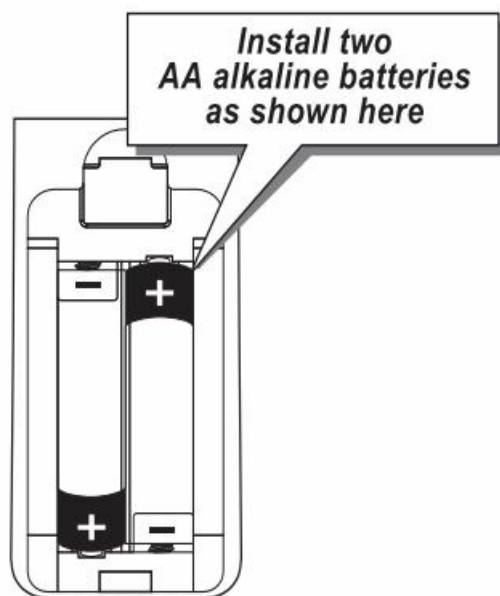

Operations

Volume Default: DTA volume and mute through the DTA, with the option of controlling volume and mute through the TV. Refer to Section F for programming the volume and mute through your TV.

Button Functions

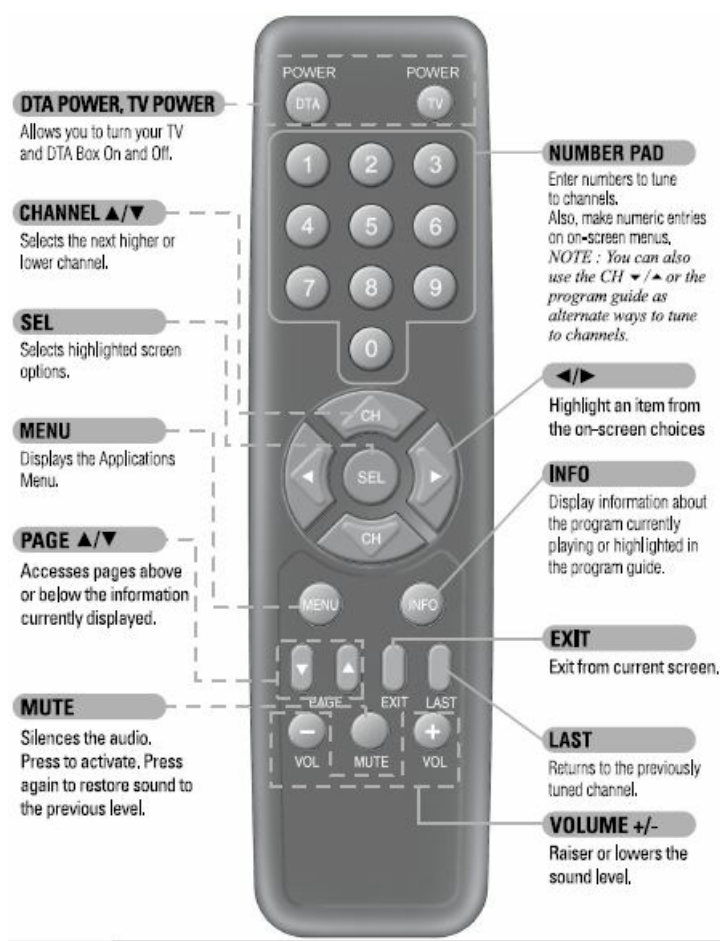

Programming the Remote Control

There are three ways you can program your remote:

- Quick Set-Up Method
- The Pre-Programmed 3-Digit Code Method
- The Auto-Search Method

The Quick Set-Up Method is a unique new feature that enables the fastest and easiest set-up by using one-digit codes for up to 10 major brands for each component.

The Pre-Programmed Code Method allows you to setup all the buttons at once by entering 3-digit code numbers that correspond to a particular Component's manufacturer/brand, so it's the fastest and easiest of the two methods. (Code Tables are on the backside of this Instruction Sheet.) The Auto-Search Method scans through all the codes in the remote control, one at a time.

IMPORTANT SETUP NOTE!

This pertains to all programming steps. When you are in setup mode, the DTA LED will light for 20 seconds. If you do not press a button within 20 seconds, the LED light will turn off and exit setup mode and you will need to start over.

A. Quick Set-Up Method

- **STEP1** Turn on the component you want to program. To program your TV, turn on the TV.
- **STEP2** Press and hold the [DEVICE] key for 5 seconds until the DTA LED will blink once and stays on.
Continue to hold the [DEVICE] key and press the number key assigned to your brand in the Quick Set-up Code Table and release both [DEVICE] key and the number key to save the code. The DTA LED will blink twice to confirm that the code is stored.
- **STEP3** Point the remote control at the component.
- **STEP4** Press the power button. If it turns off, it is programmed for your component. If it does not turn off, use the Pre-Programmed 3-Digit code Method or Scanning Method.

Repeat the steps above for all components. (DTA, TV).

B. Quick Set-up Code Tables

DTA

0	PACE DTA
1	SA/CISCO, SAMSUNG, PACE DIGITAL
2	MOTOROLA DIGITAL
3	MOTOROLA DTA
4	EVOLUTION DTA
5	CISCO IPTV
6	ADB IPTV
7	TECHNICOLOR
8	AMINO 140/540 IPTV
9	MOTOROLA IPTV

TV

Quick Number	Manufacturer/Brand
0	SANYO
1	SONY
2	SAMSUNG
3	LG
4	TOSHIBA
5	PANASONIC
6	PHILIPS
7	HITACHI
8	SHARP
9	VIZIO

C. Pre-Programmed 3-Digit Code

Method

- **STEP1** Turn on the Component you want to program(TV, DTA).
- **STEP2** Press the [DEVICE] button (TV or DTA) to be programmed and [SEL] button simultaneously for 3 seconds. The DTA LED light will turn on for 20 seconds indicating the unit is ready to be programmed.
- **STEP3** Point the remote control toward the Component and enter the 3-digit code number assigned to your brand.
***Note** : If the 3-digit code number you just entered is correct, the Component will turn Off. If it did not turn Off, continue entering code numbers listed for that brand until the Component turns Off.
- **STEP4** Once you have found the correct code, save it by pressing the same [DEVICE] button one more time. The DTA LED light will blink twice to confirm that the code was successfully stored.

Auto-Search Method

- STEP1 Turn on the Component you want to program (TV, DTA).
- STEP2 Press the [DEVICE] button (TV or DTA) to be programmed and [SEL] button simultaneously for 3 seconds. The DTA LED light will turn on for 20 seconds indicating the unit is ready to be programmed.
- STEP3 Point the remote toward the Component and press the [CH5] or [CH6] button one step at a time or keep it pressed. The remote will emit a series of ON/OFF commands. Release the [CH5] or [CH6] button as soon as the Component turns Off.
- STEP4 Once you have found the correct code, save it by pressing the same [DEVICE] button one more time. The DTA LED light will blink twice to confirm that the code was successfully stored. Now, repeat the Auto-Search Method for those Components you could not program earlier with the Pre-Programmed Method.

E. Finding a Component Button's

Setup Code Number

If you used the Auto-Search Method to program a Component, you may not know what the correct code number is. Here is a way for you to identify the code number, so you can record it for future reference.

- **STEP1** Press the [DEVICE] button (TV or DTA) you want to verify and the [SEL] button simultaneously for 3 seconds. The DTA LED light will turn on for 20 seconds.
- **STEP2** Press the [INFO] button and count the number of times the DTA LED light blinks. This number indicates the first digit of the code, followed by the second and third, each separated by a one second pause when the LED will turn off.
 - ***Note** : 10 blinks represents the number zero.
 - **Example** : One blink, (pause), eight blinks, (pause) and three blinks, indicates code number 183.

F. Programming Volume Control

By default, the VOL+, VOL- and MUTE keys operate through your DTA. If you would like those keys to operate those functions on a TV device, follow these steps.

- **STEP1** Press the [SEL] button and [DTA] button simultaneously for 3 seconds.
 - The DTA LED will turn on for 20 seconds.
 - The next step must be performed while the LED is on.
- **STEP2** Press the [VOL+] button.
 - The DTA LED will blink.
- **STEP3** Press the [TV] button that you would like the volume and mute buttons to control. The DTA LED will blink twice to confirm the programming.

Note : If you wish to have the volume and mute keys operate your DTA Box, press the [DTA] device button in Step 3.

G. Memory Lock System

This remote control is designed to retain programmed memory for 10 years even after batteries are removed from the remote control.

H. Write your TV Set-up codes

Set-up Code Number : For additional information about your remote control, go to www.universal-remote.com

Setup Code Tables

DTA

SCIENTIFIC ATLANTA	003 251
PAGE	001 003 204 206 217 002
MOTOROLA	001 206 253
ADB	254 255 315 259
Amino	219 260 249 256 257 261 235
ARRIS	192 216 140 234 242
AT&T	251
BELL FIBE	205 229
Blue Stream	138
BT Vision	232 960
CHANNEL MASTER	006
CINCINNATI BELL	194 220
CISCO	007 003 005 002 251 316
COMCAST	195 002
CONFLUENT	196
Cox Digital Cable	223
Digital Multimedia Technology	222
DIGITAL STREAM	580
DIRECTV	238
Dish Network	122
Duoson	218
DVB (Digital Video Broadcastin g)	193
Entone	221 155 258 213

DTA

Manufacturer/Brand	Set-Up Code Number
EVOLUTION	189 215
Foxtel	228
Frontier	139
HOMECAST	004
Horizon	225
Humax	231
Innovative Systems	262
Layer3	226
MINERVA	178
MOXI	111
MYRIO	254 255
NAGRAVISION	201
NBOX	181
NOW TV	314
Optimum	236 237
Pico Digital	224
SAMSUNG	003
Sky	240 241
Spectrum	231
SUDDENLINK	579
TECHNICOLOR	365 002
THOMPSON	365 002
TRANSPARENT VIDEO SYST EMS	193
Virgin Media	959
WEGENER	250
WINDSTREAM	212
ZeeVee	227

TV

Manufacturer/Brand	Set-Up Code Number
ADMIRAL	072 081 160 161 096
AD NOTAM	672
ADVENT	147 224
AFFINITY	680
AIWA	238 141 145
AKAI	031 070 146 004 148 124 226 104 108 615
AKIO	103
ALARON	028
ALBATRON	253
AMARK	112 127
AMERICA ACTION	043
AMERICAN HIGH	236
AMPRO	073 167 245
ANAM	043 054 056 080 112 236
AOC	058 070 004 112 616
APEX	572
APEX DIGITAL	015 150 036 037 424

TV

Manufacturer/Brand	Set-Up Code Number
AQUAVISION	164 686 904
ASTAR	164
AUDIOVOX	076 103 043 035 224 228 078
AUVIO	689
Avera	761
AVION	223
AWOL Vision	905
AXESS	711
AXION	043
BAYSONIC	043

BELL&HOWELL	072
BENQ	600
BRADFORD	043
BROKSONIC	231 252 096 170
BYDESIGN	254
CAIRN	162
CANDLE	070 002 003 004
CANON	236
CAPEHART	058
CARVER	164
CELEBRITY	001
CETRONIC	043
CIELO	101
Ciil	732
CINERAL	103 120
CITIZEN	070 002 003 004 101 103 127
CLASSIC	043
COBY	640 641 671 004
CONCERTO	004
CONTEC	043 051
Continu-us	161 746 747
CORONADO	127
CRAIG	043 054 028 239
CROSLEY	164
CROWN	043 127
CURTIS MATHES	070 004 101 127 236 011 072 081 120 164
CXC	043
DAEWOO	076 103 112 004 127 016 043 044 125 120 235 249
DAYTRON	004 127
DELL	004 041 164 618
DENON	011

DIGITAL LIFESTYLE	163
DIGITAL PROJECTION	570
DIGITAL RESEARCH	258
DIGITRON	101
DISNEY	096
DREAMVISION	090
DUMONT	004 073
DURABRAND	168

TV

Manufacturer/Brand	Set-Up Code Number
DWIN	131 132 161
DYNASTY	043
DYNATECH	062 238
DYNEX	096
ELECTROBAND	001
ELECTROGRAPH	220
ELECTROHOME	024 076 127
ELEMENT	004 110 622 690
EMERSON	• 005 028 043 048 076 096 155 • 004 051 127 151 153 154 231 • 236 238 247 252 168 121 514
ENVISION	070
EPSON	087 590
ESA	031 168
Evervue	755
FISHER	007 057
FREEMOTION	662
FUJITSU	164 197 028 157 149 066 217
FUNAI	028 043 238 052 168
FUSION	004
FUTURETECH	043

GATEWAY	165 031
GE	• 070 073 130 144 160 161 004 • 008 009 034 056 074 091 155 • 232 233 236 239 245 081 120
GEM	031
GIBRALTER	004 073
GO VIDEO	239
GOLDSTAR	004 106 112 127 247 250
GPX	256 674
GRUNPY	028 043
H&B	046
HAIER	004 116 623 749
HALL MARK	004
HANNSPREE	099
HARLEY DAVIDSON	028
HARSPER	220
HARMAN KARDON	164
HARVARD	043
HISENSE	198 021 619 630 004 749
HITACHI	• 011 004 613 007 009 072 010 • 012 023 075 127 158 236 238 • 587 614 749
HP	027 039 098
HQ	238 046
HUMAX	122
HYPERION	609
HYUNDAI	049 067
ILO	055 096
INFINITY	164
INFOCUS	215 225 046 532 595 726 733

Manufacturer/Brand	Set-Up Code Number
INKEL	129
INSIGNIA	• 068 069 078 096 100 164 168 • 229 026 454 604 617 690
INSTANTREPLAY	236
INTEQ	073
JBL	164
JCB	001
JCL	236
JCPENNEY	004 008 024 030 065 070 101 127 160 156 234 236 239 247
JENSEN	013
JVC	038 001 034 083 195 236 242 159 227 581
KENWOOD	070 001 238
KLEGG	220
KLOSS	002 059
KONKA	026
KREISEN	202
KTV	070 043 127 154
LG	• 004 569 106 112 127 247 250 • 598 698 741
LLOYD	238
LODGENET	072
LOEWE	196 164 738
LOGIK	072
LUXMAN	004
LXI	007 015 052 081 160 164 238
MAGIN	239

MAGNAVOX	• 070 003 004 022 059 060 061 • 063 064 127 164 094 160 056 • 236 238 243 205 028 138 168 • 035 211 077 050 218 594
MAJESTIC	072
MARANTZ	164 070 236 243 182 584
MARTA	247
MATSUI	164
MATSUSHITA	080
MAXENT	165
MEGAPOWER	253
MEGATRON	004
MEI	236
MEMOREX	004 007 072 234 236 238 245 247 028 096
METZ	088
MGA	024 070 004 042 239
MIDLAND	073
MINERVA	088
MINTEK	077
MINUTZ	008
MITSUBISHI	• 109 024 042 004 040 146 028 • 232 255 081 200 450 550
MONIVISION	253
MOTOROLA	081

TV

Manufacturer/Brand	Set-Up Code Number
MTC	070 004 062 101 238 239
MULTITECH	238 043
NAD	015 025

NEC	• 070 130 134 040 056 007 019 • 024 004 182 140 575 717
NEXUS	620 078
NIKEI	043
NIKKO	103
NIKO	175
NORCENT	211
NORWOOD MICRO	079
NTC	103
NUVISION	084 567 667
OLEVIA	219 004 161 144 160
ONKING	043
onn.	898
ONWA	043
OPTIMUS	080
OPTOMA	029 032
OPTONICA	019 081
ORION	096 201 203 204 205 231 252 028
PANASONIC	• 080 164 190 034 056 234 236 • 244 230 248 524 624 607 664 • 801
PENTAX	236
PEERLESS-AV	723 763
PHILCO	• 070 003 004 024 056 059 060 • 063 064 127 164 236 238 243
PHILIPS	• 164 005 038 093 127 070 003 • 004 059 236 238 243 247 199 • 218 144 161 594 773
PILOT	247

PIONEER	• 023 025 135 176 004 018 070 • 183 191 208 214 182 660
PLANAR	728 742 787 788
POLAROID	• 015 024 031 046 086 092 097 • 224 228 006 110 026 118 119
PORTLAND	004 127 103
PRISM	034
PRIMA	147 164
PROSCAN	144 160 161 167 004
PROTON	004 058 127 171 173 193 163
PROTRON	102 213 004 115
PROVIEW	110
PROX	572
PYLE	257
PYLE HOME	015 662
QUASAR	034 056 234 236 244 606
RADIO SHACK	004 019 127 043 250
RCA	• 160 161 144 156 065 070 004 • 023 024 056 074 152 232 233 • 236 238 239 081 588 713

TV

Manufacturer/Brand	Set-Up Code Number
REALISTIC	007 019 236 238 239 247
REVOLUTION HD	220
RICO	241
RUNCO	• 072 073 130 179 180 181 182 • 216 194 697 696
SABIO	161
SAMPO	070 004 058 165

SAMSUNG	• 192 184 185 004 101 127 133 • 160 089 105 070 237 239 461 • 578 655
SANSEI	120
SANSUI	238 252 096 615 078 762
SANYO	007 053 057 082 020 239 750
SCEPTRE	036 699
SCOTCH	004
SCOTT	004 005 028 043 048 127 113
Sealoc	897
SEARS	• 004 007 015 028 030 057 082 • 094 127 160 238 247 052 164
SEIKI	690
SELECO	189
SEMIVOX	043
SEMP	015
SEURA	704 797
SHARP	251 004 684 081 014 019 028 022 127 236 496 692 735
SHERWOOD	129 128
SIGNATURE	072 238
Silo	001
Skyvue	569
SKYWORTH	164 895
SOLE	177 178
SONY	• 001 608 126 139 236 240 • 241 602
SOUNDESIGN	003 004 028 043 238
SOVA	004 169 174
SOYO	163

SPECTRICON	112
SPECTRONIQ	004
SQUAREVIEW	052
SSS	004 043
STARLITE	043
SUNBRITE	• 608 001 635 605 772 004 • 902 907
SUPERSCAN	168
SUPRE MACY	002
SUPREME	001
SV2000	168
SVA	046
SYLVANIA	• 070 003 052 059 060 063 064 • 127 160 164 044 056 236 238 • 243 168 121 593
SYMPHONIC	052 238 168
SYNTAX OLEVIA	219 004 161 144 160

TV

Manufacturer/Brand	Set-Up Code Number
TANDY	081 238
TATUNG	056 062
TCL	705 749
TEAC	238
TECHNICS	034 080 236 244
TECHNOL ACE	028
TECHVIEW	246
TECHWOOD	004
TEKNIKA	• 002 003 004 024 028 043 072 • 101 127 103 236 238 247 164

TELEFUNKEN	615
TELERENT	072
TERA	172
THOMPSON	166
TILEVISION	663
TNCI	073
TMK	004
TOSHIBA	• 015 101 045 030 007 040 062 • 142 137 703
TOTEVISION	127 239 247
TRUTECH	212
UNITECH	239
UNIVERSAL	008 009
UPSTAR	708
VENTURER	004
VIDEO CONCEPTS	146 238
VIDEOSONIC	239
VIDIKRON	188 164 182
VIDTECH	004
VIEWSONIC	210 594
VIORE	055 592 578
VISCO	209 110
VITO	004
VIZIO	004 031 724 603 625 675
WARDS	• 004 064 164 008 009 019 028 • 060 061 063 072 074 127 070 • 236 238 239
W Box Technologies	609
WESTINGHOUSE	076 036 221 222 001 690 101
WINBOOK	079
YAMAHA	004 070 238 206 207

YORK	004
YUPITERU	043
ZENITH	• 011 072 073 095 103 238 241 • 245 247 096
ZONDA	112

Universal Remote Control, Inc.
www.universalremote.com
OCE-0089B REV 18 (03/21/23)

Documents / Resources

	URC UR2-DTA DTA Remote Control [pdf] Instruction Manual UR2-DTA DTA Remote Control, UR2-DTA, DTA Remote Control, Remote Control, Control
---	---

References

- [🌐 Global HR Solutions & Employment Tools for Distributed Teams | Remote](#)
- [🌐 URC Automation | Think Beyond Everyday](#)