



USAutomatic 520001 Battery Controller Instructions

[Home](#) » [USAutomatic](#) » USAutomatic 520001 Battery Controller Instructions 



**USAutomatic Battery Controller
Part # 520001**

Contents

- [1 520001 Battery Controller](#)
- [2 Installation Steps:](#)
- [3 Operation:](#)
- [4 Diagnostics:](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

520001 Battery Controller

Battery controller is designed to charge 12 vdc batteries of various types using either solar panel (PN: 520026, 520028, 520030, 520031) or DC transformer (PN: 520009). Controller is also capable of charging 24 vdc battery if using a 24-volt solar panel.

Recommend battery types: SLA (Sealed Lead Acid), FLD (Flooded Lead Acid), GEL and AGM are all ideal choices. We do not recommend using Lithium-ion batteries with this controller.


Controller Features		
12 / 24 vdc battery detection	Charge current reading active	PWM charging mode
Battery reverse connection protection	Battery voltage reading active	USB power outlet
LCD display	Battery reverse discharge protection	Plug N Go connections
Controller Specifications		
10-amp solar charger	6.2 in x 2.9 in x 1.06 in	Weight 5.65 oz
DC adapter 20vdc @ 1.2 amps max	Float charging 14.2 / 27.6 vdc	Max solar panel 130 watts
Self-consumption < 9ma	USB max current 1.5 amps	Automatic cutoff under 10.8 vdc

Power source input: Solar panel or DC transformer part # 520009 Only. Polarity must be observed.


Installation Steps:

The controller is fully automatic for easy and quick installation.

1. Connect battery to the controller.
2. Controller LCD screen will display current battery voltage.
3. Connect Power Source to controller (solar panel or DC transformer)

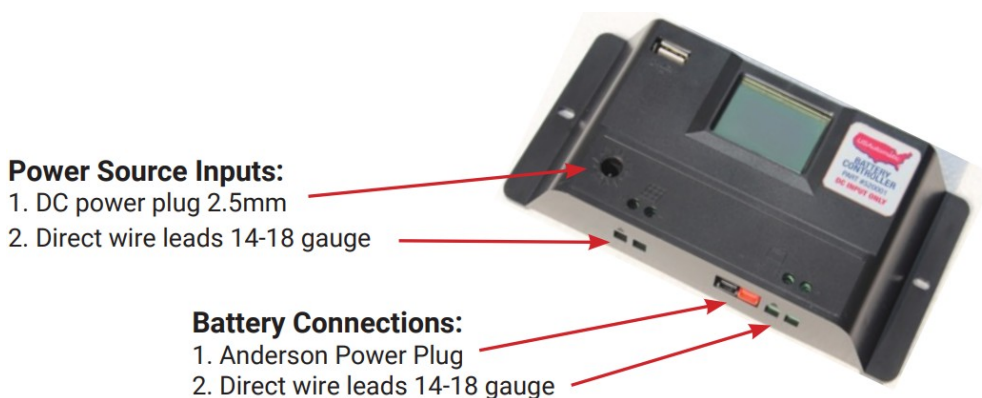

Operation:

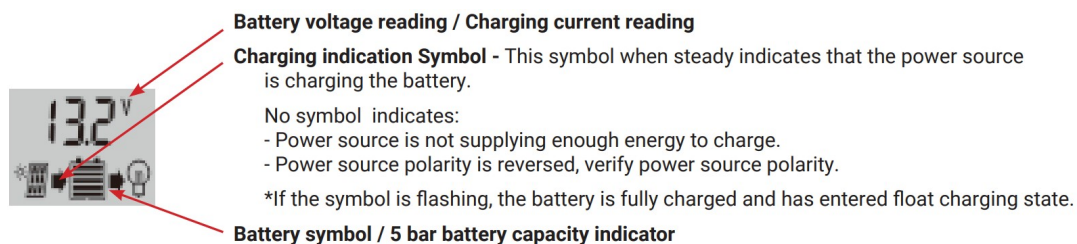

Diagnostics:

1. Controller LCD screen is blank:

- A. Battery voltage below cutoff voltage. Load test battery replace or charge as necessary.
- B. Reverse battery connection indication. Verify battery polarity connection to controller.
2. Battery symbol is flashing – indicates the battery voltage exceeds the rated input voltage of the charger.
Disconnect the external battery charger from battery or choose appropriate battery.
3. E11 displayed – Battery needs to be removed, charged and load tested.

* **Warning:** Risk of explosion! Never install the controller in a sealed enclosure with flooded batteries.

WARRANTY


USAAutomatic, LLC warrants this product to be free of defects in materials and workmanship for 1 YEAR. For a period of 1 YEAR following purchase USAAutomatic, LLC. will repair or replace the product free of charge, including parts, shop labor and return to customer shipping and handling. This 1 YEAR warranty does not cover the plastic case from normal wear or damage due to misuse.

To have the product sent for warranty consideration, it must be returned with the proof of purchase and a return authorization number. To obtain a return authorization number please call 1-[888-204-0174](tel:888-204-0174) for assistance. The return authorization number must be clearly marked on the outside of the return package or it may not be accepted.

Rev 2024



Documents / Resources

	<p>USAAutomatic 520001 Battery Controller [pdf] Instructions 520001 Battery Controller, 520001, Battery Controller, Controller</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.