



USB External CD/DVD Driver User Manual

[Home](#) » [USB](#) » USB External CD/DVD Driver User Manual 



MANUAL External CD/DVD Drive

 
Contents

- [1 External CD/DVD Driver](#)
- [2 Tips:](#)
- [3 Specification:](#)
- [4 Q&A:](#)
- [5 About use](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)


External CD/DVD Driver

Steps:


1. Pull out the embedded USB cable. After plugging into the USB cable to the computer, the power indicator will flashes.Wait about 10-15 seconds until the drive of this product appears on the computer screen.

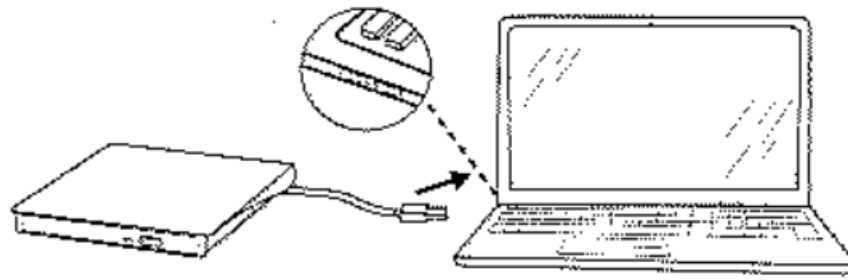

 2. Press the ejection button and pull out the tray to put the disc in.

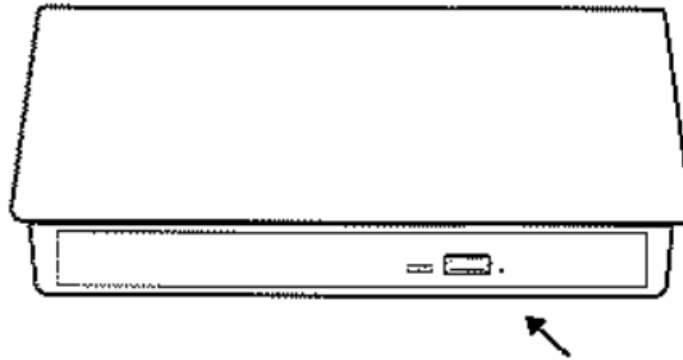

 3. After use, right-click 'pop up' on the computer.

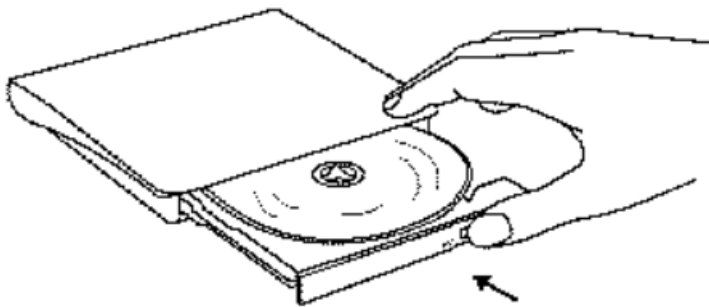

Tips:

1. Download player Software: VLC media player
2. Download burning Software: www.nero.com
3. Download video player Software: www.videolan.org
4. Before using external disk drive, please make sure your computer has "VLC Media Player".
5. Blu ray CD is not supported. Not for TV, car, smartphone.
6. To play American discs; please set the area code to #1.

Specification:

Reading speed	DVD-ROX 8X; CD-ROM 24X
Writing speed	DVD-R,DVD+R 8X; DVD-RW 4X; CD-R 24X
Supportive Instaling System	XP,Win 7,Win8
Compatible Operation System 8/9/SE/VISTA/XP Linux/MAC OS 8.6 and more	Windows?

Q&A:

Q: Not recognized

– A: This may be a case of poor connectivity. Please check whether the USB cable is correctly inserted into the computer. If it is used with a desktop computer, use the USB port at the back of the computer chassis. If the computer cannot recognize the CD/DVD drive, we will help you fix it.

Q: The tray cannot be ejected

– A: Try inserting a sharp object into the small hole next to the ejection button. We suggest you right-click 'pop up' on the computer. because if the manual eject button is forcibly pressed, the equipment may be jammed and damaged.

Q: Recognition / reading speed is slow

– A: The time for the computer of recognition is usually 10-25s, please don't operate during identification. You need to wait for the optical drive to complete the recognition before it can work normally. The time for the computer to read the disc is about 20-60s(The recognition time will be longer when you use it for the first time. Please wait patiently)

Q: Not work

– A: If the light flashes, it means that the product is working normally. For specific use problems, please contact us to help you.

Q: Unrecognized blank disc

– A: If other normal discs can be played, the greatest possibility is that there is a problem with the disc. Please check that the disc is specially used for burning. because the burned disc also has format requirements. And please make sure your computer has available media software or burning software, such as VLC Media Player, Nero, etc.

Q: Is it compatible with Chrome Book or ThinkPad?

– A: The device will be compatible with Chrome Book: but you need to go to The chrome store web page, download the application VLC and download the chrome operating system driver. We recommend that you use an external power supply, otherwise power problems will occur.

Q: Tips About burning

– A: CD-R (recordable disc) disc can record music at one time and keep it permanently on the disc (such as commercially produced music CD). CD-RW (rewritable CD-R1N) discs are suitable if you want to be able to write to a disc, then delete music and write to the same disc again.


About use

Thank you very much for purchasing our products this time. Only by strict selection can we create a first-class quality factory to produce this product. Therefore, if you have any questions about the product, please don't

hesitate to contact us. We hope to hear from your.

 : gotegashop@outlook.com

Documents / Resources

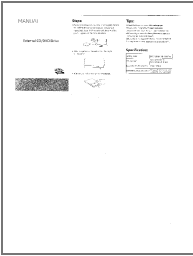	<p>USB External CD/DVD Driver [pdf] User Manual</p> <p>External CD DVD Driver, CD DVD Driver, External CD Driver, CD Driver, External DVD Driver, D VD Driver</p>
---	---