

Ustellar 100W Switch Control LED Security Light User Guide

Home » Ustellar » Ustellar 100W Switch Control LED Security Light User Guide 1



Contents

- 1 100W Switch Control LED Security Light
- 2 Parameters
- **3 Components**
- 4 Dimension
- 5 Installation
- 6 Documents / Resources
 - **6.1 References**

100W Switch Control LED Security Light

Thank you for ordering from Ustellar. Set-up is easy and takes only a few minutes by following the instructions. This LED security light is switch controlled, just install it and control it ON/OFF by a wall switch.

- AC Power Hardwired, NOT Solar Powered, NOT Battery Powered.
- No motion sensor, No dusk to dawn sensor.
- NOT Dimmable. Brightness NOT adjustable.

Warning


- 1. Please check if the light and the parts are intact before installation.
- 2. Make sure to cut off power before installation.
- 3. Please do not place this light in corrosive conditions.

- 4. If there is any damage to the cord, please cut off the power and stop using it immediately.
- 5. Please do not retrofit the light within the warranty period.
- 6. To ensure the light works properly, please use the voltage indicated on the packing.


Parameters

Model	UT88118
Wattage	100W
Color Temperature	5000K
Max Luminous Flux	10000lm
Input Voltage	AC120V
Frequency	50/60Hz
Dimmable	No
Life Expectancy	50000Hr
Working Temperature	-20°C-40°C

Components

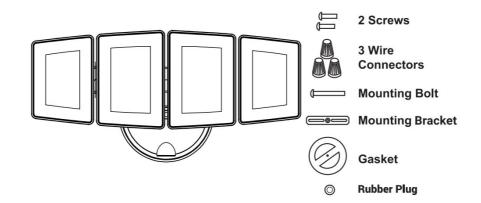


Dimension

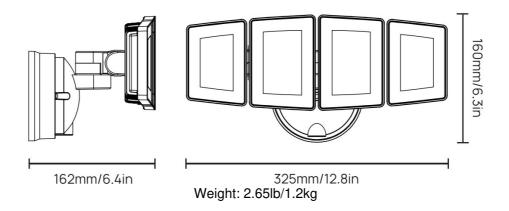

Installation


Safety Information:

 - This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- Turn power OFF before installing.
- This product is intended for use with the enclosed gasket and with a junction box marked for use in wet locations.




Installations:

For best performance, mount the light about 6.5-8ft above the ground.

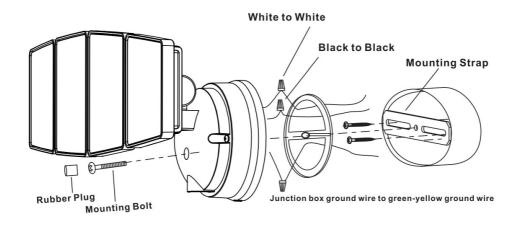

- 1. Turn off the power.
- 2. Install the mounting strap as shown with two screws that fit your juntion box.
- 3. Tighten the wires with wire connectors. L should be connected to Black wire, N should be connected to White wire.

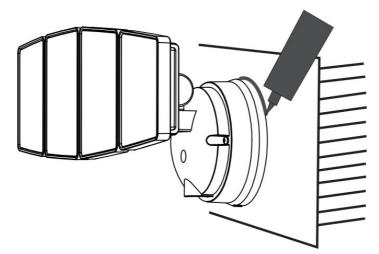

4. After mounting the light, apply silicone sealant completely around the perimeter of the cover plate where the back of the cover plate meets the mounting surface. Silicone sealant prevents water from seeping into the junction box.

Note:

Wall switch control, NOT Dimmable, Brightness NOT adjustable.

The light source of this luminaire is not replaceable, when the light source reaches its end of life the whole luminaire shall be replaced.

SUITABLE FOR WET LOCATIONS; SUITABLE FOR OPERATION IN AMBIENT NOT EXCEEDING 40°C;

Contact Us

Have some issue? No worries! Please reach us via these channels. Our customer services team is more than happy to help.



Manufacturer: Shenzhen Ustellar Technology Ltd. (shen zhen shi you shi tuo ke ji you xian gong si)

Address: 308A, 3/F, Building A, Youth Entrepreneur Hub, Jianshe East

Road, Qinghua Community, Longhua Street, Longhua District, Shenzhen, CHINA 518000



https://www.ustellar.com/pages/ustellar-100wswitch-control-led-security-light-e-manual

Step 1: Scan the QR code Step 2: Click E-manual PDF file

 
Step 3: Read file online or download



Go paper-free, make life easier, and do something good for the environment.



Documents / Resources



Ustellar 100W Switch Control LED Security Light [pdf] User Guide

100W Switch Control LED Security Light, 100W, Switch Control LED Security Light, Control LED Security Light, Security Light, Light

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.