



Ustellar UT88115PB Switch Control LED Security Light with Plug User Guide

[Home](#) » [Ustellar](#) » Ustellar UT88115PB Switch Control LED Security Light with Plug User Guide 

Ustellar UT88115PB Switch Control LED Security Light with Plug



Contents

- [1 Thank you](#)
- [2 Parameters](#)
- [3 Components](#)
- [4 Dimension](#)
- [5 Installation](#)
- [6 CUSTOMER SUPPORT](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

Thank you

Thank you for ordering from Ustellar. Set-up is easy and takes only a few minutes by following the instructions. This LED security light is switch controlled, just install it and control it ON/OFF by a wall switch.

- AC Powered, NOT Solar Powered, NOT Battery Powered.
- No motion sensor, No dusk to dawn sensor.
- NOT Dimmable. Brightness NOT adjustable.



 
Warning

1. Please check if the light and the parts are intact before installation.
2. Make sure to cut off power before installation.
3. Please do not place this light in corrosive conditions.
4. If there is any damage to the cord, please cut off the power and stop using it immediately.
5. Please do not retrofit the light within the warranty period.
6. To ensure the light works properly, please use the voltage indicated on the packing.

Parameters

Model	UT88115
Wattage	55W
Color Temperature	5000K
Max Luminous Flux	5500lm
Input Voltage	AC120V
Frequency	50/60Hz
Dimmable	No
Life Expectancy	50000Hr
Working Temperature	-20°C-40 °C


Components

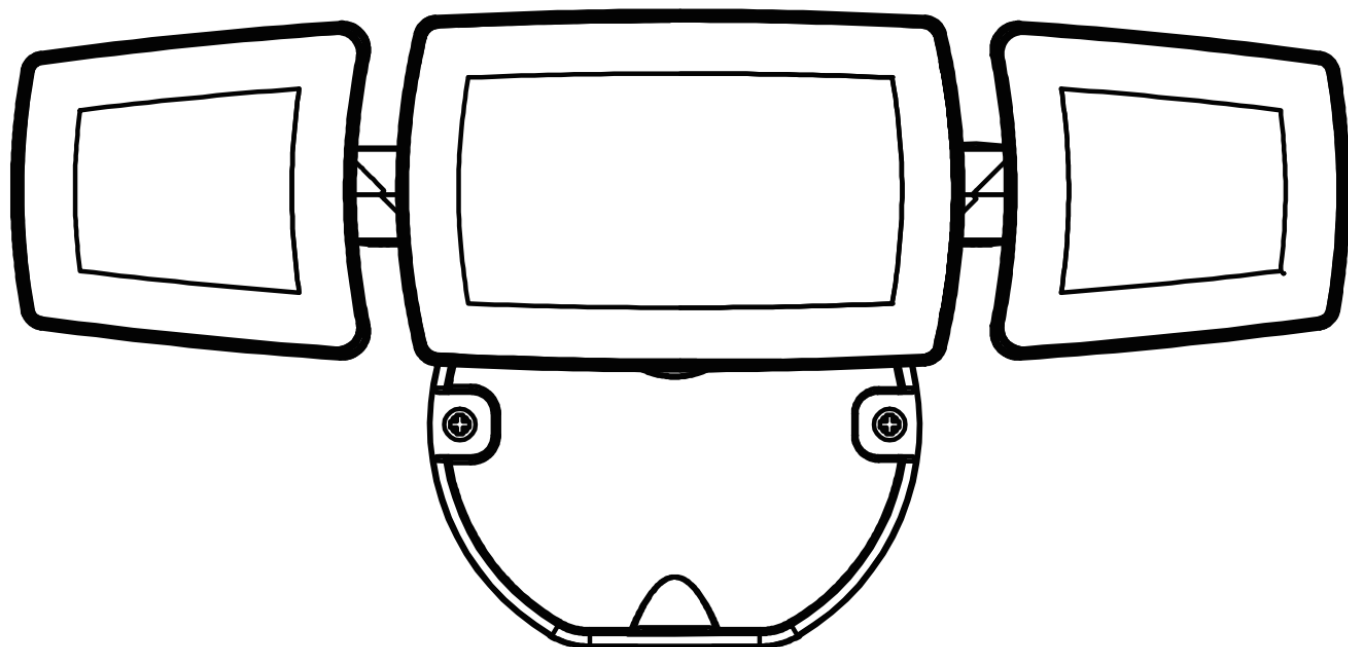


- 3 Mounting Screws



 - 3 Wall anchors

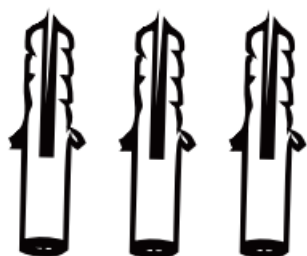

Dimension

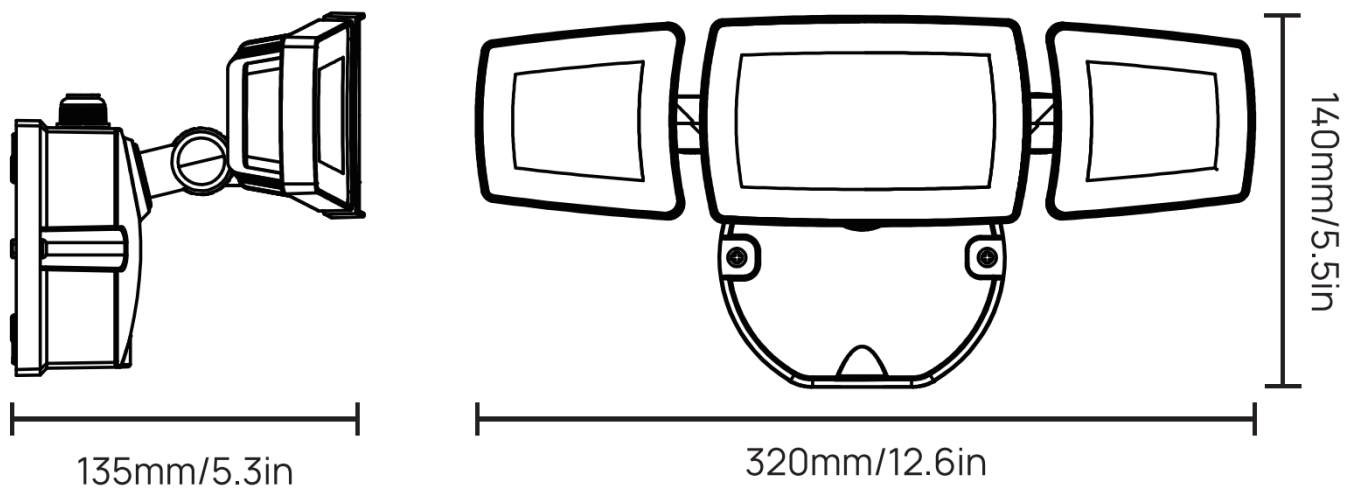 

Weight: 1.68lb/0.76kg

 
Installation

Safety Information:

- This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- Turn power OFF before installing.

Installations:

For best performance, mount the light about 6.5-Bft above the ground.

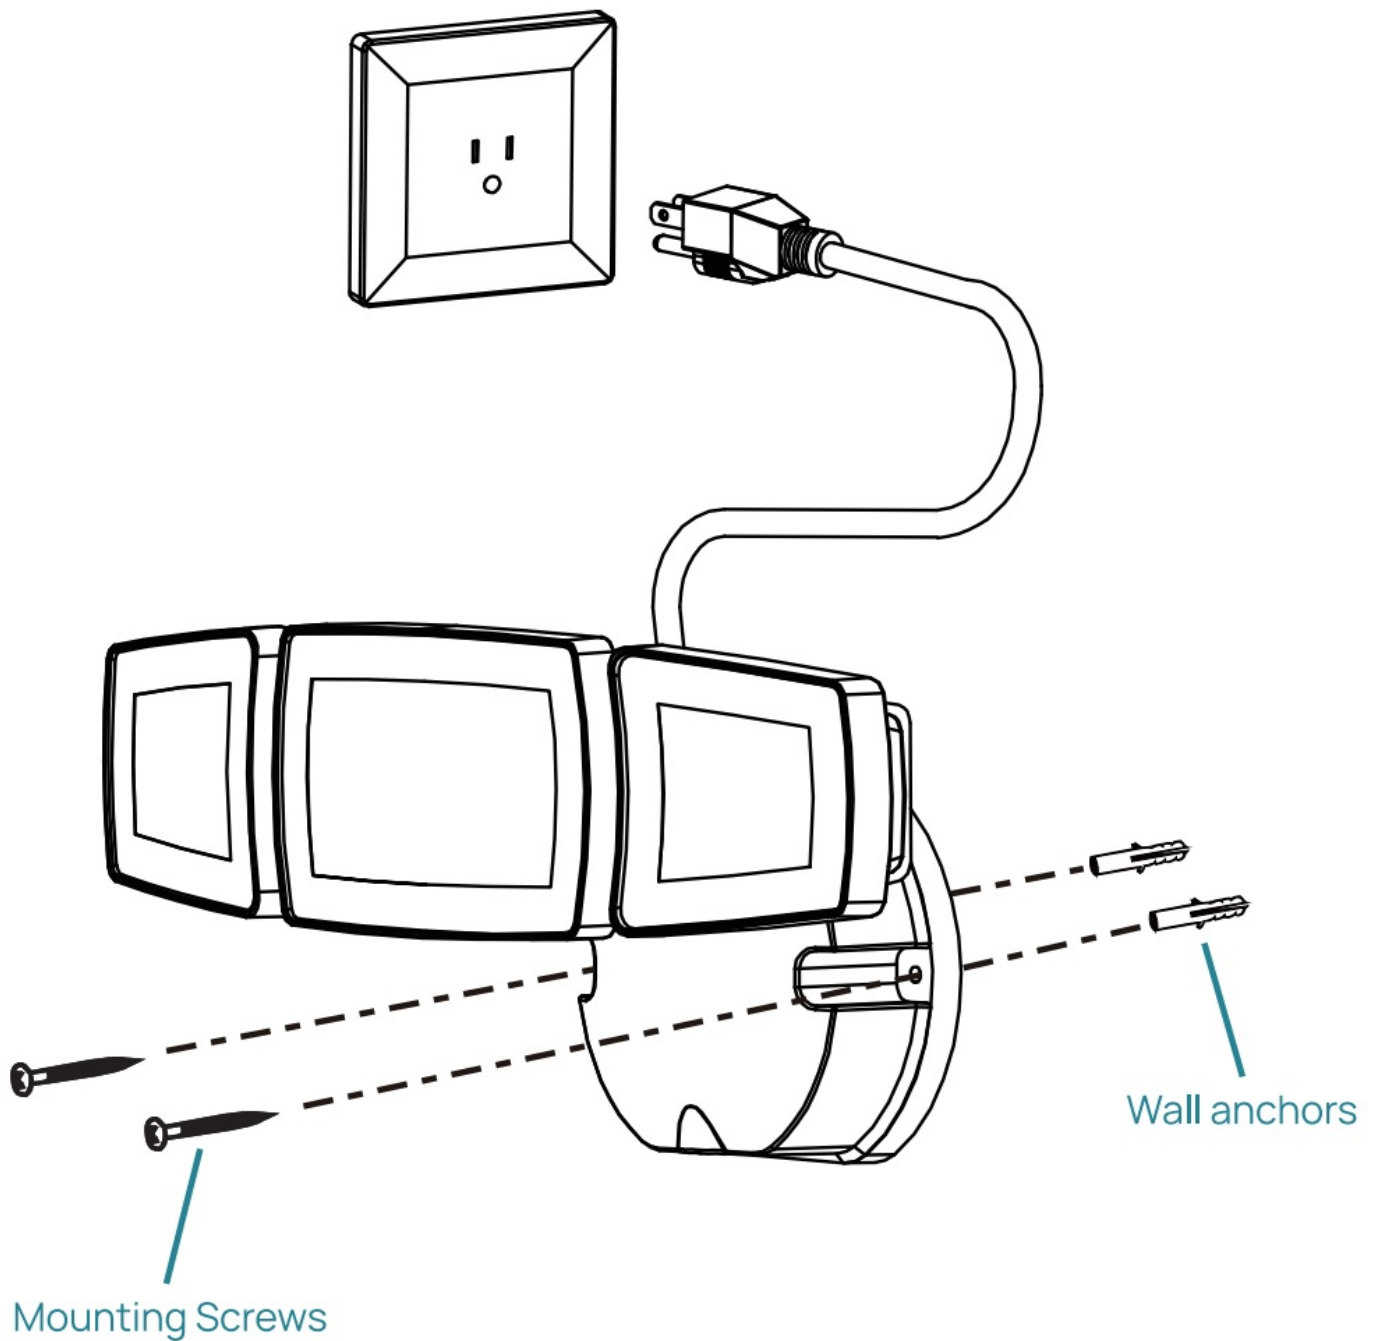

1. Turn off the power.
2. Use a power drill (not included) to drill holes on the chosen surface, and use the wall anchors and mounting screws to fasten the light to the surface.
3. Plug into the AC power socket and power on the light.

Note:

Wall switch control, NOT Dimmable, Brightness NOT adjustable.

The light source of this luminaire is not replaceable, when the light source reaches its end of life the whole luminaire shall be replaced.

SUITABLE FOR WET LOCATIONS;

SUITABLE FOR OPERATION IN AMBIENT NOT EXCEEDING 40°C;

CUSTOMER SUPPORT



Step 1: Scan the QR code

Step 2: Click E-manual PDF file

Step 3: Read file on line or download



Go paper-free, make life easier, and do something good for the environment.



Manufacturer: Shenzhen Ustellar Technology Ltd. (shen zhen shi you shi tuo ke ji you xian gong si)

Address: 308A, 3/F, Building A, Youth Entrepreneur Hub, Jianshe East Road, Qinghua Community, Longhua Street, Longhua District, Shenzhen, CHINA 518000

Contact Us

Have some issue? No worries! Please reach us via these channels.
Our customer services team is more than happy to help.



 
www.ustellar.com



support@ustellar.com

Ustellar

Documents / Resources

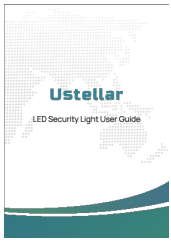

[Ustellar UT88115PB Switch Control LED Security Light with Plug](#) [pdf] User Guide
UT88115PB, UT88115PB Switch Control LED Security Light with Plug, Switch Control LED Security Light with Plug, Control LED Security Light with Plug, LED Security Light with Plug, Security Light with Plug, Light with Plug

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.