



# UTG BIG BORE Full Stability BIPOD User Manual

[Home](#) » [UTG](#) » UTG BIG BORE Full Stability BIPOD User Manual 



## BIG BORE FULL STABILITY BIPOD

### USER MANUAL

For Model TL.BPF\$01

#### Contents

- [1 BPOO INSTALLATION](#)
- [2 POSITION BIDIRECTIONAL FOLDING](#)
- [3 LEG EXTENSION HEIGHT ADJUSTMENT](#)
- [4 55° TILT TENSION ADJUSTMENT](#)
- [5 35° PANNING TENSION ADJUSTMENT](#)
- [6 The Best Never Rest Warranty – Lifetime](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

## BPOO INSTALLATION

Ensure firearm is unloaded before installation and follows all basic rules of firearm safety

1. Position the bipod so that the tilt tension adjustment lever is facing away from the muzzle.



2. Loosen the side locking plate nut by turning it counterclockwise. Loosen it enough for the mounting interface to seat evenly onto your firearm's MIL-STD-1913 Picatinny rail and with its squared recoil stop fitting into the rail slot.



3. Retighten the side locking plate nut by turning it clockwise until snug or to 501n-lb using a torque wrench equipped with a 5/8" socket.



## **POSITION BIDIRECTIONAL FOLDING**

1. Push down the posi-lock push-button until your locking lugs disengage, allowing you to rotate the bipod leg to another position.



2. The locking Lugh automatically locks at each of the five folding positions.



## LEG EXTENSION HEIGHT ADJUSTMENT

1. To unlock the bipod leg extension for height adjustment, turn its locking thumbwheel counterclockwise until it stops



2. Pull down the footpad to increase the length of the leg extension. Note that the leg extension is under spring tension as it is designed to automatically retract. The leg extension is keyed and once at the desired length is secured in place by turning back the locking thumbwheel clockwise until it stops.



3. To automatically retract the leg extension, unlock the locking thumbwheel first and then press the release tab above it down.



## **55° TILT TENSION ADJUSTMENT**

1 Turning the tilt tension adjustment lever to the right decreases tilt tension.



2. Turning the tilt tension adjustment lever to the left increases tilt tension.



### **35° PANNING TENSION ADJUSTMENT**

1. Rotating the panning tension adjustment lever completely forward decreases panning tension.





2. Rotating the panning tension adjustment lever completely rearward increases panning tension.



## **The Best Never Rest Warranty – Lifetime**

Leapers, Inc. warrants that all UTG & UTG PRO products conform to published specifications and are free from defects in material and workmanship. We will repair or replace defective products for the duration of the product's life span. Our dedicated and professional in-house customer service team will go above and beyond to make things right and provide the best-in-class customer service experience you expect to receive. Our warranty does not extend to products damaged from misuse, accidental damage, negligence, natural disasters/accidents, or unauthorized repair or alteration.

For warranty service, please submit your Inquiry by visiting our customer service page on our website at [www.leapers.com](http://www.leapers.com) or give us a call at 734-542-1500. A Return Authorization Number (RMA) must be assigned before returning any products for warranty service.

## **Documents / Resources**



**[UTG BIG BORE Full Stability BIPOD](#)** [pdf] User Manual  
UTG, BIG BORE, BIPOD, TL-BFS001

