



V I V O CANDY-DSPY3 3 Tray Acrylic Display Case Instruction Manual

[Home](#) » [V I V O](#) » V I V O CANDY-DSPY3 3 Tray Acrylic Display Case Instruction Manual 

Contents

- [1 V I V O CANDY-DSPY3 3 Tray Acrylic Display Case](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 PACKAGE CONTENTS](#)
- [5 ASSEMBLY STEPS](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)
- [7 Related Posts](#)



V I V O CANDY-DSPY3 3 Tray Acrylic Display Case



Product Information

The 3 Tray Acrylic Display Case is a product that is used to display items such as candies, jewelry, and other small items. The product is made of acrylic material and comes with different panels, trays, screws, lock washers, nuts, and handles for assembly. The product has a weight capacity of 8.8lbs (4kg) and should not be exceeded to avoid serious injury.

The product comes with an instruction manual that provides all the necessary information and steps to assemble the display case.

In case of any issues or defects, customers can contact the support team through the contact details provided in the manual.

Product Usage Instructions

1. Ensure that all the package contents are available before assembling the product.
2. Use an adjustable wrench and Phillips screwdriver to assemble the product.
3. Flip the display case over and align the Top Panel with the pre-drilled holes. Insert M5x15 Screws into the pre-drilled hole and then slide Lock Washers onto M5x15 Screws and secure with M5 Nuts. Gently tighten with an adjustable wrench until the nut is snug. Do not over tighten.
4. Place Front Panel on the angled front edge of the display case and insert M5x15 Screws into the pre-drilled holes and then slide Lock Washers onto M5x15 Screws and secure with M5 Nuts. Gently tighten with an adjustable wrench until the nut is snug. Do not over tighten.
5. Find the pre-drilled holes on Left Side Panel and Right Side Panel, then line up Handles with the holes. Secure Handles using ST5x18 Screws.
6. After the case is assembled, check that all parts are correctly aligned and that M5 Nuts are secure.
7. Slide Trays into the grooves inside the display case.
8. The Display case is now ready for use.

WARNING: IMPORTANT SAFETY INFORMATION


READ AND FOLLOW ALL SAFETY REQUIREMENTS

KEEP THIS MANUAL IN A SAFE AND DRY PLACE FOR FUTURE REFERENCE

If you do not understand these directions, or if you have any doubts about the safety of the installation, please call

a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual and do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly or inappropriate use.

PACKAGE CONTENTS

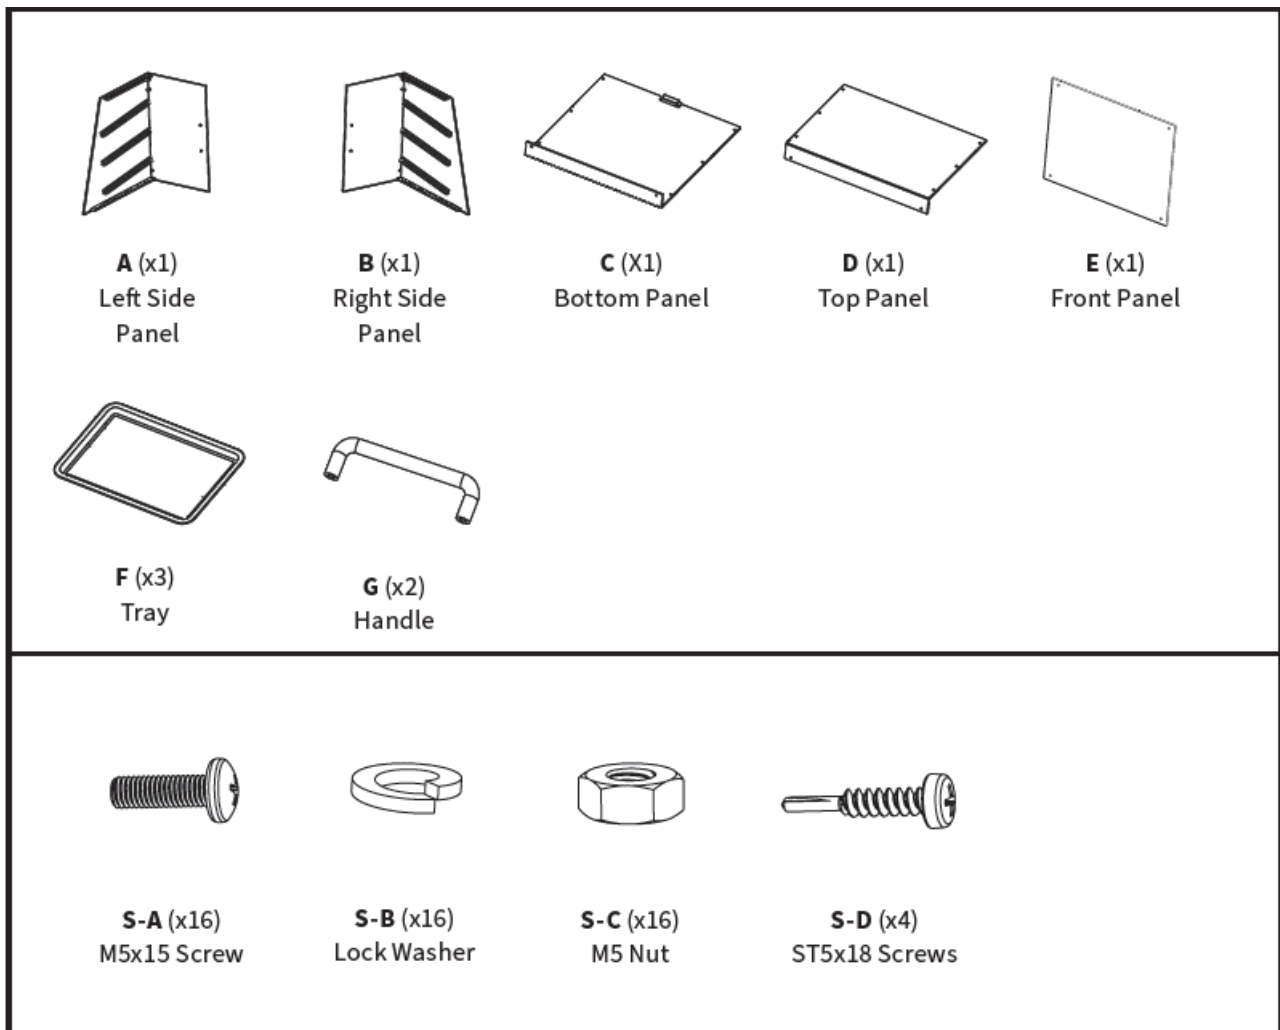


WARNING: CHOKING HAZARD

SMALL PARTS – NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.
DO NOT EXCEED WEIGHT CAPACITY. Failure to do so may result in serious injury.

ASSEMBLY STEPS


• STEP 1

Place Left Side Panel (A) and Right Side Panel (B) upside down so the interior grooves face each other and the case's shorter side is on the bottom. Place Bottom Panel (C) on top of the two side panels. The bent side will be at the front of the case and the magnet will be at the back of the case. Align the pre-drilled holes and insert M5x15 Screws (S-A) into the pre-drilled holes and then slide Lock Washers (S-B) onto M5x15 Screws (S-A) and secure with M5 Nuts (S-C). Gently tighten with an adjustable wrench until the nut is snug. Do not over tighten.

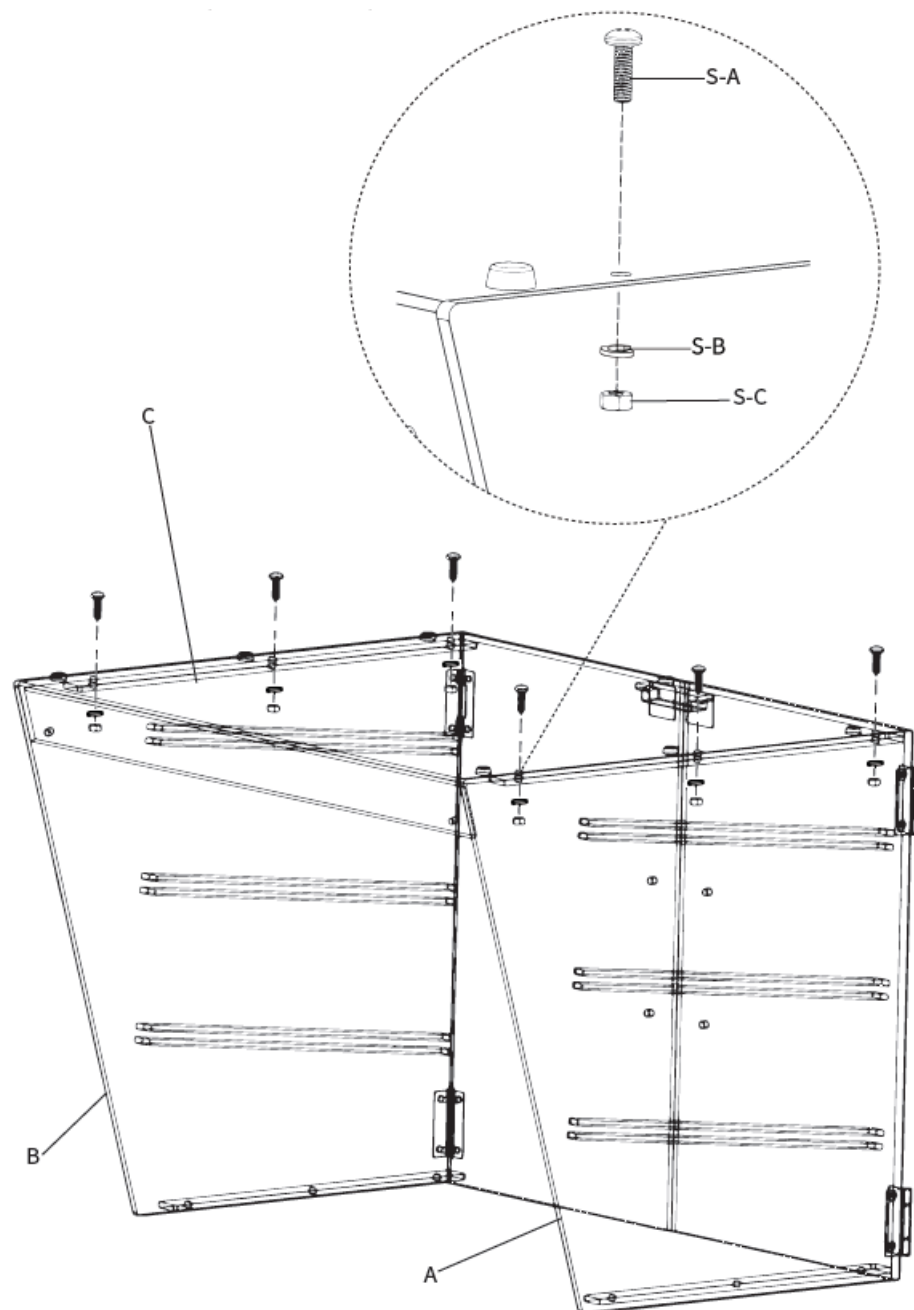


- **STEP 2**

Flip the display case over and align Top Panel (D) with the pre-drilled holes. The bent side of this piece will be at the front of the case. Insert M5x15 Screws (S-A) into the pre-drilled hole and then slide Lock Washers (S-B) onto M5x15 Screws (S-A) and secure with M5 Nuts (S-C). Gently tighten with an adjustable wrench until the nut is snug. Do not over tighten.

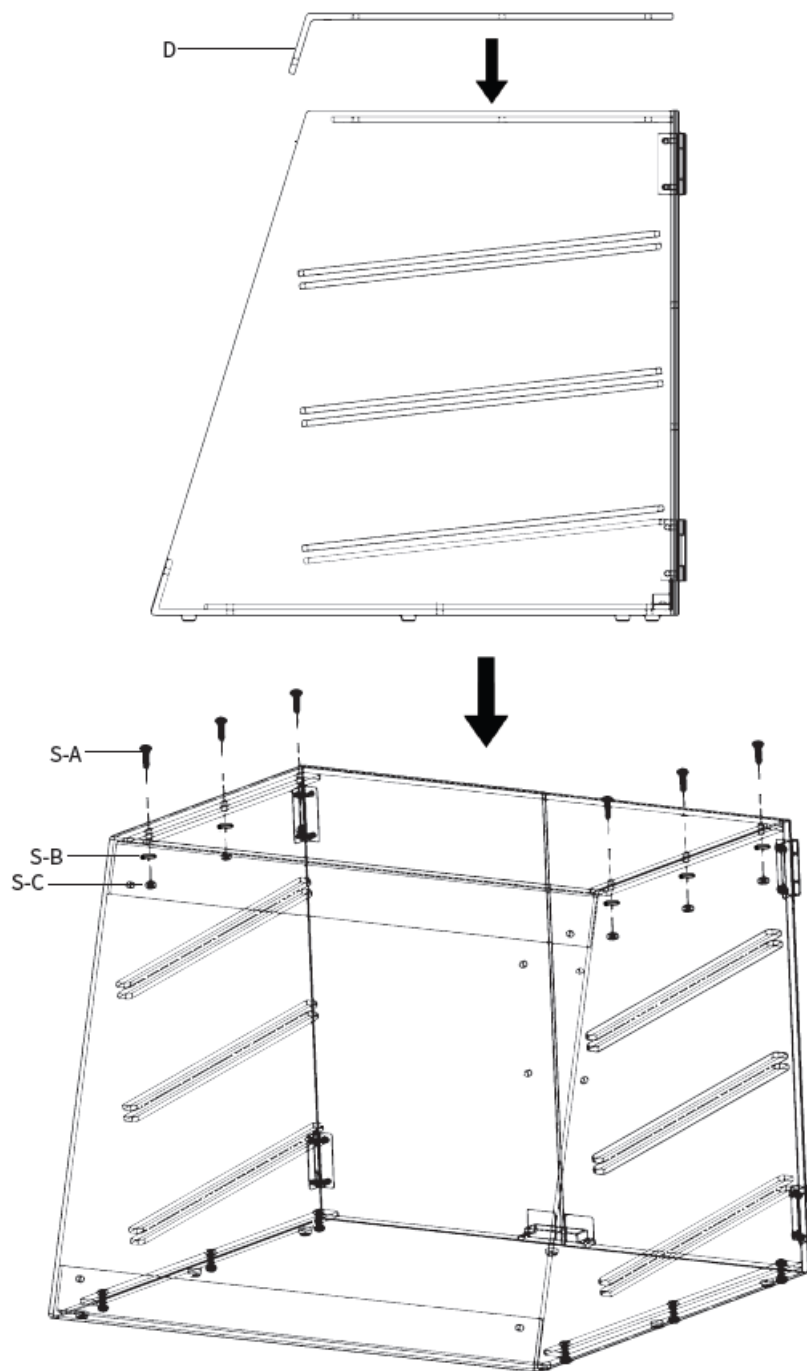


- **STEP 3**

Place Front Panel (E) on the angled front edge of the display case and insert M5x15 Screws (S-A) into the pre-drilled holes and then slide Lock Washers (S-B) onto M5x15 Screws (S-A) and secure with M5 Nuts (S-C). Gently tighten with an adjustable wrench until the nut is snug. Do not over tighten.

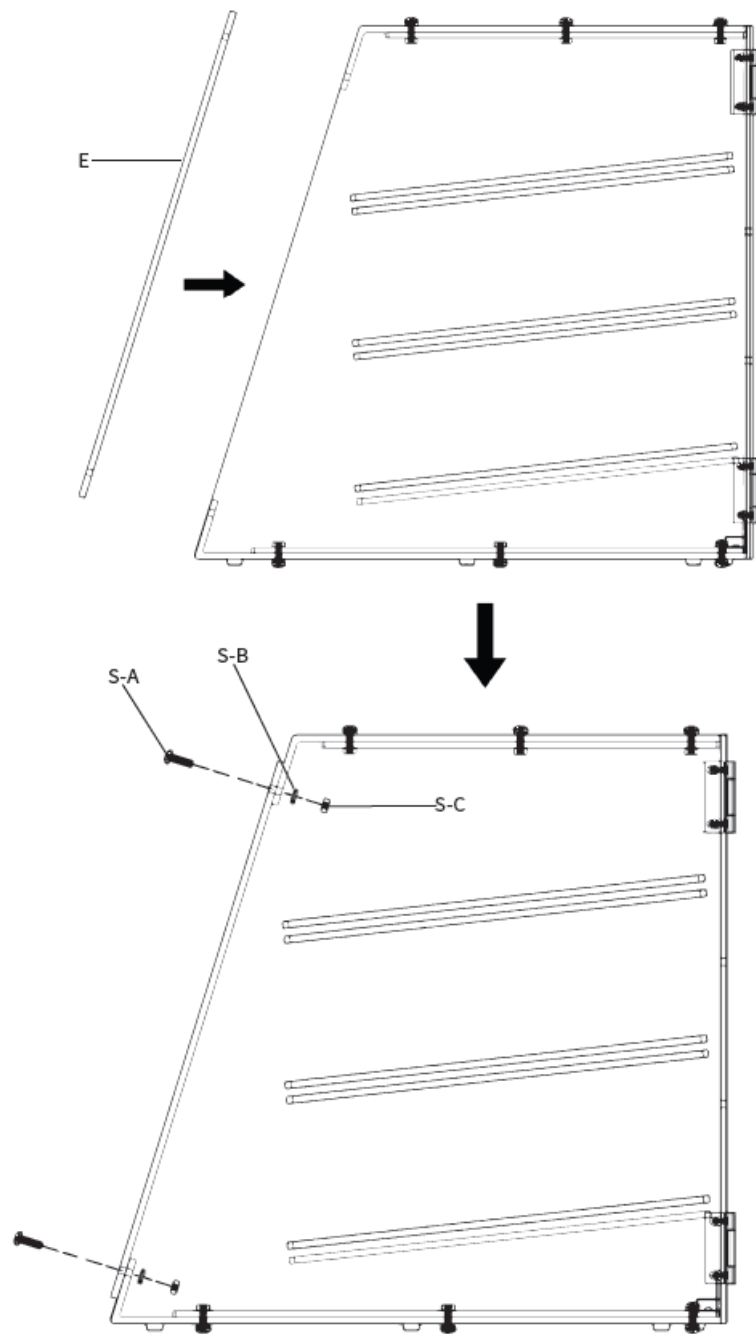


- **STEP 4**

Find the pre-drilled holes on Left Side Panel (A) and Right Side Panel (B), then line up Handles (G) with the holes. Secure Handles (G) using ST5x18 Screws (S-D).

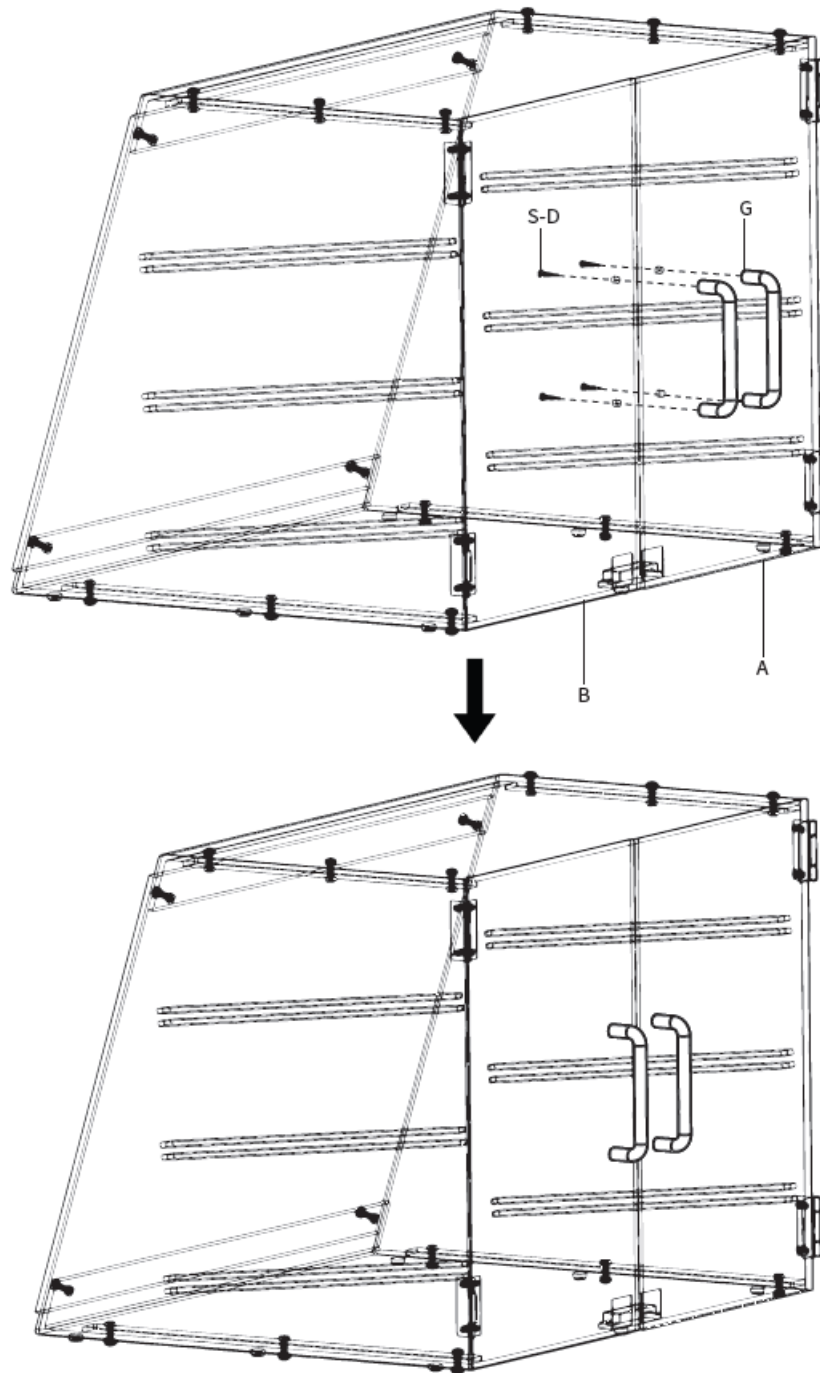

- **STEP 5**

After the case is assembled, check that all parts are correctly aligned and that M5 Nuts (S-C) are secure. Slide Trays (F) into the grooves inside the display case. The Display case is now ready for use.

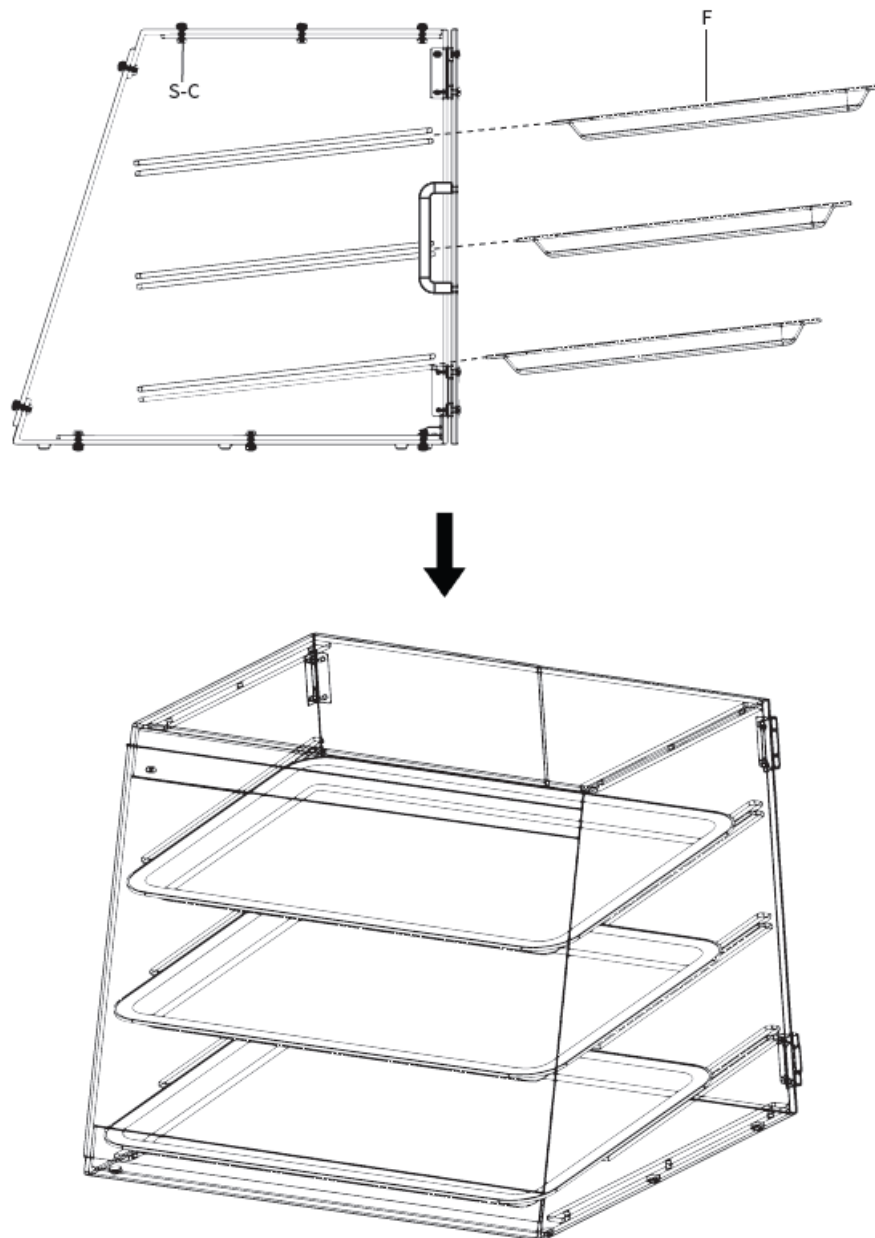

Open Monday – Friday 7:00am – 7:00pm CST,



our dedicated support team can offer immediate assistance with rapid response times. If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.

309-278-5303




www.vivo-us.com

help@vivo-us.com

Documents / Resources

 <p>3 Tray Acrylic Display Case Instruction Manual</p>  <p>3 Tray Acrylic Display Case</p> <p>Download the manual for the 3 Tray Acrylic Display Case, Acrylic Display Case, Display Case, Case</p> <p>PDF Manual (3.5 MB)</p> <p>Download Manual</p>	<p>V I V O CANDY-DSPY3 3 Tray Acrylic Display Case [pdf] Instruction Manual</p> <p>CANDY-DSPY3 3 Tray Acrylic Display Case, CANDY-DSPY3, 3 Tray Acrylic Display Case, Acrylic Display Case, Display Case, Case</p>
--	---

References

-  [Register a .US.COM domain today!](#)
-  [VIVO - Desks, Monitor Mounting, and More Home & Office Solutions – VIVO - desk solutions, screen mounting, and more](#)
-  [3 Tray Acrylic Display Case – VIVO - desk solutions, screen mounting, and more](#)

Manuals+.