




V I V O DESK-TOP72-30B 71 x 30 Electric Desk with Push Button Memory Controller Instruction Manual

[Home](#) » [V I V O](#) » V I V O DESK-TOP72-30B 71 x 30 Electric Desk with Push Button Memory Controller Instruction Manual 



Black 72" x 30" Table Top
Instruction Manual

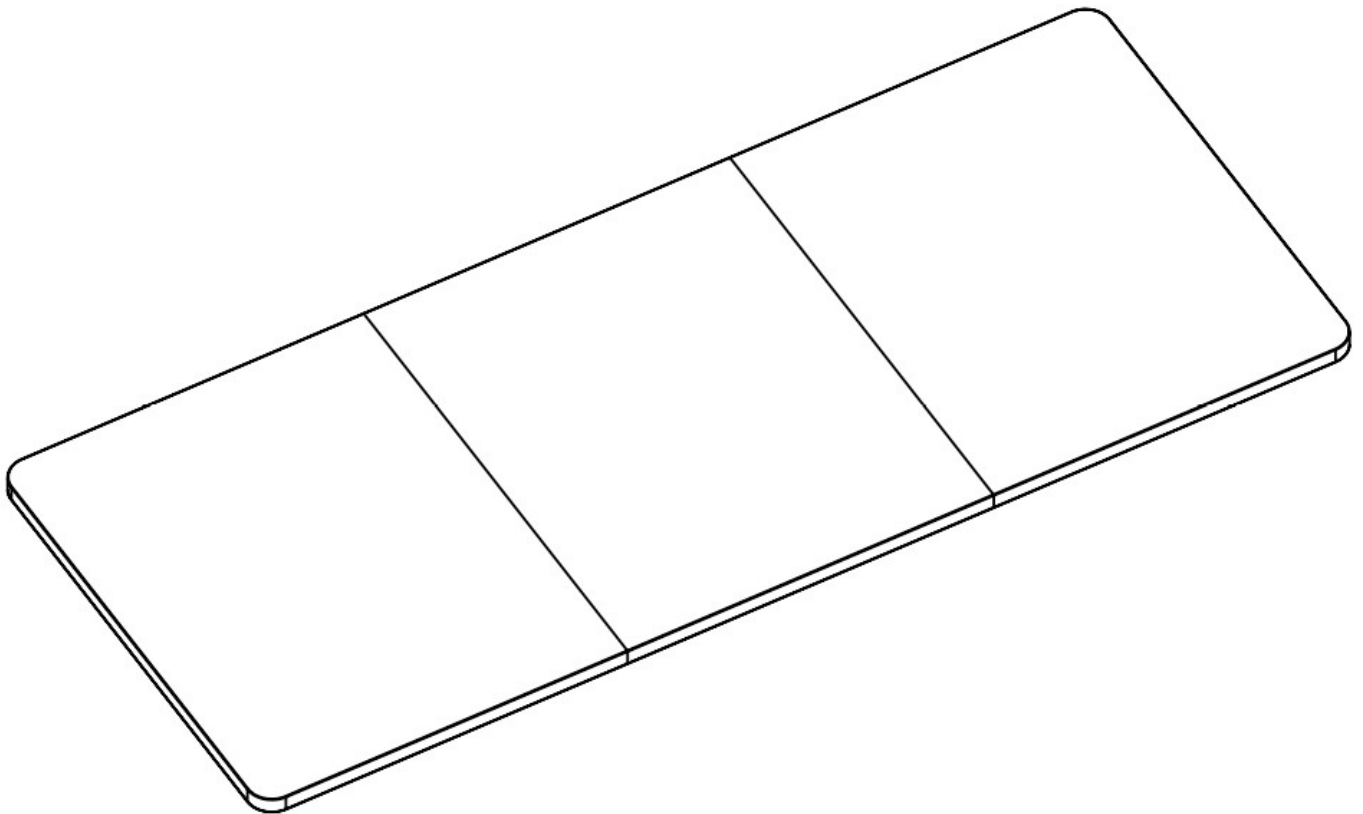

Contents

- 1 DESK-TOP72-30B 71 x 30 Electric Desk with Push Button Memory Controller
- 2 PACKAGE CONTENTS
- 3 ASSEMBLY STEPS
- 4 Documents / Resources
 - 4.1 References

DESK-TOP72-30B 71 x 30 Electric Desk with Push Button Memory Controller




SKU: DESK-TOP72-30B

Scan the QR code with your mobile device or follow the link for helpful videos and specifications related to this product.



<https://vivo-us.com/products/desk-top72-30b>

GET IN TOUCH | Monday-Friday from 7:00am-7:00pm CST

	help@vivo-us.com
	www.vivo-us.com Chat live with an agent!
	309-278-5303



WARNING!


If you do not understand these directions, or if you have any doubts about the safety of the installation, please call a qualified technician. Check carefully to make sure there are no missing or defective parts. Improper installation may cause damage or serious injury. Do not use this product for any purpose that is not explicitly specified in this manual and do not exceed weight capacity. We cannot be liable for damage or injury caused by improper mounting, incorrect assembly, or inappropriate use.



WARNING: CHOKING HAZARD

SMALL PARTS – NOT FOR CHILDREN UNDER 3 YEARS. ADULT SUPERVISION IS REQUIRED.


PACKAGE CONTENTS

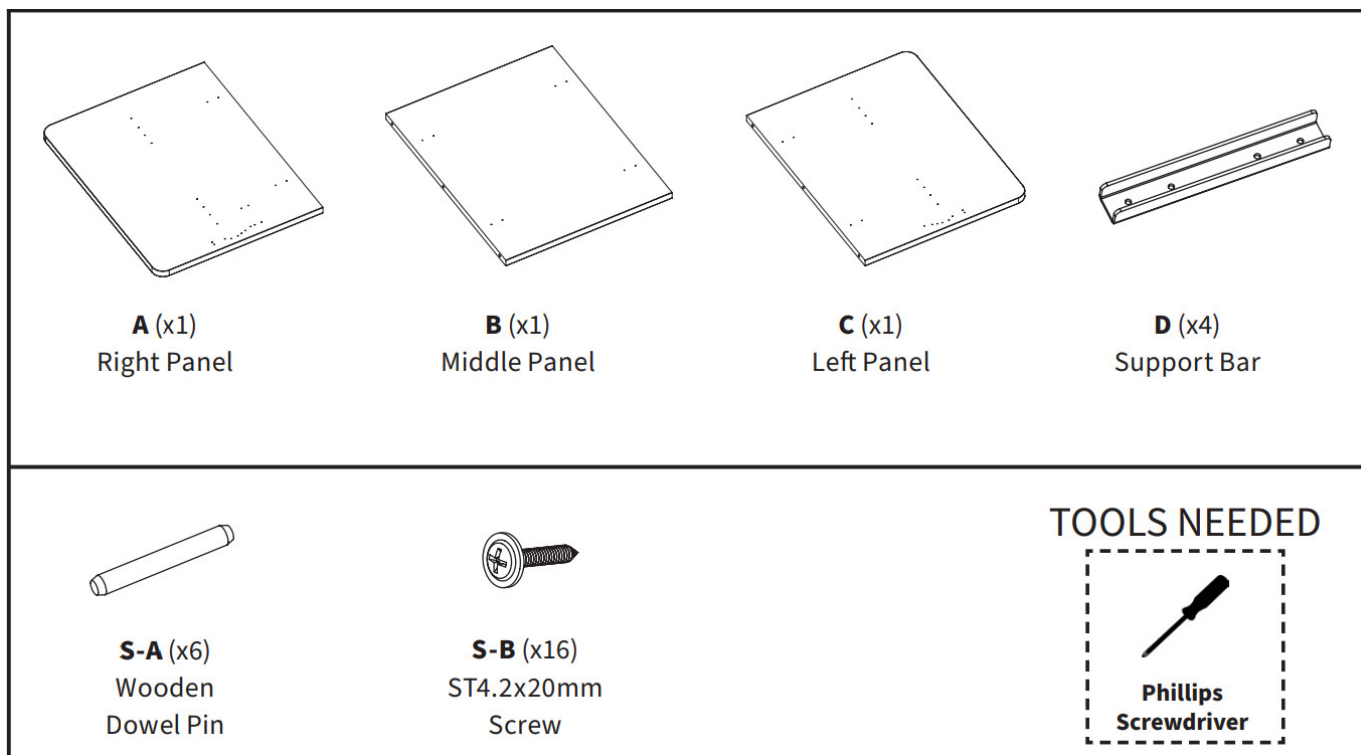

ASSEMBLY STEPS


STEP 1

Place Desktop Panels (A, B, C) upside down on a protective surface and insert Wooden Dowel Pins (S-A) into Middle Panel (B). Connect Left Panel (A) and Right Panel (C) to Middle Panel (B) using Wooden Dowel Pins (S-A).

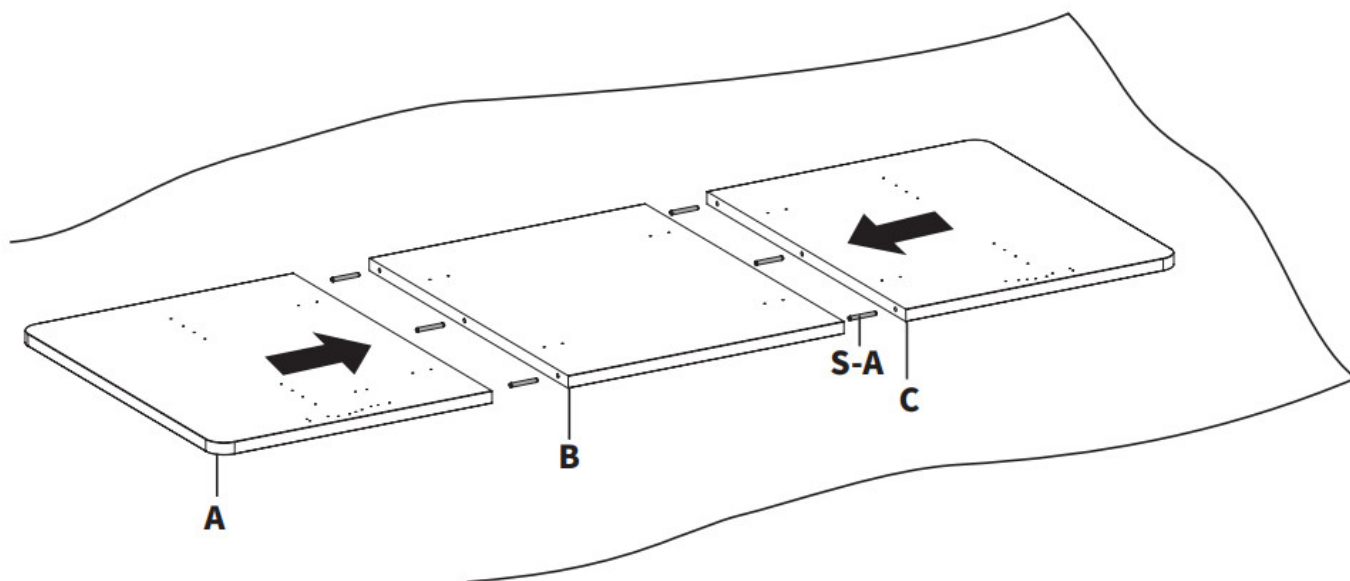

STEP 2


Attach Support Bars (D) to predrilled holes in desktop assembly using ST4.2x20mm Screws (S-B) and a phillips screwdriver.

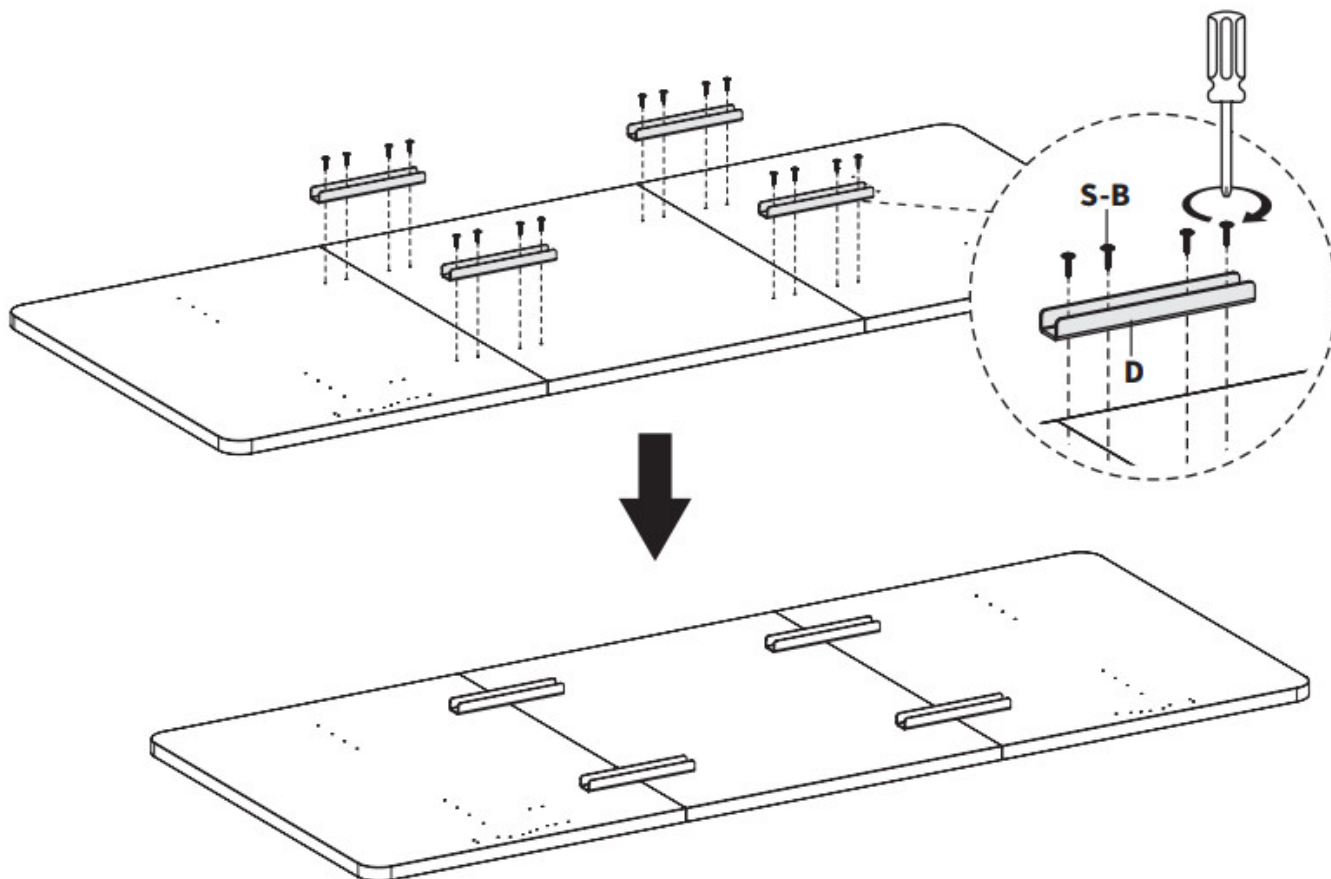

STEP 3

Place desk frame upside down on the desktop assembly. Adjust frame width to match desktop mounting holes, and secure frame to desktop assembly using hardware provided in your desk frame kit. For VIVO frames, pre-drilled holes have been included for most control panels and crank handles.

NOTE: Holes for some control panels and cranks are not pre-drilled. In this case, you must drill your own.

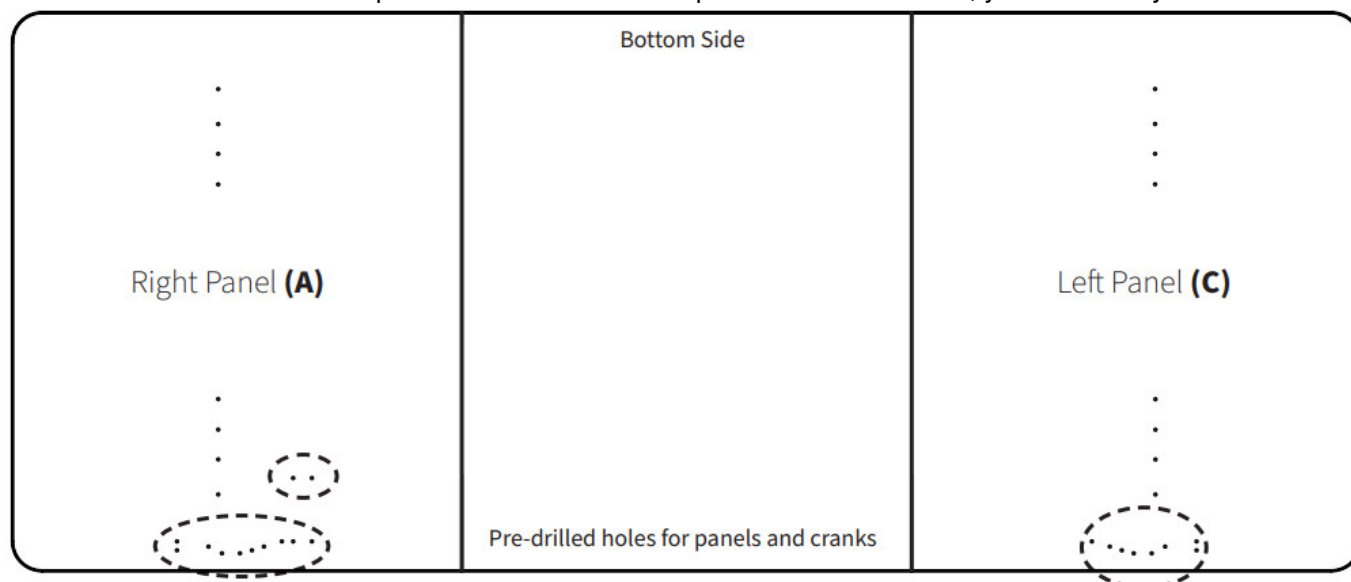

Love your new VIVO setup and want to share?




Tag us in your photo! @vivo_us

LAST UPDATED: 10/04/2022

REV3

Open Monday – Friday 7:00am – 7:00pm CST,
our dedicated support team can offer immediate assistance with rapid response times.


 

If any parts are received damaged or defective, please contact us. We are happy to replace parts to ensure you have a fully functioning product.

 309-278-5303	AVG. RESOLUTION TIME (within office hrs): 5M 4S
 www.vivo-us.com Chat live with an agent!	AVG. RESOLUTION TIME (within office hrs): < 15 M
 help@vivo-us.com	AVG. RESPONSE TIME (within office hrs): 1HR 8M – 23% within < 15m – 38% within < 30m – 61% within < 1hr – 83% within < 2hr – 92% within < 3hr



FOR MORE VIVO PRODUCTS, CHECK OUT OUR WEBSITE AT: www.vivo-us.com

Documents / Resources

  	V I V O DESK-TOP72-30B 71 x 30 Electric Desk with Push Button Memory Controller [pdf] Instruction Manual DESK-TOP72-30B 71 x 30 Electric Desk with Push Button Memory Controller, DESK-TOP72-30 B, 71 x 30 Electric Desk with Push Button Memory Controller, Push Button Memory Controller, Memory Controller
--	---

References

- [🌐 Register a .US.COM domain today!](#)
- [🕒 VIVO - Desks, Monitor Mounting, and More Home & Office Solutions – VIVO - desk solutions, screen mounting, and more](#)
- [🕒 71" x 30" Table Top – VIVO - desk solutions, screen mounting, and more](#)