

V-TAC

**VT-6133 Bluetooth
Speaker with
Touch Button**



V-TAC VT-6133 Bluetooth Speaker with Touch Button Instruction Manual

[Home](#) » [V TAC](#) » V-TAC VT-6133 Bluetooth Speaker with Touch Button Instruction Manual 

Contents

- [1 V-TAC VT-6133 Bluetooth Speaker with Touch Button](#)
- [2 GETTING STARTED](#)
- [3 PACKAGE CONTENTS](#)
- [4 FEATURES](#)
- [5 SAFETY INSTRUCTIONS](#)
- [6 SPECIFICATIONS](#)
- [7 DESCRIPTION OF PARTS](#)
- [8 CHARGING THE SPEAKER](#)
- [9 TURNING ON/OFF THE SPEAKER](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

V-TAC

V-TAC VT-6133 Bluetooth Speaker with Touch Button



Thank you for selecting and buying V-TAC Products. V-TAC will serve you the best. Please read these instructions carefully & keep this user manual handy for future reference. If you have any other queries, please contact our dealer or local vendor from whom you have purchased the product. They are trained and ready to serve you at your best.

MULTI-LANGUAGE MANUAL QR CODE

Please scan the QR code to access the manual in multiple languages.



GETTING STARTED

- Remove the speaker from the box.
- Please retain all packaging until after you have checked and counted all the parts and the contents against the Package Contents list.

PACKAGE CONTENTS

- Bluetooth Speaker (1pc)
- USB Cable (1pc)

- Auxiliary cable (1pc)
- Instruction Manual (1pc)

FEATURES

- Soft Touch Buttons for Smooth Operation with Blue Light.
- Supports TWS function for better sound effect.
- Compatible with wireless products featuring Bluetooth® technology
- AUX Input Function
- Supports TF Card
- Built-in Mic for Hands-Free Calls
- With FM Radio Function
- Micro USB charging cable included
- Operation distance: Up to 10 meters

SAFETY INSTRUCTIONS

- Read these instructions carefully.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings.
- Do not use any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched particularly at plugs.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.

SPECIFICATIONS


- Bluetooth® Version: 5.0
- Wireless Streaming Range Distance: 10 meter
- Speaker output: 5W
- Unit Size: 120x60x230 mm
- Power Input: DC 5V
- Built-In Rechargeable Battery: 3.7V / 1200mAh

NOTE

- Radio frequency band: 2.048G-2.480G
- Radio-frequency power transmitted: 6dB

This marking indicates that this product should not be disposed of with other household wastes.

DESCRIPTION OF PARTS

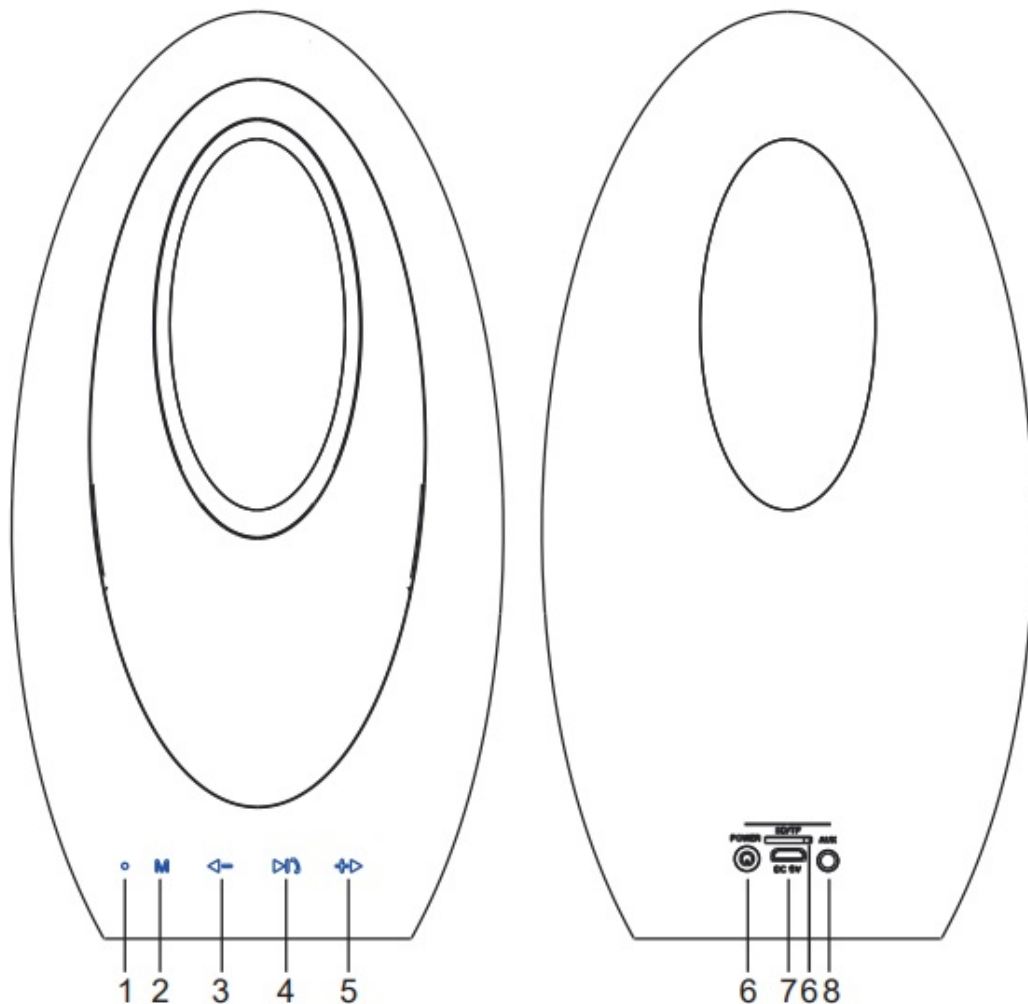

1. LED indicator
2. Mode/TWS button
3. Skip Backward /Volume Decrease – Button
4. ON/OFF/ Play/Pause/Phone Button
5. Skip Forward /Volume Increase + Button
6. ON/OFF button
7. Micro SD (TF) Card Slot
8. Charging Port
9. Auxiliary port

CHARGING THE SPEAKER

The speaker has a built-in rechargeable battery. When the battery is drained out, the speaker turns OFF automatically. Please recharge the battery every time it drains out. Plug the Micro USB end of the included USB charging cable into the charging port.

Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged. It takes 3 – 4 hours to fully charge the speaker. Once the speaker is fully charged, the LED Light will turn. OFF. It is recommended to fully charge the speaker before its first use.

TURNING ON/OFF THE SPEAKER

Before Turning ON the speaker, please ensure that it is fully charged. Press the ON/OFF button to turn the device

ON/OFF.

TWS FUNCTION

- It is possible to use two copies of this speaker, paired together, to benefit from a stereo sound.
- To do this, turn on both speakers, then press the M button on one of them once.
- The two speakers will connect.
- You can then pair your device with the stereo unit by following the procedure below.
- Ensure that both speakers are spaced less than 10 meters

CONNECT USING BLUETOOTH TECHNOLOGY

- Turn on the ON/OFF button. You would hear an indication tone, indicating that you are now in Bluetooth Pairing Mode.
- Activate the Bluetooth function on your source device (Mobile Phone or Tablet).
- Please refer to the manufacturer's instructions for instructions on enabling Bluetooth on your device.
- Search for available Bluetooth devices and you will find "SKU-7725" – Pair it with this device.
- If required, enter the password "0000" to pair with the device.
- Once paired successfully, you will hear another indication tone.
- You can now stream wireless music on your speaker through your source device.

(Note: Battery life & charging time may vary based on usage, types of devices connected & wireless distance.)

TALKING USING THE BLUETOOTH SPEAKER

Please ensure that your cell phone is paired with the Bluetooth Speaker to use the below functions.

FUNCTION	OPERATION	BUTTON
Answer Incoming Call	Incoming Call	Press the Phone button once to answer an incoming call.
End Call	Incoming Call	After your phone conversation, short press the Phone button
Volume Increase	During a call	Long press on the + button will increase the volume
Volume Decrease	During a call	Long press on the – button will decrease the volume
Redial last number	Standby mode and connected to a device	Short press the Phone button twice

LISTENING TO MUSIC WIRELESSLY

Please ensure that your device (iPhone, Tablet, or Other Smart Phone) is paired with a Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

FUNCTION	OPERATION	BUTTON
Increase Volume	Playing music	Press and hold the + button to increase the volume
Decrease Volume	Playing music	Press and hold the – button to decrease the volume
Pause	Pausing	Short press the Play/Pause button will pause the music
Play	Playing music	Short press the Play/Pause button will resume the music
Previous track	Playing music	Short press the Skip Backward button will return you to the previous track
Next track	Playing music	Short press the Skip Forward button will take you to the next track

(Note: The above functions only can be used in Bluetooth mode. An indication tone will alert you when the volume is adjusted to the maximum level. In Aux mode, besides the volume increase/decrease, you will need to control through your source device.)

STREAM MUSIC FROM MICRO SD (TF) CARD

- Turn ON the speaker.
- Insert the Micro SD (TF) Card into the Micro SD (TF) Card Slot of the speaker respectively and Blue
- The LED indicator would flash.
- The speaker would automatically start playing songs from the Micro SD (TF) Card.
- To Skip Track Forward – Short press the button.
- To Skip Track Backwards – Short press the button.
- To Pause the Track – Short press the Play/Pause button
- To Play the Track – Short press the Play/Pause button.
- Long press + to increase the volume or – to decrease the volume.

Note: Micro SD Card not included

LISTENING TO FM RADIO

- Turn ON the speaker.
- Insert the Auxiliary cable into the Auxiliary port, and leave the other end of the cable open. Auxiliary cable

serves as FM Antenna while in FM Radio mode.

- Press the Mode button shift to FM radio mode and the Blue LED indicator will flash.
- To AUTO-SCAN the stations, press the Play/Pause button once.
- It will take a few minutes to search all the stations. Once all the stations are scanned, they get registered in memory, automatically.
- Press or skip selected stations.
- Long press + to increase the volume or – to decrease the volume.

PLAY MUSIC THROUGH “AUXILIARY” MODE

- Insert one end of the Auxiliary cable (included) into the Auxiliary port and the other end into the Audio device (such as phone / MP3 Player/computer/tablet /Etc.).
- Select your favorite song at the source device to play.
- Long press the Volume Increase button to increase the volume or the Volume Decrease Button to decrease the volume.
- **Note:** Play, Pause, Skip Forward, Skip Backward, etc. can only be controlled through the source devices, while playing music in Auxiliary mode.

LED LIGHTS

- Turn ON the speaker.
- The blue LED light will stay on.
- Turn off the speaker and the Blue LED light will be gone out.

TIPS!

When the speaker is not in use, turn it OFF to save the battery power. We V-TAC Europa Ltd declare that this equipment complies with the essential requirement and other relevant provisions of Directive 2014/53/EU and Directive 2011/65/EU Declaration of conformity can be obtained from the below <https://www.vtacexports.com/media/ftp-upload/certificates/DOC/EU/VT-6133-DOC-BLUETOOTH%20SPEAKER-EU.pdf>
Bulgaria, Plovdiv 4000. 9B, Lyuben Karavelov blvd. VAT Number: BG201233995 manager@v-tac.eu.
TEL:+359888712879.


IMPORTANT NOTES

- This product contains battery type “Secondary” (rechargeable).
- Electrical and electronic equipment that has become waste is known as old equipment/devices. Old devices must not be disposed of with other household waste.
- Owners of old devices at the end of their service life must return the device by taking them to the collection points set up by public waste disposal authorities or distributors. This return does not entail any costs for you.
- Owners of old devices must remove accessible batteries / rechargeable batteries as well as non-destructively removable lamps from the old device before return.
- This does not apply if old devices are being prepared for reuse with the participation of a public law firm.
- Battery removal warning: The battery contained in this product must be removed only by professional personnel. The battery must never be removed by the end-user, if not removed correctly it could damage the

battery which could cause a fire.

- Batteries removed from an old electronic device should be disposed of separately. This return of the battery does not entail any costs for you and the user is obliged to return the battery.
- Please make sure that this product is not powered on when removing the battery. Fire hazard! Avoid short-circuiting the contacts of a detached battery. Do not incinerate the battery. Please handle the battery with Caution!
- If electrical appliances or batteries are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.
- The symbol of “Crossed rubbish bins” indicates that this product should not be disposed of with other household wastes and must be collected separately from unsorted municipal waste at the end of its service life.
- Please use the link below to view the online directory of the collection and return points: <https://www.ear-system.de/ear-verzeichnis/sammel-und-ruecknahmestellen>

Documents / Resources

	<p>V-TAC VT-6133 Bluetooth Speaker with Touch Button [pdf] Instruction Manual VT-6133, SKU 7725, SKU 7726, VT-6133 Bluetooth Speaker with Touch Button, VT-6133, Bluetooth Speaker with Touch Button, Speaker with Touch Button, Touch Button, Button</p>
--	---

References

- tac.eu
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.