

VALLEY 1A-FL120 Game Processing Table User Manual

Home » VALLEY » VALLEY 1A-FL120 Game Processing Table User Manual



FOLDING FISH/GAME PROCESSING STATION
GAME PROCESSING TABLE
SKU#:1A-FL120



For missing parts only – do not return to store. Please call 888-380-7953.

SETUP INSTRUCTIONS

Contents

- 1 Step 1: Station Setup
- 2 Step 2: Drain Assembly
- 3 Step 3: Faucet Assembly and Hose

Attachment

- 4 Step 4: Cleaning and Storage
- 5 Documents / Resources
- **6 Related Posts**

Step 1: Station Setup

- 1. Remove station from the box and position it sink-side down on the ground so that the support legs are accessible.
- 2. Find the outermost leg assembly, and pull outward from the rubber foot end. The leg assembly will unfold until it is at a right angle to the station.
- 3. You will find two support struts where the leg assembly meets the table. Make sure that both are locked completely straight to ensure the stability of the station.
- 4. Repeat this same process with the innermost leg assembly.
- 5. Once complete, flip the entire station upside down so that the both sets of feet are resting on the ground and the sink side is now facing upward.



Step 2: Drain Assembly



This assembly consists of 9 parts: drain plug, drain screen, two large black rubber washers, 1 smaller black rubber washer, screw, nut, sink drain fitting, and drain hose.

- 1. Place one of the large black washers on the lip, inside the drain hole.
- 2. Then, place the drain screen in the hole on top of the washer.
- 3. Next, place the second large rubber washer on the lip inside the wide end of the sink drain fitting.
- 4. Place the nut into the recess in narrow end of the fitting.

- 5. Use your finger to hold the nut in place. Position the fitting, wide end up, under the sink hole so that the lower portion of the drain screen rests in the fitting.
- 6. Use your free hand to insert the screw down through the center hole of the drain screen until it meets the nut.
- 7. Hand-tighten the screw through the nut as far as possible, then use a regular screwdriver to snug down.
- 8. Find the female threaded the end of the drain hose and insert the smaller black washer so that it rests on the interior lip.
- 9. Screw the threaded end onto the sink drain fitting and tighten.
- 10. The hose can then be extended and bent to direct runoff flow in the desired direction.
- 11. Place the drain plug in the drain screen to hold water in the sink if needed



Step 3: Faucet Assembly and Hose Attachment



This assembly consists of 4 parts: faucet, faucet nut, extension hose, and compression fitting.

- 1. Begin by inserting the threaded male end of the faucet down through the faucet hole in the tabletop.
- 2. Thread the faucet nut onto the threaded end of the faucet underneath the table. The hexagonal side of the nut should be facing the ground.
- 3. Tighten the nut until the upper portion of the faucet is snug and flush to the tabletop.
- 4. Next, thread the female end of the extension hose onto the excess threading at the end of the faucet under the table. Screw on until tight.
- 5. If you are using a standard garden hose with a brass fitting, insert the fitting into the female end of the extension hose and tighten.
- 6. If you are using a hose with no fitting, insert the threaded end of the compression fitting into the female end of the extension hose and tighten. Insert the barbed end of the compression fitting into the unfinished end of the hose. Apply pressure and push in until secure. Standard, plastic cable ties can be applied around the hose to further secure the connection (not included).




Step 4: Cleaning and Storage

Spray tabletop with water and use a soft bristle brush to whisk away minimal fish or game remains. Disassemble the drain and rinse to ensure that it is clear of debris. Allow to dry thoroughly before storage. To extend the life of this product, it is recommended that it be stored in a dry location.



Documents / Resources

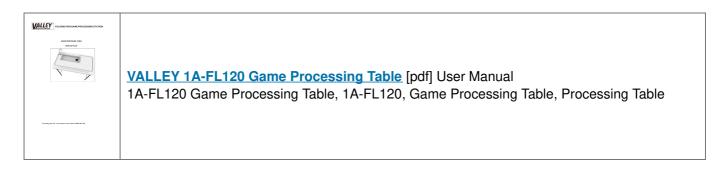

Manuals+,