



VALORE 2-Way Connectivity Wireless Keyboard with Touchpad AC132 User Manual

[Home](#) » [Valore](#) » VALORE 2-Way Connectivity Wireless Keyboard with Touchpad AC132 User Manual 

VALORE

Valore 2-Way Connectivity Wireless Keyboard with Touchpad (AC132) User Manual

Thank you for purchasing the Valore 2-Way Connectivity Wireless Keyboard with Touchpad (AC132).

- Freely roam around with wireless connectivity of up to 10m
- Compact, space-saving design with an integrated touchpad
- Built-in multimedia hotkeys

Important: Please read the user manual thoroughly before using your Wireless Keyboard.

Contents

- [1 Specifications:](#)
- [2 Package Contents:](#)
- [3 UNDERSTANDING THE PRODUCT](#)
- [4 START USING A WIRELESS KEYBOARD](#)
- [5 TECHNICAL SUPPORT & WARRANTY](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)

Specifications:

- Transmission: Up to 10m

- Connectivity: 2.4GHz wireless & Bluetooth
- Battery type: AAA x 2 (not included)
- Key force: 62 ± 8gm
- Key lifespan: 5 million
- System supports:
 - ^Windows XP and above
 - Android
 - Mac OS X 10 and above

Material: ABS

Dimensions (L x W x D): 367 x 121 x 19mm Weight: 332g

Package Contents:

- 2-way connectivity wireless keyboard with touchpad
- Wireless receiver

^Touchpad is only available for Win XP and above

UNDERSTANDING THE PRODUCT



START USING A WIRELESS KEYBOARD

1. How to connect

Install two AAA batteries and turn on the power switch on the upper side of the keyboard.

a) 2.4HG

Plug the USB dongle into the PC USB port the red power light on the right side will be on, while the blue Cap light will flash quickly twice then turn off. The 2.4g link will be successful.

b) Bluetooth

1. Press any of the three groups: FN+ (2, 3, 4) for 5 seconds, the blue Cap light will flash slowly and the keyboard will enter the Bluetooth pairing mode.
2. Open the Bluetooth 'Settings' menu on a tablet, laptop, smartphone or other Bluetooth device then search Bluetooth keyboard.
3. Find the Bluetooth keyboard name "Valore AC132" and select it to connect When the Bluetooth keyboard is

successfully connected to your device, the blue Cap light on the right side will flash twice and turn off.

2. 2.4G and Bluetooth mode conversion

Press FN+1 or FN+2, FN+3 or FN+4 for 1 second, the red power light on the right side will be on, and the blue Cap light will flash twice before turning off, successfully switching to 2.4g or Bluetooth mode. For example, press the FN+1 key for one second, the red power light on the right side will be on, and the blue Cap light will flash twice and then turn off, successfully switching to 2.4g mode. Press any of the three groups FN+ (2, 3, 4) for one second, the red power light on the right side will be on, and the blue Cap light will flash twice and then turn off, successfully switching to Bluetooth mode.

3. Indicators

a) Low power reminder:

When the blue Cap light flashes quickly, it is to prompts you to replace the battery.

b) Power saving mode:

When the keyboard is out of use for 15 minutes, it will go into sleep mode.












Press any key to activate the keyboard.

c) Only one device can be actively paired at a time.


d) After the first pairing, your device will automatically connect to the keyboard when it is turned on.











e) If the connection fails, remove the pairing record from your device and repair it as described above.





4. Multimedia keys

FN+	On Windows/10S	FN+	On Windows/10S
Media	Media		Volume down
	Volume up		Mute
	Previous track		Next track
	Play/Pause		Stop
	Internet		Mailbox
	My computer		Favorite

5. Touch 5.0 Gesture function

Finger action	Win10 finger function	Finger gestures	Remark
Single finger tapping	Left key of mouse		

Single finger slide	Move the cursor		
Single finger drag	The left mouse key selects the target and drags it		
Two-finger tap	Right key of mouse		
Move both fingers vertically	vertical scrolling		
Move both fingers horizontally	horizontal scrolling		
Two fingers move outward in a straight line	magnification		Ctrl+The scroll rolls forward
Two fingers move inward in a straight line	minification		Ctrl+The scroll rolls backward
Three-finger tap	Open the Cortana		WIN+S
Slide three fingers forward	Open the task Explorer window		WIN+TAB
Slide three fingers backward	display desktop		WIN+D

Slide three fingers to the left	Switch the active window to left		ALT+SHIFT+TAB
Slide three fingers to the right	Switch the active window to right		ALT+TAB
Slide three fingers to the right	Switch the active window to right		ALT+TAB
Four fingers tap	Open the Action Center		WIN+A

TECHNICAL SUPPORT & WARRANTY

- For Technical Support, email us at v.info@valore.sg.
- For Warranty Registration, visit www.valore.sg.

Cautions:

Read all the instructions and warnings carefully prior to using this product.

- Do not store the product in a high-temperature environment.
- Do not place the product near a fire or other excessively hot environments.
- Do not expose the product to moisture or submerge it in liquid. Keep the product dry at all times.
- Do not attempt to charge the product using any other method or connection other than the product's provided charging cable.
- Do not disassemble this product or attempt to repair or modify it in any manner.
- Battery usage by children should be supervised
- Be cautious of excessive drops, bumps, abrasions or other impacts to this product. If there is any damage to the product such as dents, punctures, tears, deformities or corrosion, stop using the product and contact us immediately via email at v.info@valore.sg, or return this product to the store where you have purchased it from.
- If the product produces an abnormal smell, high temperature (low temperature during normal use), discolors or changes shape abnormally, stop using the product and contact us immediately via email at v.info@valore.sg.

DISCLAIMER & TRADEMARKS

All information, trademarks, logos, graphics, and images ("Materials") provided on this user manual are copyrighted or trademarked and are the property of Valore Lifestyle Pte Ltd. Any unauthorized use of any material contained in the instruction manual may violate copyright laws, trademark laws, laws of privacy, and communications statutes. The trademarks, service marks, and logos used and displayed in the Materials are registered and unregistered.

trademarks and service marks of Valore and others. All other registered and unregistered company names,

product names, and marks mentioned herein (“Materials”) are the property of their respective owners and may be trademarks or registered trademarks.

Complies with IMDA Standards DA103331



Inspired by Valore Singapore
For a full range of Valore, products visit www.valore.sg

Documents / Resources

The thumbnail shows the front cover of the user manual. It features the Valore logo at the top, a large stylized 'V' in the center, and a keyboard with a touchpad at the bottom. Text on the cover includes 'Valore 2-Way Connectivity Wireless Keyboard with Touchpad AC132' and 'UNDERSTANDING THE PRODUCT'.	<p>VALORE 2-Way Connectivity Wireless Keyboard with Touchpad AC132 [pdf] User Manual VALORE, 2-Way, Connectivity, Wireless, Keyboard, with, Touchpad, AC132</p>
---	---