



VAN GUARDIAN Alarms System Outperforms Factory Security Systems User Manual

[Home](#) » [VAN GUARDIAN](#) » VAN GUARDIAN Alarms System Outperforms Factory Security Systems User Manual



Contents

- 1 [VAN GUARDIAN Alarms System Outperforms Factory Security Systems](#)
- 2 [Specifications](#)
- 3 [Product Usage Instructions](#)
- 4 [THE REMOTE CONTROL FUNCTION](#)
- 5 [USAGE AND SETTINGS](#)
- 6 [SENSITIVITY ADJUSTMENT](#)
- 7 [REPLACING BATTERIES](#)
- 8 [THE VANGUARDIAN DUAL & SINGLE ALARM](#)
- 9 [FITTING THE ALARM](#)
- 10 [A TYPICAL INSTALLATION](#)
- 11 [FAQ](#)
- 12 [Documents / Resources](#)
 - 12.1 [References](#)



VAN GUARDIAN Alarms System Outperforms Factory Security Systems



Specifications

- **Remote Control Functions:** Arm, Disarm, Manual alarm ON, Door entry/Remote programming button
- **Sensitivity Adjustment Levels:** 7 levels
- **Battery Type:** AAA

Product Usage Instructions

Arm & Disarm Mode Setting:

Press the button on the remote once. The alarm will sound 'beep, beep' then 'beep' after 5 seconds when it is in ARM alert state. When contact or displacement is detected, the alarm will sound a warning for 2 seconds. If the alarm is triggered again within 2-12 seconds, it will alarm for 30 seconds automatically. To stop the alarm or exit ARM mode, press the button on the remote once.

Sensitivity Adjustment:

VANGUARDIAN Alarms have 7 levels of sensitivity adjustment. To adjust sensitivity, PRESS AND HOLD the DISARM button whereby the alarm will sound a beep, beep. The LED indicator on the remote will switch OFF temporarily and back ON. Press the ARM button ONCE to adjust sensitivity levels. Simply adjust 1 or 2 levels down at first to find a balance you are happy with. Once satisfied, press the DISARM button to set the new level.

Replacing Batteries:


- **Alarm:** Replace batteries if performance is notably reduced or if you hear 'Du...Du' when armed.
- **Remote:** Replace batteries when the LED darkens or if you notice the wireless range is shorter. Carefully remove the sealed electronics compartment containing the batteries. Replace with quality AAA batteries and re-assemble.

Fitting The Alarm:

Use the provided removal tool to remove the cover plate. Remove the anchor screws and base. Locate and remove the tabs to power up the electronics. Clean the surface area, leaving 20mm clearance around VANGUARDIAN for fitting.

THE REMOTE CONTROL FUNCTION

Remote Control

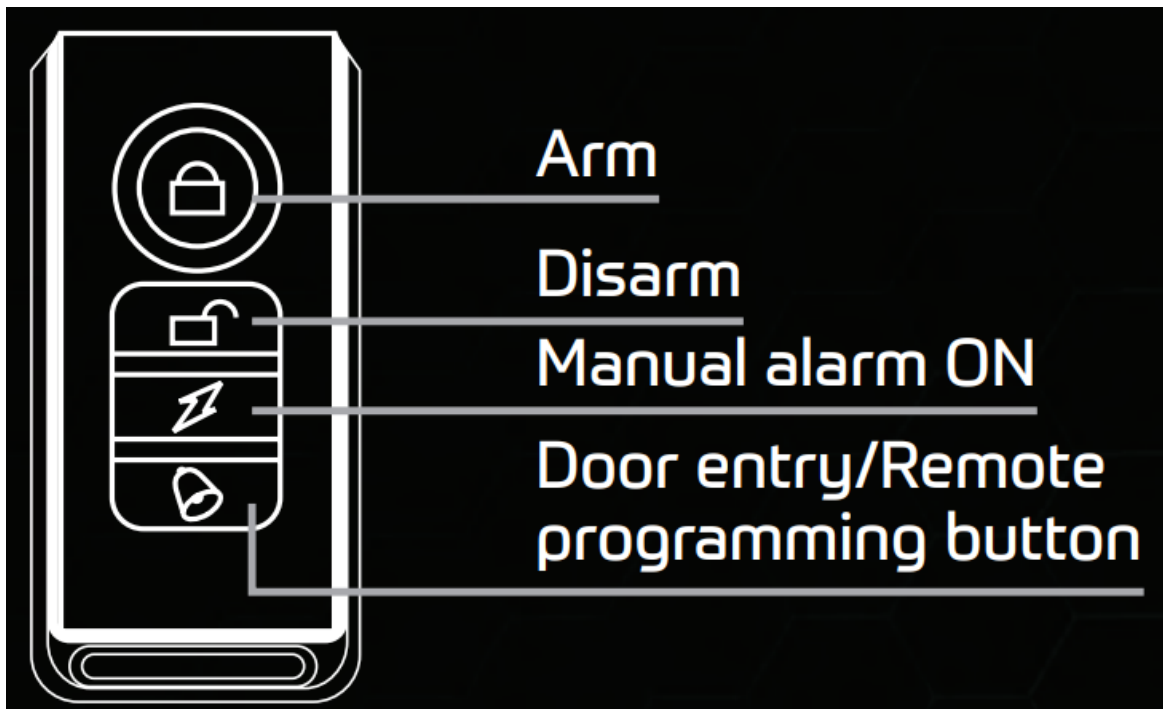

USAGE AND SETTINGS

Arm & Disarm Mode Setting

- Press **LOCK** button on remote once, the alarm will sound 'beep, beep' then 'beep' after 5 seconds when it is in ARM alert state.
- When contact or displacement is detected, the alarm will sound a warning for 2 seconds. If the alarm is triggered again within 2-12 seconds, it will alarm for 30 seconds automatically.
- To stop the alarm or exit ARM mode, press the **UNLOCK** button on the remote once. This button activates the alarm manually.

SENSITIVITY ADJUSTMENT

- VANGUARDIAN Alarms have 7 levels of sensitivity adjustment. If you are unfortunate to experience a "false alarm" simply follow the instructions below...
 - The 7 levels range from "Do...Re...Mi...Fa...So...La...Te"
- These 7 levels of audible pitch represent the 7 LEVELS OF SENSITIVITY ADJUSTMENT at your disposal for you to experiment with.
- To adjust sensitivity, PRESS AND HOLD the DISARM button whereby the alarm will sound a "beep, beep". The LED indicator "on the remote" will switch OFF temporarily and back ON.
- NOW, press the ARM button ONCE...you will hear "Do"...Press again and you will hear "Re" These changes in pitch represent the levels of sensitivity.
- Simply adjust 1 or 2 levels down at a first to find a balance you are happy with. Once you are happy, press the DISARM button and the new level is set.

ATTACH THE STICKER PROVIDED ONTO THE INSIDE OF YOUR BACK DOOR TO REMIND YOU OF HOW TO ADJUST YOUR VANGUARDIAN SENSITIVITY.

REPLACING BATTERIES


- **Alarm:** batteries will need replacing if “performance is notably reduced or if you hear “Du...Du” when armed.
- **Remote:** batteries will need replacing when the LED darkens or if you notice the wireless range is shorter.

Carefully remove the sealed electronics compartment that contains the batteries.
(Take care to ease the unit away from the seal around the outlet). Once out, remove the small screw with the screwdriver provided and use a slotted screwdriver to separate the two halves of the alarm cartridge, as shown below.




The AAA batteries will now be visible, simply replace them with a quality AAA battery. The alarm will “beep”, now simply re-assemble.

THE VANGUARDIAN DUAL & SINGLE ALARM

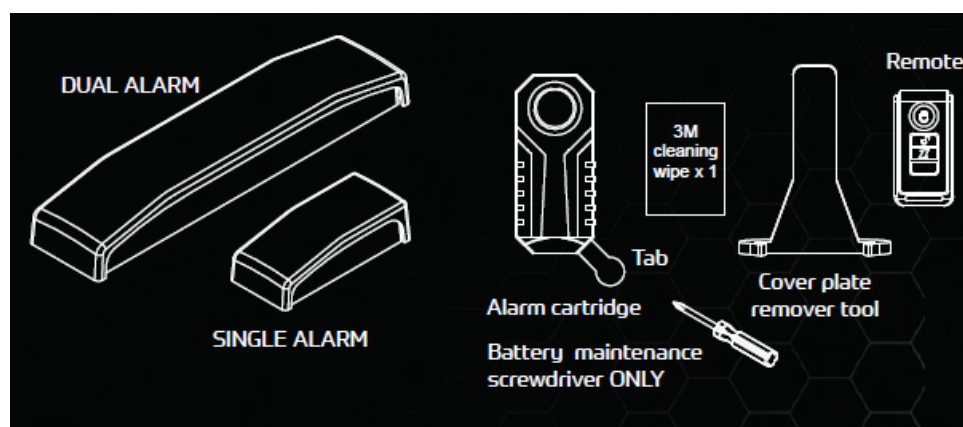

FITTING THE ALARM

CLICK the removal tool onto the end of the alarm. PUSH the tool and LIFT off the cover plate.

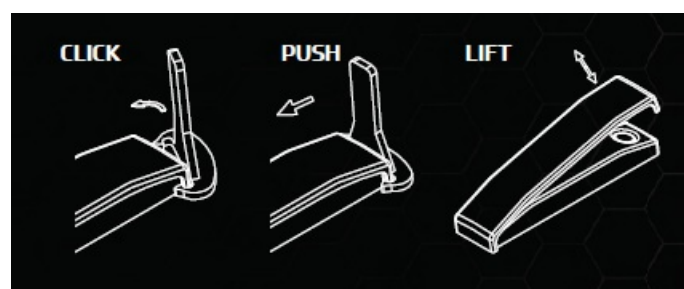

Remove the 4 anchor screws from each corner and remove the base.




With the base removed, locate and remove the 2 tabs to initiate power to the electronics.



Locate and clean the surface area where you want to position your VANGUARDIAN and use the 3M wipe provided.



A TYPICAL INSTALLATION

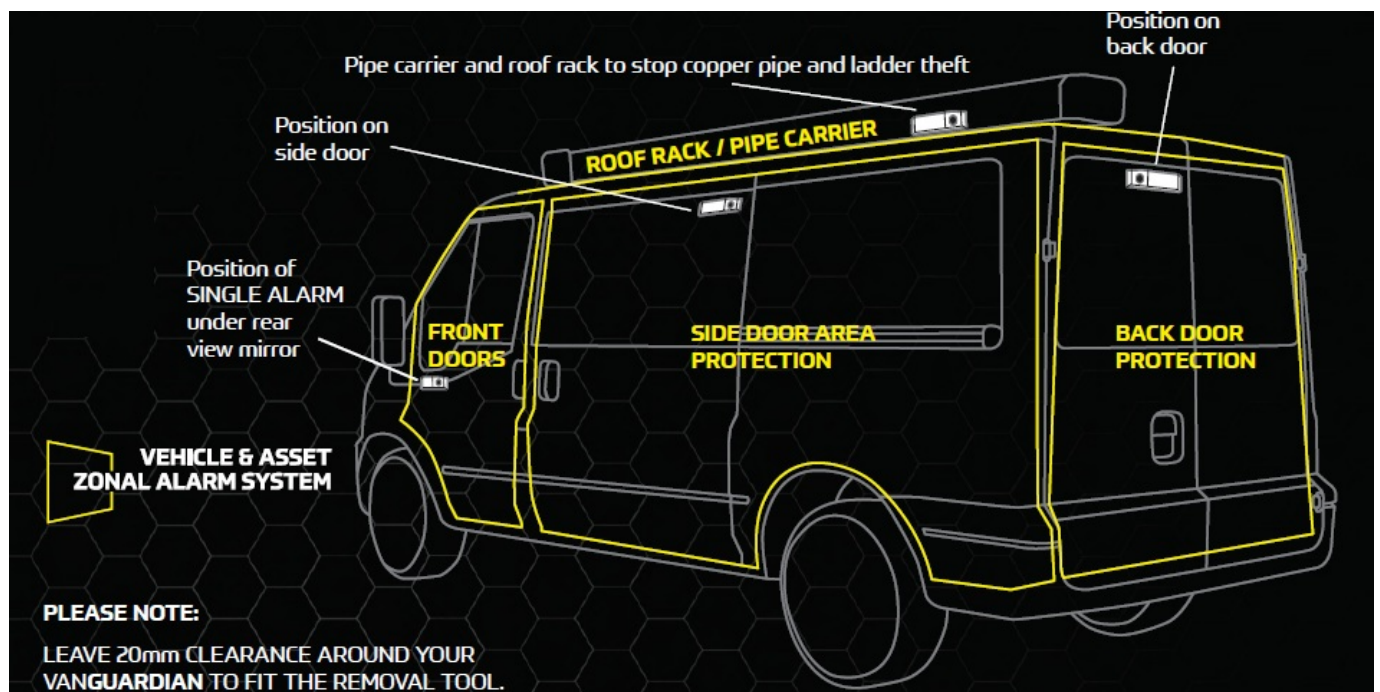

PLEASE NOTE:
LEAVE 20mm CLEARANCE AROUND YOUR VANGUARDIAN TO FIT THE REMOVAL TOOL.


- Once you are happy... peel off the protective film cover to expose the adhesive backing and offer your base into position.



- Once in position, take the removal tool and begin to apply pressure across the whole of the base area rubbing from corner to corner to activate the adhesive molecules.
- Finally...reattach the cabinet to the base using the fixing screws and “click” and LOCK the cover into place... Your VANGUARDIAN ALARM is now complete.

Scan the QR code for the fitting video.



- VANGUARDIAN is a Pre-emptive, visible, audible  crime deterrent.
- Designed to PROTECT the at-risk areas on a vehicle and ALERT against the potential threat of damage to doors and locks and guard against the possible threat of copper pipe theft from a “pipe” carrier or ladders from a roof rack.
- The alarm unit(s) should be positioned in relative proximity to vulnerable areas in order to give maximum PROTECTION and with multi-point connectivity. All VANGUARDIAN alarm units are pre-paired and controlled from one master remote control.

User Manual & Instructions



FAQ

Q: How do I adjust the sensitivity of my VANGUARDIAN alarm?

A: To adjust sensitivity, PRESS AND HOLD the DISARM button until you hear a beep, beep. Press the ARM button to change sensitivity levels, then press DISARM to set the desired level.

Q: When should I replace the batteries in my VANGUARDIAN alarm?


A: Replace alarm batteries if performance decreases or you hear 'Du...Du' when armed. Replace remote batteries if the LED dims or wireless range shortens.

Documents / Resources



[VAN GUARDIAN Alarms System Outperforms Factory Security Systems](#) [pdf] User Manual
Alarms System Outperforms Factory Security Systems, Alarms, System Outperforms Factory S
ecurity Systems, Factory Security Systems, Security Systems, Systems

References

-  [Home - VanGuardian](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.