

[Skip to content](#)

Manuals+

User Manuals Simplified.



Vanstone Electronic A90 Smart POS Terminal User Guide

[Home](#) » [Vanstone Electronic](#) » Vanstone Electronic A90 Smart POS Terminal User Guide



User Guide

The pictures and descriptions in this guide are for reference only, please prevail in kind.

Contents [hide](#)

- [1 Statement](#)
- [2 Package Content](#)
- [3 Security](#)
- [4 Product Description](#)
- [5 Quick installation](#)
- [6 Usage and Operation](#)
- [7 Troubles and Troubleshooting](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

Statement

In order to use the terminal safely and correctly, please read this operation guide carefully before using and deploying the terminal. Please refer to all of the related contracts and agreements of the terminal or consult with the agent that sold the terminal to you in order to know all of the particular configurations clearly about this terminal. The company reserves all the rights to this guild. In other words, no individuals or parties are allowed to copy, excerpt, backup, or change any of the contents in this guild unless the company says so.

Package Content

Components Name	Quantity
A90 hand-hold smart POS terminal	1
Lithium battery	1
Power adapter	1
USB cable	1
Quick start guide (Including warranty card and certification)	1

 
Security

- The installation and use of this product must strictly follow the instructions in this guide.
- Unauthorized disassembly of this device will result in the destruction of the built-in security key, resulting in disabling to
- Do not drop, scratch, twist, hit, vibrate the machine or place heavy objects on the top of it.
- Do not use sharp objects to touch or collide with the unit, especially the display screen. Disobey to do so may cause the display screen to be damaged or not displayed

properly.

- Wipe the screen with a soft, slightly moist, and non-maturing fabric to remove any traces of oil left by fingers. Do not use corrosive cleaners.
- This product uses the standard power adapter. Do not use non-standard power adapters, otherwise, they may cause the equipment not to be able to function as usual or cause serious
- The power supply of this product must come from the original standard lithium battery. Please do not use any other non-standard batteries, otherwise, they may cause the device not to be able to function as usual or cause serious damage.
- This product is an electrical product. Do not spill any liquid material, otherwise, it may cause the risks of internal short-circuit and serious damage to the device.
- Do not insert any metal foreign matters into any interface or port of the device.
- Do not use the device in direct sunlight, high temperature, humid, dusty, or strong magnetic field environment.
- Finding the device damaged or broken down, please stop using the device immediately and contact the relevant after-sales service department. Unauthorized repair or maintenance is strictly forbidden.

Product Description

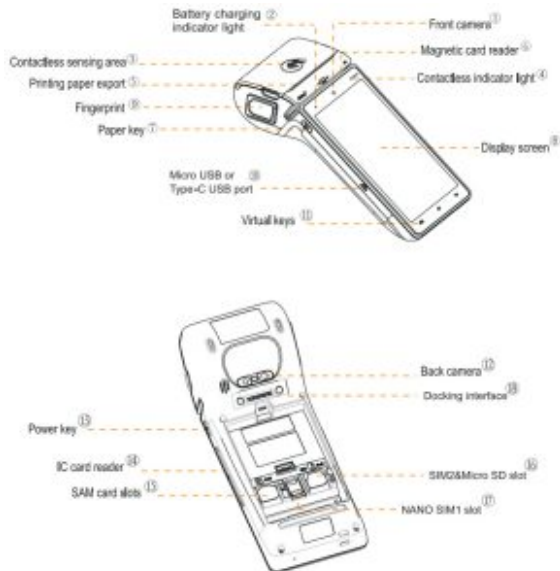

Item	Features
1 Front camera	Used for bar and QR code scanning and taking photos, etc.
2 Battery charging ® Indicator light	The 2-color battery charging indicator light.
3 Contactless sensing area	Induction area for contactless IC card reading and writing.
4 Contactless indicator light	The 4-color indicator provides a status indication for the operation that may vary depending on the application configuration.
5 Printing paper export	Printed receipts and bills export.
6 Magnetic card reader	Magnetic stripe card reader, support bi-direction swiping.
7 Paper key	Allows printing paper to process.
8 Display screen	Touch screen, display transaction and operation prompt information, etc.
9 Fingerprint	For fingerprint acquisition and identification.
10 Micro USB or Type-C USB port	Used for connecting external PC or other terminals, allows to do data transmission and battery charging.
11 Virtual keys	Include Menu, Home, and Back key.
12 Back camera	Used for bar and QR code scanning and taking photos, etc.
13 Power key	For power-on, power-off, restarting, airplane mode.
14 IC card reader	IC card reading area.
15 SAM card slots	SAM1 and SAM2 card slots
16 SIM2& Micro SD slots	SIM2 card slot and Micro SD card slot
17 NANO SIMI slot	SIMI card slot
18 Docking interface	Connecting Charging Dock or Docking Station

Note: the item with the “*” mark stands for the optional configuration. Please refer to the actual purchase contracts and agreements.

Quick installation

 
Take out the POS terminal, printing paper, lithium battery, the power adapter, and other necessary parts from the packing box, then follow the steps below for a quick installation.

Install the printing paper:

1. Pull up the printing paper container cover to open the container.
2. Strip off the printing paper. Hold one side of the paper and put it into the container. Leave a bit of the paper on the top of the scudding knife.
3. Close the cover when hearing the “tick” sound.

[Cautions]

Please be careful with the direction when installing the thermal printing paper, and please do so by following the figures below, otherwise, it will cause a failure of printing.

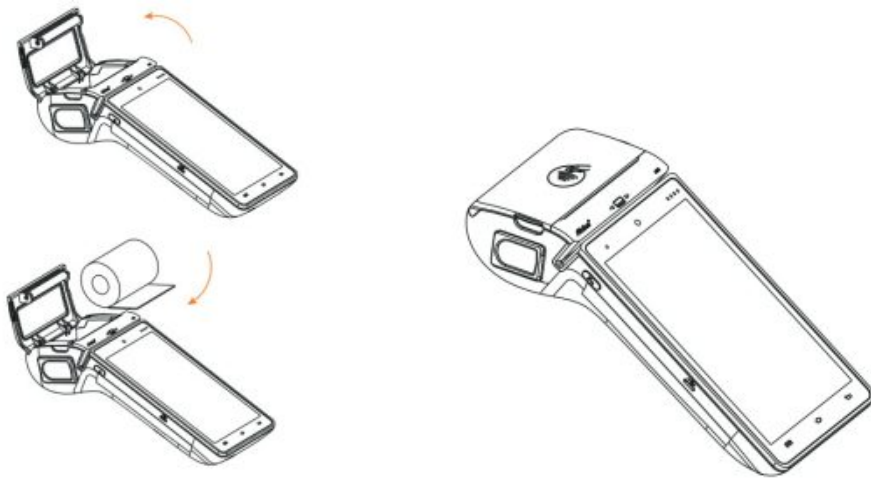


Install the SIMI SAM (PSAM) card:

1. Open the battery cover.
2. Follow the silkscreen indication and place each of the needed SIMI SAM cards separately into the right slot following the direction as the picture shows.

[Cautions]

 1. When installing or removing the SIMI SAM card, please confirm that the device is power-offed, otherwise, the cards may be damaged;
2. When installing the SIM/ SAM card, the chip faces toward the internal side of the device;
3. SIM/ SAM cards can not paste stickers, tags, or other materials that may change the thickness of the card in order to prevent non-smooth installation or disassembly.

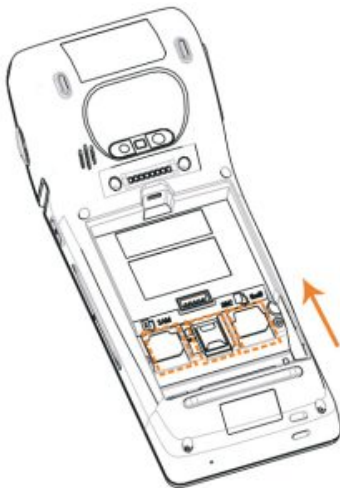

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement: The device has been tested and complies with FCC SAR limits.

Warranty Card

Product Name:.....
Product Model :

Warranty terms:

1. Our company will provide you with high-quality after-sales service.
2. If the user causes product damage due to human factors, the company will charge a maintenance fee when repairing.
3. Please take good care of this card, which will be the warranty basis of our company.

Certification

Inspector:.....
Date:.....

 
Install and remove the lithium battery:

Install the battery:

1. Open the battery cover
2. Insert the battery into the white socket
3. Put the battery into the battery container
4. Close the battery cover

Remove the battery:

1. Open the battery cover after power-off
2. Pull off the battery by grasping the line at the plug and pulling it up and off
3. Gently remove the battery from the battery container

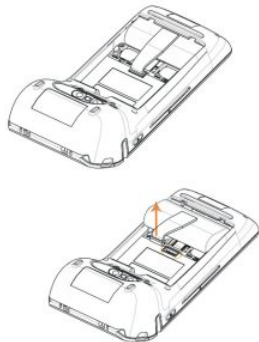

Usage and Operation

Power on/Power off/Restart:

- Power on: Press and hold the "⏻" key for 2 seconds. When the backlight of the display screen is on, the device is activating.
- Power off/ Restart: Press and hold the "⏻" key for 2 seconds. The screen will display options for the "Power off/ Profile / Reboot / Airplane mode" menu. Press the "Power off" option to complete the shutdown; Press the "Reboot" option to restart the device.

[Cautions]

When operating a transaction, the user interface is in the communication status, and it's not allowed to turn off the device.

Troubles and Troubleshooting

Troubles	Troubleshooting
Fail to turn on the device when pressing the power key	<ol style="list-style-type: none"> 1. The battery is exhausted and cannot be recharged. Please change the battery. 2. The battery is low. Please recharge the battery.
Display screen shows an error message about network or service	<ol style="list-style-type: none"> 1. The device may lose the ability to receive signals when you are in a place where the signal is weak or reception is bad. Please relocate and try it again. 2. Some of the options may not be able to use because of the lack of reservation. Please contact your service providers for more information.
Touch screen slow or incorrect reaction	<p>If the device has a touch screen, and the screen reaction is incorrect, please try with the following options:</p> <ol style="list-style-type: none"> 1. Take off the protective film on the screen because it may prevent the device recognize input correctly. We do not recommend using any type of protective film for touch screens. 2. Please ensure that the screen is clean without greasy dirt. Please keep your fingers dry and clean when touching the screen. 3. Please restart the device to solve any type of temporary software errors. 4. If the screen is scratched or damaged, please contact the agent that sold the terminal to you.
Device is frozen or has serious mistakes	<p>If the device is frozen or suspended, it may need to be shut down or restarted to re-motivate functions. If the device is frozen or has a slow reaction, please press the power key for 6 seconds, and the device will be restarted automatically.</p>
Short standby duration	<ol style="list-style-type: none"> 1. Please turn off some functions for saving power when do not use them, such as Bluetooth/WiFi/Data service, etc. 2. Turn off not-in-use applications backstage will help to save power.
Cannot find another Bluetooth device	<ol style="list-style-type: none"> 1. Please ensure that Bluetooth and wireless functions have been turned on. 2. Please ensure that the device to connect has turned on its Bluetooth and wireless functions. 3. Please ensure that the POS terminal and the device to connect are within the maximum Bluetooth range of 10 meters.

- If the power adapter plug or power cord is damaged, please do not use them in case of electric shock or fire.
- Please do not touch the power cord with a wet hand or pull out the power adapter like pulling a power cable.
- Please do not touch the device and power adapter with a wet hands in case of a short circuit, malfunction, or electric shock.
- Please stop using the power adapter and contact sales representatives for exchanging if the power adapter is caught in the rain, getting wet, or affected with damp seriously.
- The power adapter has to meet all of the requirements from the "2.5 Restricted power supply" in «GB4943.1 Safety of information technology equipment».
- If the device has to connect USB ports, please ensure that the USB ports have USB-IF identification, and its performance is qualified with the USB-IF requirements.

Cautions for use

Operating environment

- Do not use the device in thunderstorms which can cause the device malfunction or electric shock.
- Keep the device away from rain, moisture, or liquids containing acidic substances that can corrode electronic circuit boards.
- Do not store or use the device in a dusty or dirty place.
- Do not store the device in a high-temperature place. High temperature will shorten the life of the electronic device.
- Do not place the device in a super-cooling place. When the temperature of the device rises, moisture may be formed inside the equipment, which may damage the circuit board.
- Do not try to disassemble the device. Non-professional manipulating will damage the device.
- Do not use a pen, pencil, or other sharp objects to touch the screen surface to avoid scratching the screen.
- Do not drop, strike, or seriously crash the device. Rough behaviors may damage the device and may cause malfunction.

Accessories requirements

- Please use only the battery, power adapter, and other accessories that are authorized by the product manufacturer and match to the device. Using unauthorized and incompatible accessories may cause fire, explosion, or other dangers.
- If using unauthorized accessories, the user may disobey the warranty rules and countries' related regulations and may lead to accidents. If users want to acquire authorized accessories, please contact your sales agents or distributors.

Power adapter safety

- When the device is charged, the power socket should be installed near the device and should be easy to touch. The charging area of the equipment must be clean without debris, flammable or chemical substances.
- When charging is over or uncharged, please cut off the connection between the power adapter and the device, and please unplug the charger from the power socket.
- Please do not drop or crush the power adapter. Once the shell of the adapter is damaged, please contact the agent or distributor who sell the equipment to exchange the power adapter.

Battery safety

- Please do not use short circuit batteries, or contact the battery terminals with metal or other conductive objects.
- Please do not disassemble, squeeze, twist, or cut the battery.
- Please do not insert external matter into the battery, contact the battery with water or other liquid, and expose the battery to open flame, explosion source, or other risk sources.
- Please do not place or store the battery in an over-temperature
- Please do not throw the battery into the water.
- Do not touch the skin or eyes if a battery leak occurs. If you are stained, rinse the contact area with plenty of water and seek medical attention immediately.
- Please do not use a broken or damaged batteries.

When the standby duration of the device is obviously shorter than usual, please exchange a new battery.

Cautions: There will be a danger of explosion using the wrong model of battery The battery must be disposed of in accordance with the instructions



Address: 3/F, No.2 Building, Aerospace Information Park, No.18 A, Xingshikou Road, Haidian District, Beijing
Zipcode: 100195

Email: info@vanstone.com.cn

Manufacture Name: Huizhou Vanstone Electronic Co., Ltd.

Manufacture address: 4/F, No.12 Building, Aerospace Science and Technology Industrial Park, No.51, Zhongkai Road, Huizhou City, Guangzhou Province, China.

[Http://www.vanstone.com.cn](http://www.vanstone.com.cn)

Documents / Resources



[Vanstone Electronic A90 Smart POS Terminal](#) [pdf] User Guide

A90, OWL-A90, OWLA90, A90 Smart POS Terminal, Smart POS Terminal, POS Terminal, Terminal

[Manuals+.](#)

- [home](#)
- [privacy](#)