



VEGA PLICSCOM Display and Adjustment Module Instruction Manual

[Home](#) » [VEGA](#) » VEGA PLICSCOM Display and Adjustment Module Instruction Manual

Contents [[hide](#)]

- 1 VEGA PLICSCOM Display and Adjustment Module
- 2 About this document
- 3 For your safety
- 4 Product description
- 5 Principle of operation
- 6 Prepare setup
- 7 Parallel operation of display and adjustment modules
- 8 Set up Bluetooth connection with smartphone/tablet
- 9 Set up Bluetooth connection with PC/ notebook
- 10 Maintenance and fault rectification
- 11 Dismount
- 12 Supplement
- 13 Documents / Resources
 - 13.1 References
- 14 Related Posts



About this document

Function

This instruction provides all the information you need for mounting, connection and setup as well as important instructions for maintenance, fault rectification, the exchange of parts and the safety of the user. Please read this information before putting the instrument into operation and keep this manual accessible in the immediate vicinity of the device.

Target group

This operating instructions manual is directed to trained personnel. The contents of this manual must be made available to the qualified personnel and implemented.

Symbols used



- **Document ID** This symbol on the front page of this instruction refers to the Document ID. By entering the Document ID on www.vega.com you will reach the document download.



- **Information, note, tip:** This symbol indicates helpful additional information and tips for successful work.



- **Note:** This symbol indicates notes to prevent failures, malfunctions, damage to devices or plants.



- **Caution:** Non-observance of the information marked with this symbol may result in personal injury.



- **Warning:** Non-observance of the information marked with this symbol may result in serious or fatal personal injury.



- **Danger:** Non-observance of the information marked with this symbol results in serious or fatal personal injury.



- **Ex applications** This symbol indicates special instructions for Ex applications
- **List** The dot set in front indicates a list with no implied sequence.
- **1 Sequence of actions** Numbers set in front indicate successive steps in a procedure.



- **Battery disposal** This symbol indicates special information about the disposal of batteries and accumulators.

For your safety

Authorised personnel

All operations described in this documentation must be carried out only by trained, qualified personnel authorised by the plant operator.

During work on and with the device, the required personal protective equipment must always be worn.

Appropriate use

The pluggable display and adjustment module is used for measured value indication, adjustment and diagnoses with continuously measuring sensors.

You can find detailed information about the area of application in chapter "Product description".

Operational reliability is ensured only if the instrument is properly used according to the specifications in the operating instructions manual as well as possible supplementary instructions.

Warning about incorrect use

Inappropriate or incorrect use of this product can give rise to application-specific hazards, e.g. vessel overflow through incorrect mounting or adjustment. Damage to property and persons or environmental contamination can result. Also, the protective characteristics of the instrument can be impaired.

General safety instructions

This is a state-of-the-art instrument complying with all prevailing regulations and directives. The instrument must only be operated in a technically flawless and reliable condition. The operator is responsible for the trouble-free operation of the instrument. When measuring aggressive or corrosive media that can cause a dangerous situation if the instrument malfunctions, the operator has to implement suitable measures to make sure the instrument is functioning properly.

During the entire duration of use, the user is obliged to determine the compliance of the necessary occupational safety measures with the current valid rules and regulations and also take note of new regulations.

The safety instructions in this operating instructions manual, the national installation standards as well as the valid safety regulations and accident prevention rules must be observed by the user.

For safety and warranty reasons, any invasive work on the device beyond that described in the operating instructions manual may be carried out only by personnel authorized by the manufacturer. Arbitrary conversions or modifications are explicitly forbidden. For safety reasons, only the accessory specified by the manufacturer

must be used.

To avoid any danger, the safety approval markings and safety tips on the device must also be observed.

EU conformity

The device fulfils the legal requirements of the applicable EU directives. By affixing the CE marking, we confirm the conformity of the instrument with these directives.

The EU conformity declaration can be found on our homepage.

NAMUR recommendations

NAMUR is the automation technology user association in the process industry in Germany. The published NAMUR recommendations are accepted as the standard in field instrumentation.

The device fulfils the requirements of the following NAMUR recommendations:

- NE 21 – Electromagnetic compatibility of equipment
- NE 53 – Compatibility of field devices and display/adjustment components

For further information see www.namur.de.

Security concept, Bluetooth operation

Sensor adjustment via Bluetooth is based on a multi-stage security concept.

Authentication

When starting Bluetooth communication, an authentication is carried out between sensor and adjustment device by means of the sensor PIN. The sensor PIN is part of the respective sensor and must be entered in the adjustment device (smartphone/tablet). To increase adjustment convenience, this PIN is stored in the adjustment device. This process is secured via an algorithm acc. to standard SHA 256.

Protection against incorrect entries

In case of multiple incorrect PIN entries in the adjustment device, further entries are possible only after a certain amount of time has passed.

Encrypted Bluetooth communication

The sensor PIN, as well as the sensor data, are transmitted encrypted between sensor and adjustment device according to Bluetooth standard 4.0.

Modification of the default sensor PIN

Authentication by means of the sensor PIN is only possible after the default sensor PIN "0000" has been changed in the sensor by the user.

Radio licenses

The radio module used in the instrument for wireless Bluetooth communication is approved for use in countries of the EU and EFTA. It was tested by the manufacturer according to the latest edition of the following standard:

- EN 300 328 – Wideband transmission systems The radio module used in the instrument for wireless Bluetooth communication has also radio licenses for the the following countries applied for by the manufacturer:
 - Canada – IC: 1931B-BL600
 - Morocco – AGREE PAR L'ANRT MAROC Numéro d'agrément: MR00028725ANRT2021 Date d'agrément: 17/05/2021
 - South Korea – R-R-VGG-PLICSCOM
 - USA – FCC ID: P14BL600

Environmental instructions

Protection of the environment is one of our most important duties. That is why we have introduced an environment management system with the goal of continuously improving company environmental protection. The environment management system is certified according to DIN EN ISO 14001.

Please help us fulfil this obligation by observing the environmental instructions in this manual:

- Chapter "Packaging, transport and storage"
- Chapter "Disposal"

Product description

Configuration

Scope of delivery

The scope of delivery encompasses:

- Display and adjustment module
- Magnetic pen (with Bluetooth version)
- Documentation
 - This operating instructions manual

Note:

Optional instrument features are also described in this operating instructions manual. The respective scope of delivery results from the order specification.

Scope of this operating instructions

This operating instructions manual applies to the following hardware and software versions of the display and adjustment module with Bluetooth:

- Hardware from 1.12.0
- Software from 1.14.0

Instrument versions

The indicating/adjustment module consists of a display with full dot matrix as well as four keys for adjustment. An LED background lighting is integrated in the display. It can be switched off or on via the adjustment menu. The instrument is optionally equipped with Bluetooth functionality. This version allows wireless adjustment of the sensor via smartphone/tablet or PC/notebook. Furthermore, the keys of this version can also be operated with a magnetic pen right through the closed housing lid with an inspection window.

Type label



The type label contains the most important data for identification and use of the instrument:

- Instrument type/Product code

- Data matrix code for VEGA Tools app 3 Serial number of the instrument
- Field for approvals
- Switch position for Bluetooth function

Principle of operation

Application area

The pluggable display and adjustment module PLICSCOM is used for measured value indication, adjustment and diagnosis for the following VEGA instruments:

- VEGAPULS series 60
- VEGAFLEX series 60 and 80
- VEGASON series 60
- VEGACAL series 60
- pROTRAC series
- VEGABAR series 50, 60 and 80
- VEGADIF 65
- VEGADIS 61, 81
- VEGADIS 82 1)

Wireless connection



The display and adjustment module PLICSCOM with integrated Bluetooth functionality allows wireless connection to smartphones/tablets or PCs/notebooks.

- Display and adjustment module
- Sensor
- Smartphone/Tablet
- PC/Notebook

Installation in the sensor housing

The display and adjustment module is mounted into the respective sensor housing.

The operation of a display and adjustment module with integrated Bluetooth function is not supported by VEGADIS 82.

The electrical connection is carried out via spring contacts in the sensor and contact surfaces in the display and adjustment module. After mounting, the sensor and display and adjustment module are splash-water protected even without housing lid.

The external display and adjustment unit is another installation option.

Mounting in the external display and adjustment Runitange of functions

The range of functions of the display and adjustment module is determined by the sensor and depends on the respective software version of the sensor.

Voltage supply

Power is supplied directly via the respective sensor or the external display and adjustment unit. An additional connection is not required.

The backlight is also powered by the sensor or the external display and adjustment unit. Prerequisite for this is a supply voltage at a certain level. The exact voltage specifications can be found in the operating instructions manual of the respective sensor.

Heating

The optional heating requires its own operating voltage. You can find further details in the supplementary instructions manual "Heating for display and adjustment module".

Packaging, transport, and storage

Packaging

Your instrument was protected by packaging during transport. Its capacity to handle normal loads during transport is assured by a test based on ISO 4180.

The packaging consists of environment-friendly, recyclable cardboard. For special versions, PE foam or PE foil is also used. Dispose of the packaging material via specialised recycling companies.

Transport

Transport must be carried out in due consideration of the notes on the transport packaging. Nonobservance of these instructions can cause damage to the device.

Transport inspection

The delivery must be checked for completeness and possible transit damage immediately at receipt. Ascertained transit damage or concealed defects must be appropriately dealt with.

Storage

Up to the time of installation, the packages must be left closed and stored according to the orientation and storage markings on the outside.

Unless otherwise indicated, the packages must be stored only under the following conditions:

- Not in the open
- Dry and dust free
- Not exposed to corrosive media
- Protected against solar radiation
- Avoiding mechanical shock and vibration

Storage and transport temperature

- Storage and transport temperature see chapter " Supplement – Technical data – Ambient conditions"
- Relative humidity 20 ... 85 %

Prepare setup

Insert display and adjustment module

The display and adjustment module can be inserted into the sensor and removed again at any time. You can choose any one of four different positions – each displaced by 90°. It is not necessary to interrupt the power supply.

Proceed as follows:

1. Unscrew the housing lid
2. Place the display and adjustment module on the electronics in the desired position and turn it to the right until it snaps in.
3. Screw housing lid with inspection window tightly back on Disassembly is carried out in reverse order.

The display and adjustment module is powered by the sensor, an additional connection is not necessary.




1. In the electronics compartment

2. In the connection compartment

Note

If you intend to retrofit the instrument with a display and adjustment module for continuously measured value indication, a higher lid with an inspection glass is required.

Adjustment system

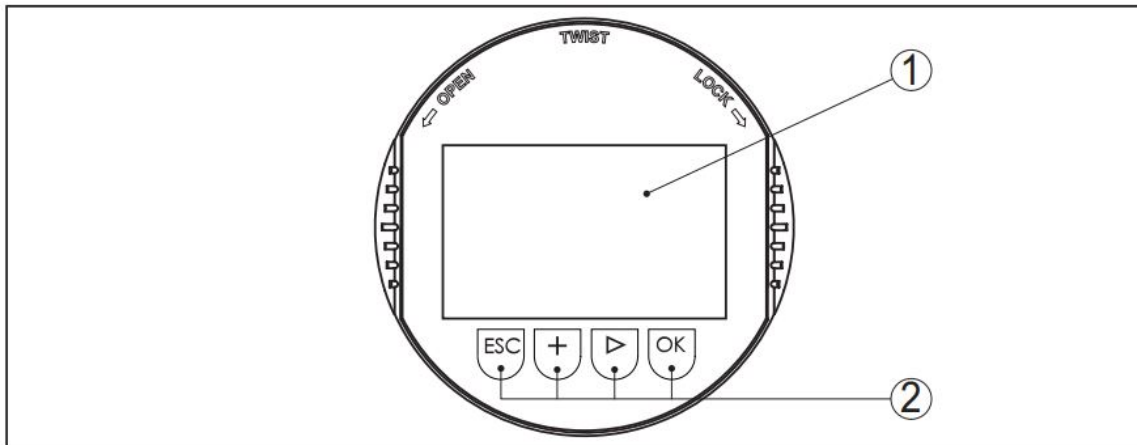

1. LC display
2. Adjustment keys


Key functions

1. [OK] key:
 1. Move to the menu overview
 2. Confirm selected menu
 3. Edit parameter
 4. Save value
2. [->] key:
 1. Change measured value presentation
 2. Select list entry
 3. Select menu items
 4. Select editing position
3. [+] key:
 1. Change value of the parameter
4. [ESC] key:
 1. Interrupt input
 2. Jump to next higher menu

Operating system – Keys direct

The instrument is operated via the four keys of the display and adjustment module. The individual menu items are shown on the LC display. You can find the function of the individual keys in the previous illustration.

Adjustment system – keys via magnetic pen

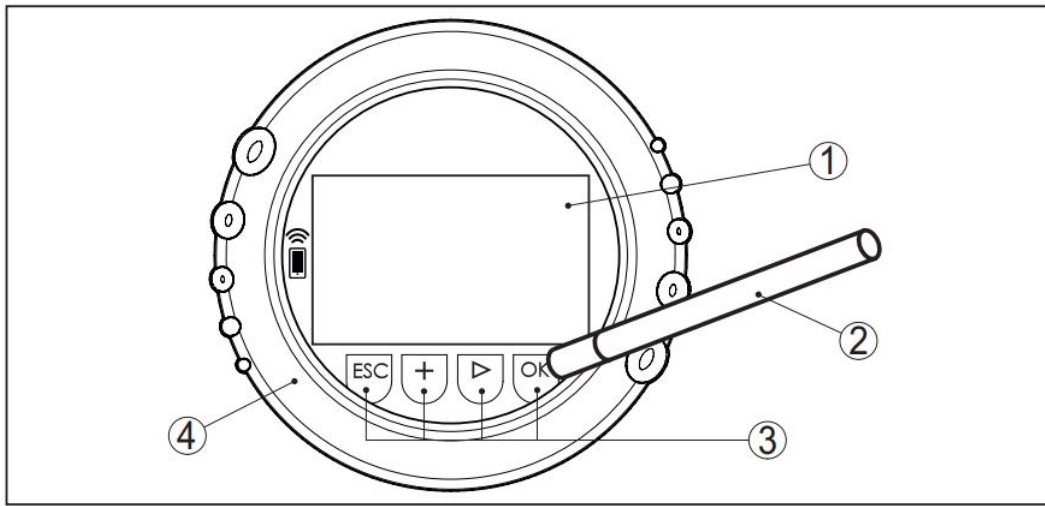

With the Bluetooth version of the display and adjustment module you can also adjust the instrument with the magnetic pen. The pen operates the four keys of the display and adjustment module right through the closed lid (with inspection window) of the sensor housing.

- LC display
- Magnetic pen
- Adjustment keys
- Lid with inspection window

Time functions

When the [+] and [->] keys are pressed quickly, the edited value, or the cursor, changes one value or position at a time. If the key is pressed longer than 1 s, the value or position changes continuously.

When the [OK] and [ESC] keys are pressed simultaneously for more than 5 s, the display returns to the main menu. The menu language is then switched over to "English".

Approx. 60 minutes after the last pressing of a key, an automatic reset to measured value indication is triggered. Any values not confirmed with [OK] will not be saved.

Parallel operation of display and adjustment modules


Depending on the generation as well as hardware version (HW) and software version (SW) of the respective sensor, parallel operation of the display and adjustment modules in the sensor and in the external display and adjustment unit is possible.

You can recognize the instrument generation by looking at the terminals. The differences are described below:

Sensors of the older generations

With the following hardware and software versions of the sensor, parallel operation of several display and adjustment modules is not possible:

HW < 2.0.0, SW < 3.99 On these instruments, the interfaces for the integrated display and adjustment module and the external display and adjustment unit are connected internally. The terminals are shown in the following graphic:

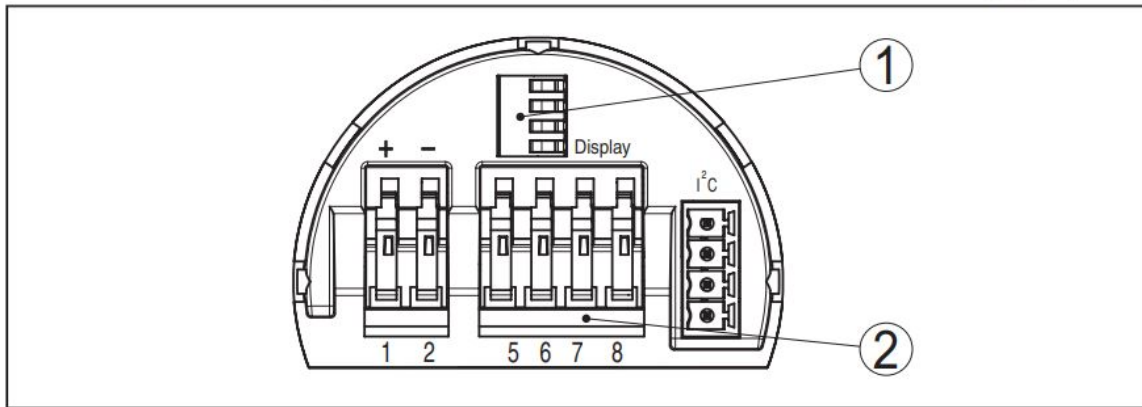

- Spring contacts for display and adjustment module
- Terminals for external display and adjustment unit

Sensors of the newer generation


With the following hardware and software versions of the sensors, parallel operation of several display and adjustment modules is possible:

- Radar sensors VEGAPULS 61, 62, 63, 65, 66, 67, SR68 and 68 with HW \geq 2.0.0, SW \geq 4.0.0 as well as VEGAPULS 64, 69
- Sensors with guided radar with HW \geq 1.0.0, SW \geq 1.1.0
- Pressure transmitter with HW \geq 1.0.0, SW \geq 1.1.0

On these instruments, the interfaces for the display and adjustment module and the external display and adjustment unit are separate:

- Spring contacts for display and adjustment module

Terminals for external display and adjustment unit

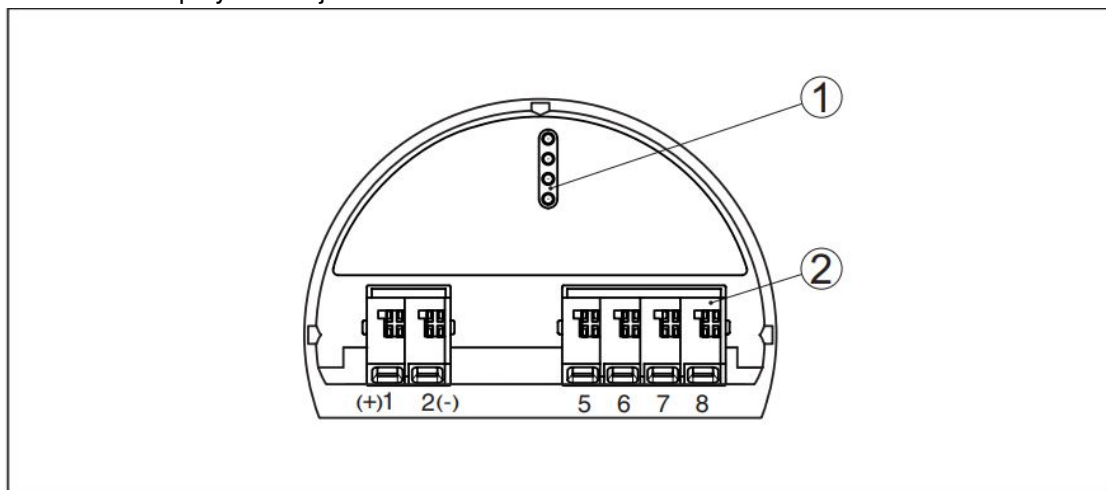

If the sensor is operated via the one display and adjustment module, the message " Adjustment blocked" appears on the other one. Simul-taneous adjustment is thus impossible.

Connection of more than one display and adjustment module on one interface, or a total of more than two display and adjustment modules, however, is not supported.

Set up Bluetooth connection with smartphone/tablet

Preparations

System requirements Make sure that your smartphone/tablet meets the following system requirements:

- Operating system: iOS 8 or newer
- Operating system: Android 5.1 or newer
- Bluetooth 4.0 LE or newer

Activate Bluetooth

Download the VEGA Tools app from the "Apple App Store", "Google Play Store" or "Baidu Store" to your smartphone or tablet.

Make sure that the Bluetooth function of the display and adjustment module is activated. For this, the switch on the bottom side must be set to "On".

Factory setting is "On".

1 Switch

- On =Bluetooth active
- Off =Bluetooth not active

Change sensor PIN


The security concept of Bluetooth operation absolutely requires that the default setting of the sensor PIN be changed. This prevents unauthorized access to the sensor.

The default setting of the sensor PIN is "0000". First of all you have to change the sensor PIN in the adjustment menu of the respective sensor, e.g. to "1111".

After the sensor PIN has been changed, sensor adjustment can be enabled again. For access (authentication) with Bluetooth, the PIN is still effective.

In the case of newer generation sensors, for example, this looks as follows:

6 Set up Bluetooth connection with smartphone/tablet

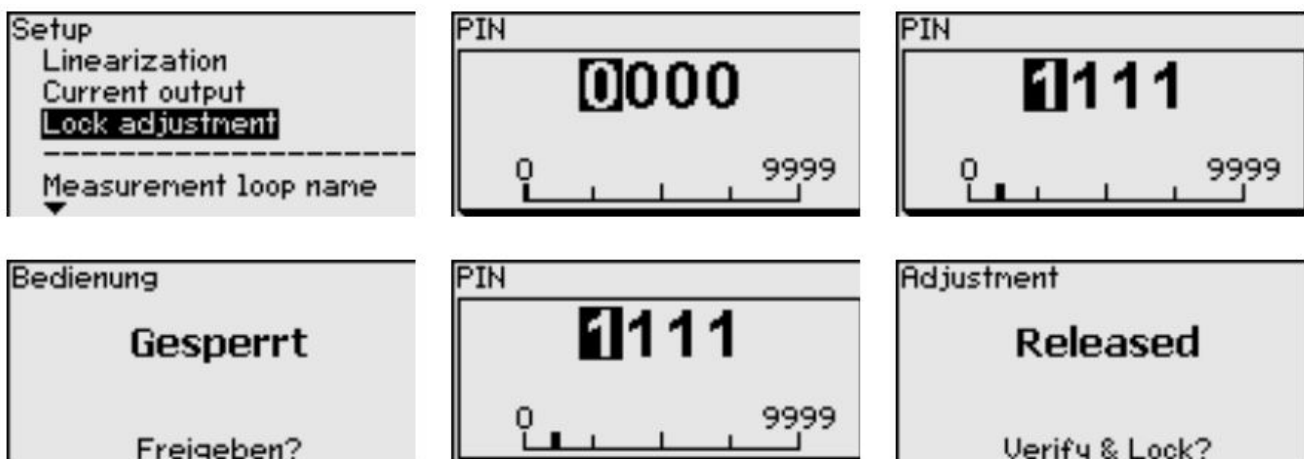

Information

Bluetooth communication functions only if the actual sensor PIN differs from the default setting "0000".

Connecting

Start the adjustment app and select the function "Setup". The smartphone/tablet searches automatically for Bluetooth-capable instruments in the area. The message "Searching ..." is displayed. All found instruments will be listed in the adjustment window. The search is continued automatically. Select the requested instrument in the device list. The message "Connecting ..." is displayed.

For the first connection, the operating device and the sensor must authenticate each other. After successful

authentication, the next connection functions without authentication.

Authenticate

For authentication, enter in the next menu window the 4-digit PIN which is used to Lock/Unlock the sensor (sensor PIN).

Note:

If an incorrect sensor PIN is entered, the PIN can only be entered again after a delay time. This time gets longer after each incorrect entry.

After connection, the sensor adjustment menu appears on the respective operating device. The display of the display and adjustment module shows the Bluetooth symbol and "connected". Sensor adjustment via the keys of the display and adjustment module itself is not possible in this mode.


Note:

With devices of the older generation, the display remains unchanged, sensor adjustment via the keys of the display and adjustment module is possible.

If the Bluetooth connection is interrupted, e.g. due to a too large distance between the two devices, this is displayed on the operating device. The message disappears when the connection is restored.

Sensor parameter adjustment

The sensor adjustment menu is divided into two halves: On the left you'll find the navigation section with the menus "Setup", "Display", "Diagnosis" and others. The selected menu item, recognisable by the colour change, is displayed in the right half.

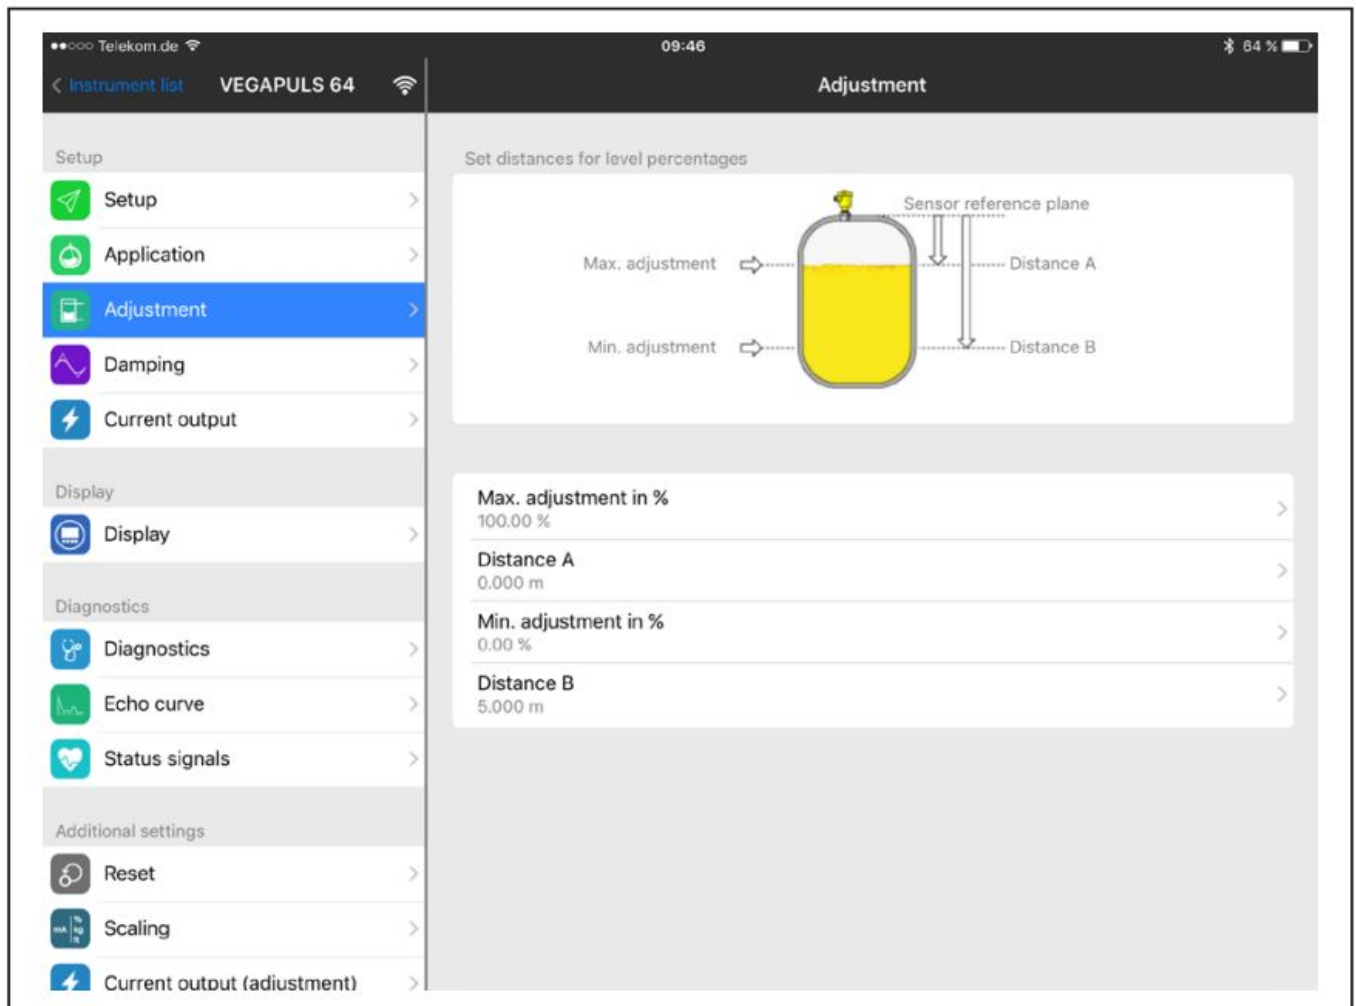

Enter the requested parameters and confirm via the keyboard or the editing field. The settings are then active in the sensor. Close the app to terminate connection.

Set up Bluetooth connection with PC/ notebook

Preparations


Make sure that your PC meets the following system requirements:

- Operating system Windows
- DTM Collection 03/2016 or higher
- USB 2.0 interface
- Bluetooth USB adapter

Activate Bluetooth USB adapter Activate the Bluetooth USB adapter via the DTM. Sensors with Bluetooth-capable display and adjustment module are found and created in the project tree.

Make sure that the Bluetooth function of the display and adjustment module is activated. For this, the switch on the bottom side must be set to "On".

The factory setting is "On".

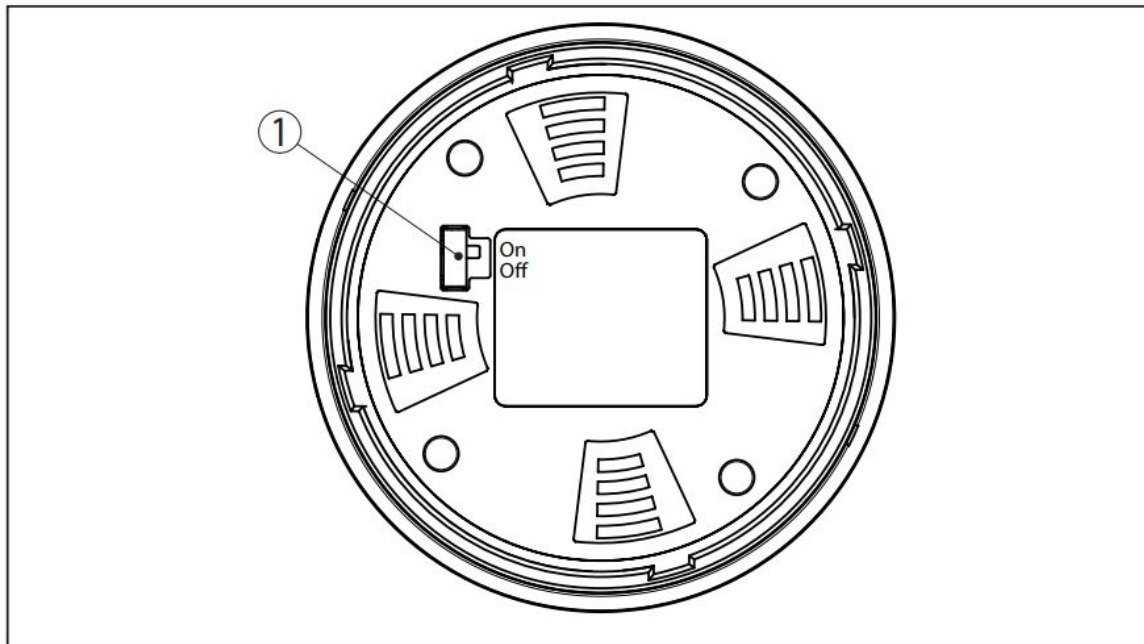

Switch

on Bluetooth active





off Bluetooth not active

Change sensor PIN The security concept of Bluetooth operation absolutely requires that the default setting of the sensor PIN be changed. This prevents unauthorized access to the sensor.

The default setting of the sensor PIN is "0000". First of all you have to change the sensor PIN in the adjustment menu of the respective sensor, e.g. to "1111".

After the sensor PIN has been changed, sensor adjustment can be enabled again. For access (authentication) with Bluetooth, the PIN is still effective.

In the case of newer generation sensors, for example, this looks as follows:

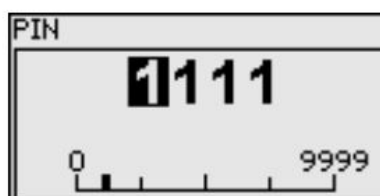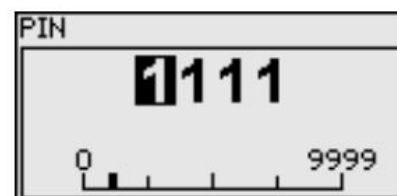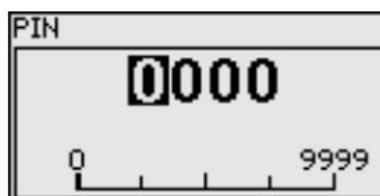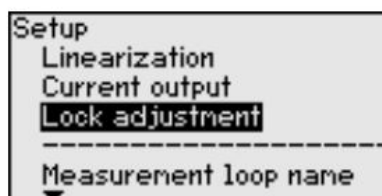

Information

Bluetooth communication functions only if the actual sensor PIN differs from the default setting "0000".

Connecting

Select the requested device for the online parameter adjustment in the project tree.

The window "Authentication" is displayed. For the first connection, the operating device and the device must authenticate each other. After successful authentication, the next connection functions without authentication. For authentication, enter the 4-digit PIN used to lock/unlock the device (sensor PIN).

Note

If an incorrect sensor PIN is entered, the PIN can only be entered again after a delay time. This time gets longer after each incorrect entry.

After connection, the sensor DTM appears. With devices of the newer generation, the display of the display and adjustment module shows the Bluetooth symbol and "connected". Sensor adjustment via the keys of the display and adjustment module itself is not possible in this mode.


Note

With devices of the older generation, the display remains unchanged, sensor adjustment via the keys of the display and adjustment module is possible.

If the connection is interrupted, e.g. due to a too large distance between device and PC/notebook, the message "Communication failure" is displayed. The message disappears when the connection is restored.

Sensor parameter adjustment

For parameter adjustment of the sensor via a Windows PC, the configuration software PACTware and a suitable instrument driver (DTM) according to FDT standard are required. The up-to-date PACTware version as well as all available DTMs are compiled in a DTM Collection. The DTMs can also be integrated into other frame applications according to FDT standard.

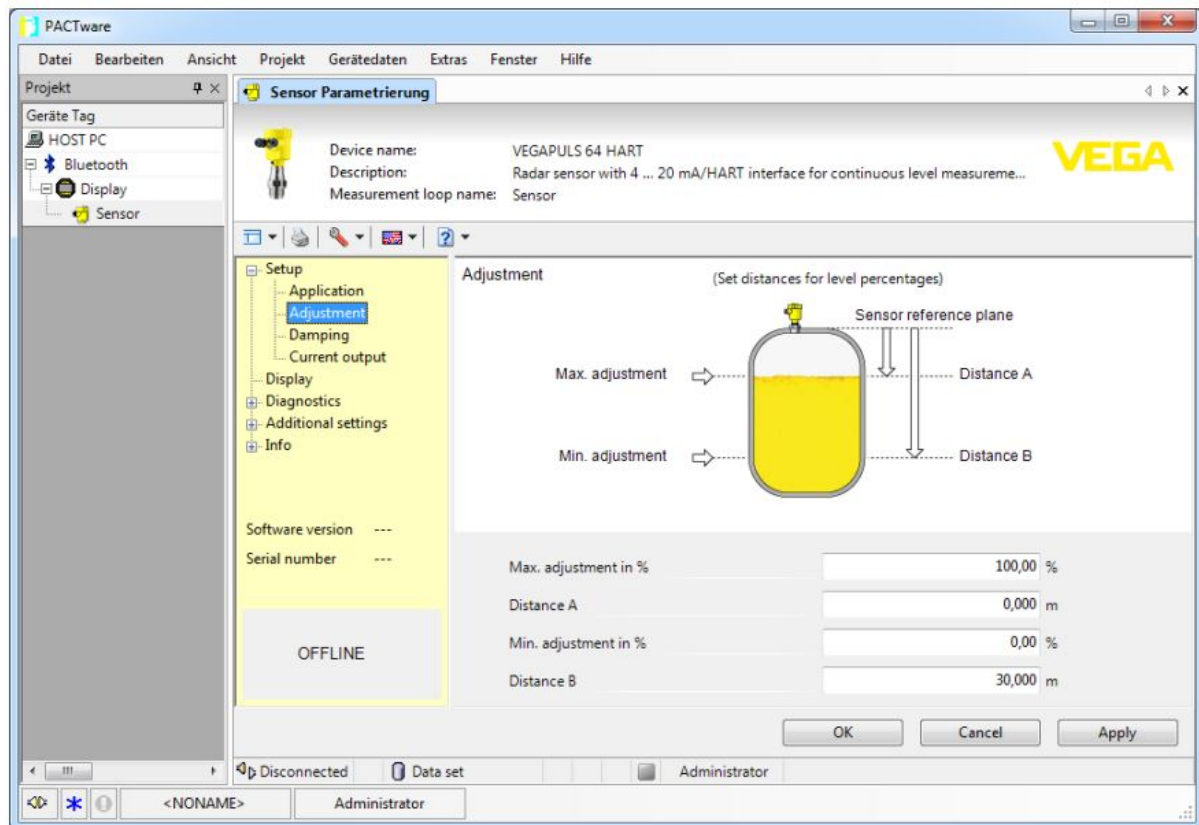

Maintenance and fault rectification

Maintenance

If the device is used properly, no special maintenance is required in normal operation. The cleaning helps that the type label and markings on the instrument are visible. Take note of the following:

- Use only cleaning agents which do not corrode the housings, type label and seals
- Use only cleaning methods corresponding to the housing protection rating

How to proceed if a repair is necessary

You can find an instrument return form as well as detailed information about the procedure in the download area of our homepage. By doing this you help us carry out the repair quickly and without having to call back for needed information.

In case of repair, proceed as follows:

- Print and fill out one form per instrument
- Clean the instrument and pack it damage-proof
- Attach the completed form and, if need be, also a safety data sheet outside on the packaging
- Ask the agency serving you to get the address for the return ship-ment. You can find the agency on our homepage.

Dismount

Dismounting steps

Warning

Before dismounting, be aware of dangerous process conditions such as e.g. pressure in the vessel or pipeline, high temperatures, cor-rosive or toxic media etc.

Take note of chapters " Mounting" and " Connecting to voltage sup-ply" and carry out the listed steps in reverse order.

Disposal

The instrument consists of materials which can be recycled by spe-cialised recycling companies. We use recyclable materials and have designed the electronics to be easily separable.

WEEE directive

The instrument does not fall in the scope of the EU WEEE directive. Article 2 of this Directive exempts electrical and electronic equipment from this requirement if it is part of another instrument that does not fall in the scope of the Directive. These include stationary industrial plants. Pass the instrument directly on to a specialised recycling company and do not use the municipal collecting points.

If you have no way to dispose of the old instrument properly, please contact us concerning return and disposal.

Supplement

Technical data

General data

Weight approx. 150 g (0.33 lbs)

Display and adjustment module

- | | |
|--|------------------------|
| • Display element Measured value indication | Display with backlight |
| • Number of digits Adjustment elements | 5 |
| • 4 keys | [OK], [->], [+], [ESC] |
| • Switch | Bluetooth On/Off |
| • Protection rating unassembled | IP20 |
| • Mounted in the housing without lid Materials | IP40 |
| • Housing | ABS |
| • Inspection window | Polyester foil |
| • Functional safety | SIL non-reactive |

Bluetooth interface

- | | |
|---------------------------|------------------|
| • Bluetooth standard | Bluetooth LE 4.1 |
| • Max. participants | 1 |
| • Effective range typ. 2) | 25 m (82 ft) |

Ambient conditions

- | | |
|-------------------------------------|-----------------------------------|
| • Ambient temperature | – 20 ... +70 °C (-4 ... +158 °F) |
| • Storage and transport temperature | – 40 ... +80 °C (-40 ... +176 °F) |

Dimensions

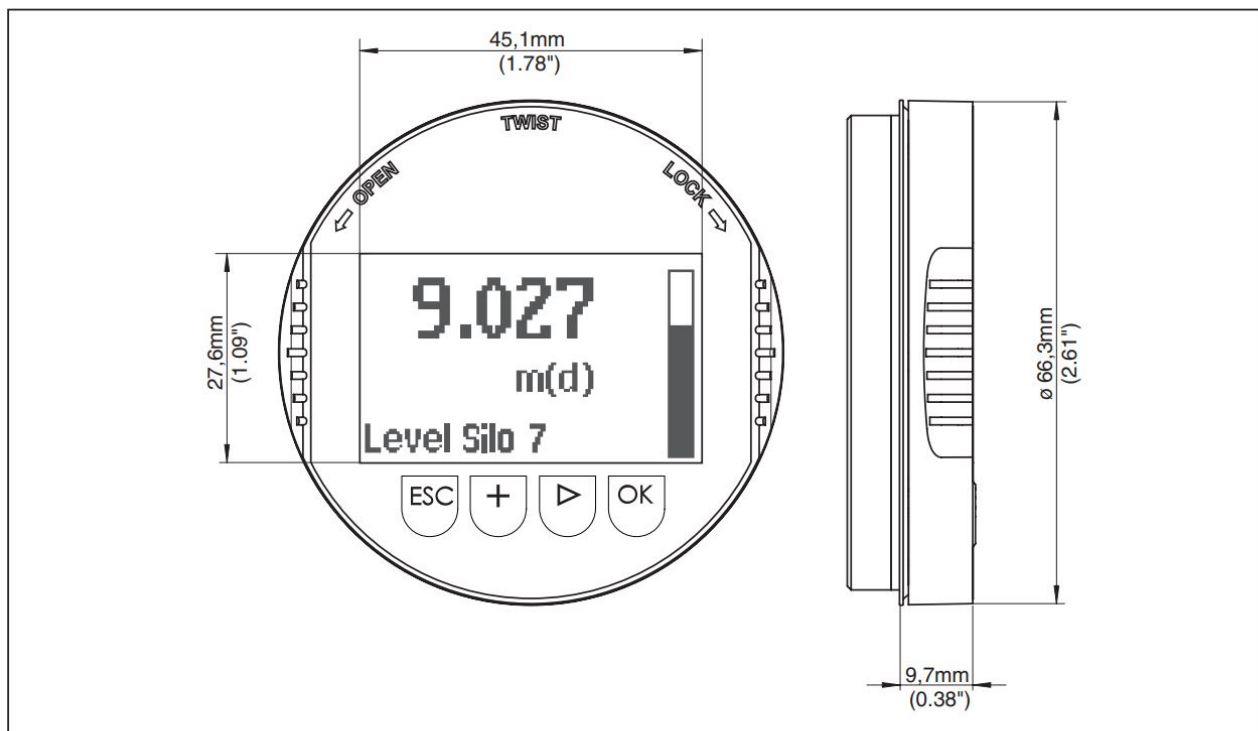


Fig. 13: Dimensions of display and adjustment module

Industrial property rights

VEGA product lines are global protected by industrial property rights. Further information see www.vega.com.

License information for Open Source Software

Hashfunction acc. to mbed TLS: Copyright (C) 2006-2015, ARM Limited, All Rights Reserved SPDX-License-Identifier: Apache-2.0

Licensed under the Apache License, Version 2.0 (the "License"); you may not use this file except in compliance with the License. You may obtain a copy of the License at


<http://www.apache.org/licenses/LICENSE-2.0>.

Unless required by applicable law or agreed to in writing, software distributed under the License is distributed on an "AS IS" BASIS, WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied. See the License for the specific language governing permissions and limitations under the License.

Trademark

All the brands, as well as trade and company names used, are the property of their lawful proprietor/originator

Documents / Resources

	<p>VEGA PLICSCOM Display and Adjustment Module [pdf] Instruction Manual PLICSCOM, Display and Adjustment Module</p>
---	---

References

- [Apache License, Version 2.0](#)
- [NAMUR – Interessengemeinschaft Automatisierungstechnik der Prozessindustrie e.V.](#)
- [VEGA - Level - Switching - Pressure](#)