

# **VEKOOTO N92 RV Backup System Wired Kit Camera Installation Guide**

Home » VEKOOTO » VEKOOTO N92 RV Backup System Wired Kit Camera Installation Guide ™



# **VEKOOTO N92 RV Backup System Wired Kit Camera**



#### **Contents**

- 1 Thank You!
- 2 Monitor introduction
- 3 Remote Controller introduction
- **4 Wiring instructions**
- 5 The wiring method when product use, as follows
- 6 The wiring method when product test, as follows
- 7 About Trailer installation
- 8 How to install the monitor and camera
- 9 Basic Function
  - 9.1 Time Setting Time
  - 9.2 Picture
- 10 Playback
  - 10.1 Split Setting
  - 10.2 Function
- 11 MENU FAQ
- 12 CUSTOMERS SUPPORT
- 13 Documents / Resources
  - 13.1 References
- **14 Related Posts**

#### Thank You!


Thank You for Buying VEKOOTO Product.

Read This User Manual Before Installing and Using It.

Pls keep this instruction or write down our email <u>Vekooto@outlook.com</u> So you can find us once you have any question. You are Always the First for us.

#### **Monitor introduction**

The user can perform the manipulation of the guest power segment on the display parameters through the following nuclear health operations.

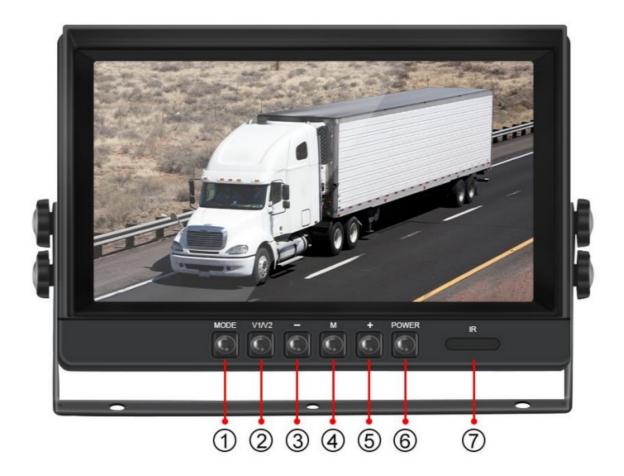

**MODE:** Confirm / Select button

**②V1V2:** Switch channel 3-: Increase button **⑤M:** Menu / Return button **4**+: Decrease button

**©POWER:** Turn On/Off button

**⑦IR:** IR Connector

## **Remote Controller introduction**

1. Standby: Power ON/OFF

2. Video Select: Channel switch


3. Menu: Go in setting page

4. Mode Select: Turn on / off recording

5. Function Down: Reduce when in setting page 6. Function Up: Increase when in setting page

Note: Button cell model: CR2025 3V

### Wiring instructions

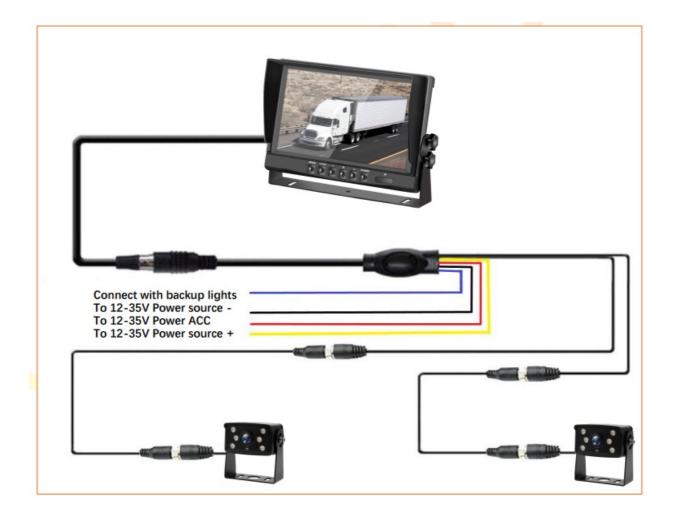

### The wiring method when product use, as follows

- 1. Connect Yellow wire to positive power(12-35V).
- 2. Connect Red wire to ACC.

The red wire is connected to the car ignition wire ACC switch (which is the gear switch before starting up the car's motor), when the car key is turned on, the device will start automatically, and if the vehicle key is turned off, it will automatically turn off.

- 3. Connect Black wire to negative power / Ground / Sheet Metal
- 4. Connect Blue wire (CH2 trigger) to reversing light.

#### The wiring method when product test, as follows

- 1. Connect Yellow wire and red wire together to the positive power (12-35V).
- 2. Connect Black wire to Ground.
- 3. Ignore Blue color trigger wires.
- Before installing it by professional person, please test it if works well, like image display, just in case and save your precious time. Please contact us if you have any question anytime, our email is <a href="mailto:Vekooto@outlook.com">Vekooto@outlook.com</a>

### Note:

1. Before connecting, you need to confirm that the voltage of the battery is between 12 - 35V.

- 2. After connecting the wires, pay attention to the insulation between the power cables to prevent. the power cables from short-circuiting the battery.
- 3. The yellow wire must be connected to the ignition wire, otherwise the device will not support the ignition switch.
- 4. When you install the 4pin cable, please target every pin to the hole, avoid breaking the pin.

#### **About Trailer installation**

If you need to extend the cable for your trailer, please tell us via our email: Vekooto@outlook.com

So we can send the extend cable for you, then you can extend it as the attached picture below shows, and you can disconnect them by Rotating the button of cable. And please tell us how much cable you need and how many feet you need. Email us your Amazon Order ID#:



#### How to install the monitor and camera

① Install the monitor (Ceiling bracket)

#### **Ceiling bracket**





# ② Install the monitor brackets




# 3 Install the camera





# **Basic Function**

**Time Setting Time** 

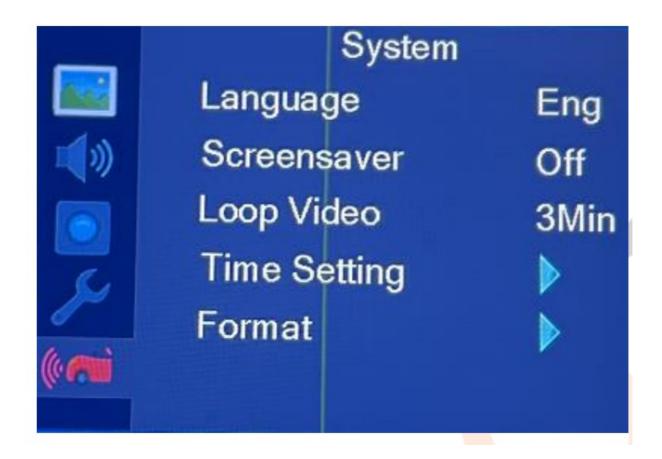



1. **Loop Video:** 1/3/5/10min


2. Format: Format the TF card content and system.

#### **Picture**

	Picture	
	Brightness	50
(()	Contrast	50
	Color	50
	Hue	50
	Reset	
((can)		

# Playback



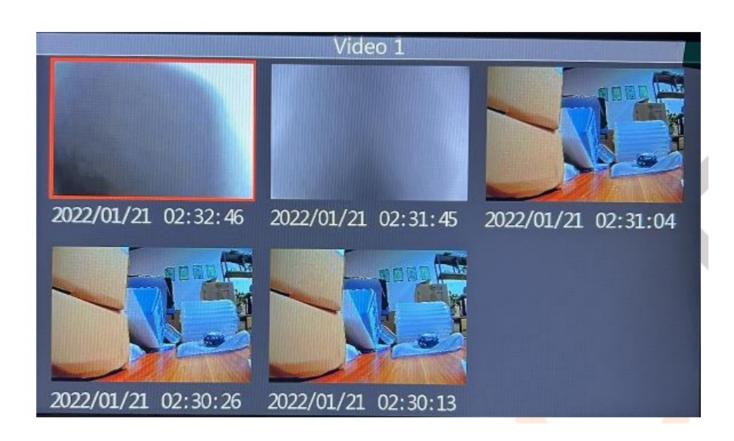

Press button to switch between 4 split modes.

#### **Function**





### **MENU FAQ**

(1). How to return interface while viewing the Video List?

A. Press the M/V1V2 button, then it can back to the monitor page. At other time, press the Menu button to go back the monitor page.

- (2). How to rotating the image?
- (3). How to record video?
- (4). What is the function of Trigger wire

A. If you connect the trigger line to the reversing light, the screen will automatically switch to the camera that connected to the reversing light when you reverse. You don't need to manually switch to the camera channel.

(5). How to find the TF card video on the computer

A: Plug and play. Use a card reader that can read and plug it into your computer.

A. Make sure the camera system can get the power 12-35 V. Check the camera that if get power? Please check the wire connection and sure it's tight and right, especially the power cable. Check the pins of the cable of the monitor and 4 pins cable of the camera. If awkward, broken, aligned. Contact us in time, we will help you solve it.

#### **CUSTOMERS SUPPORT**

Email: Vekooto@outlook.com



#### **Documents / Resources**



VEKOOTO N92 RV Backup System Wired Kit Camera [pdf] Installation Guide N92 RV Backup System Wired Kit Camera, N92, RV Backup System Wired Kit Camera, Backup System Wired Kit Camera, System Wired Kit Camera, Camera

#### References

User Manual

Manuals+,