



velleman HQPA10001 PORTABLE PUBLIC ADDRESS SYSTEM User Manual

[Home](#) » [Velleman](#) » velleman HQPA10001 PORTABLE PUBLIC ADDRESS SYSTEM User Manual 

velleman HQPA10001 PORTABLE PUBLIC ADDRESS SYSTEM User Manual



Contents

- 1 Introduction
- 2 Safety Instructions
- 3 General Guidelines
- 4 Overview
- 5 Operation
 - 5.1 Charging the Battery
 - 5.2 Wearing the System
 - 5.3 Using the Microphone
 - 5.4 Aux Input
 - 5.5 Using the System
- 6 Cleaning and Maintenance
- 7 Technical Specifications
- 8 Velleman® Service and Quality Warranty
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

Introduction

To all residents of the European Union
Important environmental information about this product



■ This symbol on the device or the package indicates that disposal of the device after its lifecycle could harm the environment. Do not dispose of the unit (or batteries) as unsorted municipal waste; it should be taken to a specialized company for recycling.

This device should be returned to your distributor or to a local recycling service. Respect the local environmental rules.

If in doubt, contact your local waste disposal authorities.

Thank you for choosing HQPower™! Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, do not install or use it and contact your dealer.

 
Safety Instructions



Read and understand this manual and all safety signs before using this appliance.



Indoor use only.



Power supply polarisation.

This device can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved. Children shall not play with

the device.

Cleaning and user maintenance shall not be made by children without supervision. The internal battery is not replaceable.

General Guidelines

Refer to the Velleman® Service and Quality Warranty on the last pages of this manual.

All modifications of the device are forbidden for safety reasons. Damage caused by user modifications to the device is not covered by the warranty.

 
Only use the device for its intended purpose. Using the device in an unauthorised way will void the warranty.

Damage caused by disregard of certain guidelines in this manual is not covered by the warranty and the dealer will not accept responsibility for any ensuing defects or problems.

Nor Velleman nv nor its dealers can be held responsible for any damage (extraordinary, incidental or indirect) – of any nature (financial, physical...) arising from the possession, use or failure of this product.

Keep this manual for future reference.

Overview

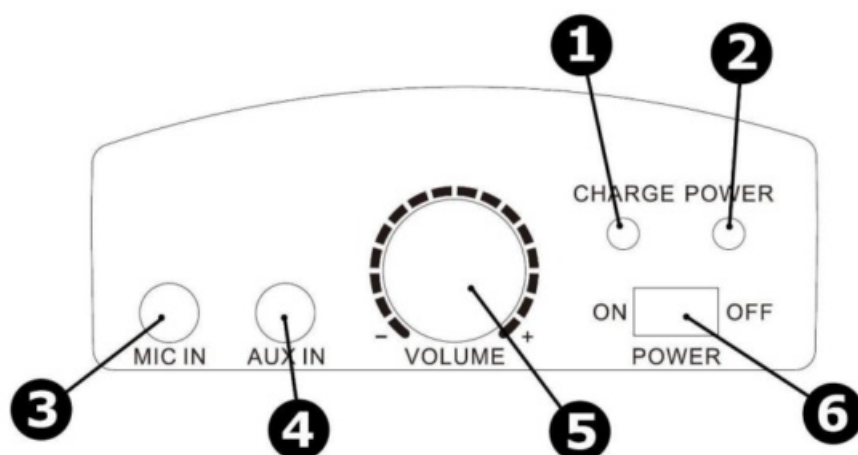

1. charge indicator
2. power indicator
3. microphone input
4. aux input
5. volume control
6. on-off switch

Operation

Charging the Battery



This device contains an internal rechargeable battery. When the device reaches end-of life, it must be disposed of in accordance with local regulations.

Please charge the system when the LED is dim. To do so:

 
1. Make sure the system is switched off.
2. Connect the system to the mains using the power adapter.
3. The LED will turn green as soon as the battery is fully charged. Do not overcharge and disconnect from the mains after charging is complete.

Wearing the System

Fix the system to your waist using the included belt.

Using the Microphone

1. Connect the included microphone to the system.
2. Slide the microphone set over your head and wear it as illustrated. Place the microphone at a distance of 20-30 mm from your mouth.

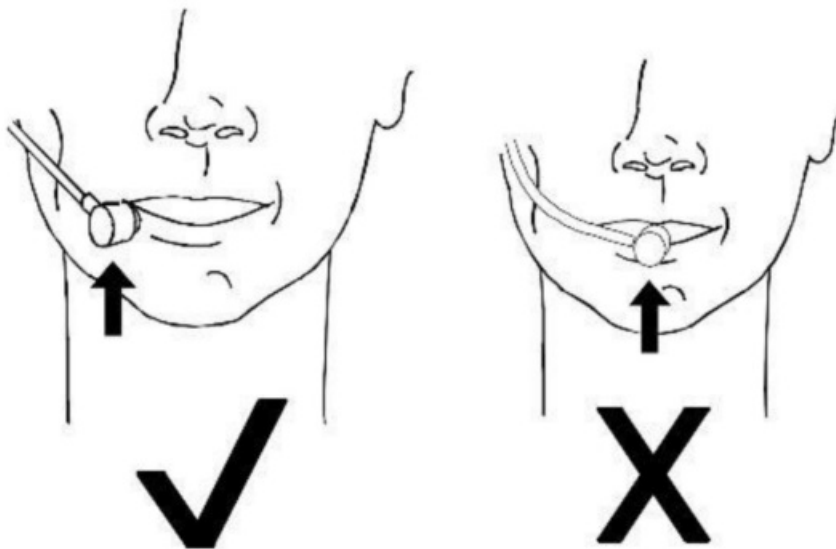

3. Talk into the microphone. Use the same full voice you would normally use to be heard in a conversation.

Aux Input

1. Connect an auxiliary device using a standard audio cable with 3.5 mm jack to the aux input.
2. You can now use the system as an amplifier.

Using the System

1. Make sure the system is fully charged for the best results.
2. Turn the volume control fully anticlockwise and switch on the system.
3. Gradually increase the volume to the desired level.
4. Disconnect the microphone and switch off after use.

Cleaning and Maintenance

Occasionally wipe with a damp cloth to keep it looking new. Do not use harsh chemicals, cleaning solvents or

strong detergents.

Technical Specifications

power supply: 10 VDC/300 mA (adaptor incl.)

operating voltage: 7.4 V

battery: Li-ion 7.4 V, 1000 mAh

battery operating time: \pm 6-8 h

battery charging time: \pm 6-10 h

output: 5 W @ 4 Ω

frequency response: 100 Hz – 13 kHz

dimensions: 85 x 85 x 50 mm

weight: 265 g

Use this device with original accessories only. Velleman nv cannot be held responsible in the event of damage or injury resulting from (incorrect) use of this device. For more info concerning this product and the latest version of this manual, please visit our website www.hqpower.eu. The information in this manual is subject to change without prior notice.

© COPYRIGHT NOTICE

The copyright to this manual is owned by Velleman nv. All worldwide rights reserved. No part of this manual may be copied, reproduced, translated or reduced to any electronic medium or otherwise without the prior written consent of the copyright holder.

Velleman® Service and Quality Warranty

Since its foundation in 1972, Velleman® acquired extensive experience in the electronics world and currently distributes its products in over 85 countries.

All our products fulfil strict quality requirements and legal stipulations in the EU. In order to ensure the quality, our products regularly go through an extra quality check, both by an internal quality department and by specialized external organisations. If, all precautionary measures notwithstanding, problems should occur, please make appeal to our warranty (see guarantee conditions).

General Warranty Conditions Concerning Consumer Products (for EU):

- All consumer products are subject to a 24-month warranty on production flaws and defective material as from the original date of purchase.
- Velleman® can decide to replace an article with an equivalent article, or to refund the retail value totally or partially when the complaint is valid and a free repair or replacement of the article is impossible, or if the expenses are out of proportion.

You will be delivered a replacing article or a refund at the value of 100% of the purchase price in case of a flaw occurred in the first year after the date of purchase and delivery, or a replacing article at 50% of the purchase price or a refund at the value of 50% of the retail value in case of a flaw occurred in the second year after the date of purchase and delivery.


- **Not covered by warranty:**
 - all direct or indirect damage caused after delivery to the article (e.g. by oxidation, shocks, falls, dust, dirt, humidity...), and by the article, as well as its contents (e.g. data loss), compensation for loss of profits;
 - consumable goods, parts or accessories that are subject to an aging process during normal use, such as batteries (rechargeable, nonrechargeable, built-in or replaceable), lamps, rubber parts, drive belts...

(unlimited list);

- flaws resulting from fire, water damage, lightning, accident, natural disaster, etc....;
 - flaws caused deliberately, negligently or resulting from improper handling, negligent maintenance, abusive use or use contrary to the manufacturer's instructions;
 - damage caused by a commercial, professional or collective use of the article (the warranty validity will be reduced to six (6) months when the article is used professionally);
 - damage resulting from an inappropriate packing and shipping of the article;
 - all damage caused by modification, repair or alteration performed by a third party without written permission by Velleman®.
- Articles to be repaired must be delivered to your Velleman® dealer, solidly packed (preferably in the original packaging), and be completed with the original receipt of purchase and a clear flaw description.
 - Hint: In order to save on cost and time, please reread the manual and check if the flaw is caused by obvious causes prior to presenting the article for repair. Note that returning a non-defective article can also involve handling costs.
 - Repairs occurring after warranty expiration are subject to shipping costs.
 - The above conditions are without prejudice to all commercial warranties.

The above enumeration is subject to modification according to the article (see article's manual).

Documents / Resources

	<p>velleman HQPA10001 PORTABLE PUBLIC ADDRESS SYSTEM [pdf] User Manual HQPA10001 PORTABLE PUBLIC ADDRESS SYSTEM, PORTABLE PUBLIC ADDRESS SYSTEM, ADDRESS SYSTEM</p>
---	---

References

- [🌐 Details â€œ Own brands â€œ Velleman â€œ Wholesaler and developer of electronics](#)
- [📺 Velleman â€œ Wholesaler and developer of electronics](#)