



# velleman RCSOST Remote Control Socket Set User Manual

[Home](#) » [Velleman](#) » velleman RCSOST Remote Control Socket Set User Manual 

## Contents

- [1 velleman RCSOST Remote Control Socket Set](#)
- [2 Introduction](#)
- [3 Safety Instructions](#)
- [4 General Guidelines](#)
- [5 Battery](#)
- [6 Installation and Operation](#)
- [7 Maintenance](#)
- [8 Specifications](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)

# Velleman

velleman RCSOST Remote Control Socket Set



## Introduction

To all residents of the European Union Important environmental information about this product This symbol on the device or the package indicates that disposal of the device after its lifecycle could harm the environment. Do not dispose of the unit (or batteries) as unsorted municipal waste; it should be taken to a specialized company for recycling. This device should be returned to your distributor or to a local recycling service. Respect the local environmental rules. If in doubt, contact your local waste disposal authorities. Thank you for choosing Perel! Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, do not install or use it and contact your dealer.

## Safety Instructions

- This device can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and user maintenance shall not be made by children without supervision.
- There are no user-serviceable parts inside the device. Refer to an authorized dealer for service and/or spare parts.
- Do not immerge the device in any liquid. Keep the main unit away from high heat and fire.
- For indoor use only.
- Make sure the connected appliance does not exceed the voltage and frequency ratings as mentioned in the specifications.
- Do not interconnect the control sockets.
- The safety standard for household products does not permit remote control of all appliances. The receiver sockets and remote control cannot be used to start appliances that could be hazardous, such as curling irons, deep fryers, heating blankets and hairdryers.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Switch of micro-gap construction.

## General Guidelines

- Refer to the Velleman® Service and Quality Warranty on [www.velleman.eu](http://www.velleman.eu).
- Protect this device from shocks and abuse. Avoid brute force when operating the device.
- Familiarise yourself with the functions of the device before actually using it.
- All modifications of the device are forbidden for safety reasons. Damage caused by user modifications to the device is not covered by the warranty.
- Only use the device for its intended purpose. Using the device in an unauthorised way will void the warranty.
- Damage caused by disregard of certain guidelines in this manual is not covered by the warranty and the dealer will not accept responsibility for any ensuing defects or problems.
- Keep this manual for future reference.

## Battery

**Warning:** Do not puncture batteries or throw them in fire as they may explode. Do not attempt to recharge non-rechargeable batteries (alkaline). Dispose of batteries in accordance with local regulations. Keep batteries away from children.

## Installation and Operation

- Insert the receiver socket into the mains socket.
- Insert the plug of the appliance into the receiver socket. Make sure the appliance is switched off before connecting.
- Press the corresponding button on the transmitter to switch the connected appliance on or off.
- Change the battery when the indicator on the transmitter dims.

## Maintenance

Occasionally wipe with a damp cloth to keep it looking new. Do not use harsh chemicals, cleaning solvents or strong detergents.


## Specifications

- code system ..... fixed (no setting required)
- transmission range .....  $\leq 25$  m
- frequency ..... 433.92 MHz
- transmitter
- mode ..... on/off
- battery type ..... 3 V CR2032 (incl.)
- receiver
- mode ..... on/off controlled by transmitter
- child protection
- max. power ..... 1000 W
- voltage ..... 230 V~
- current ..... 5 A



Use this device with original accessories only. Velleman nv cannot be held responsible in the event of damage or injury resulting from (incorrect) use of this device. For more info concerning this product and the latest version

of this manual, please visit our website [www.perel.eu](http://www.perel.eu). The information in this manual is subject to change without prior notice.

## Documents / Resources

	<a href="#">velleman RCSOST Remote Control Socket Set</a> [pdf] User Manual RCSOST, RCSOST-G, Remote Control Socket Set, Socket Set
---	--

## References

-  [Details â€œ Own brands â€œ Velleman â€œ Wholesaler and developer of electronics](#)
-  [Velleman â€œ Wholesaler and developer of electronics](#)