



velleman TIMER10 Countdown Timer with Alarm User Manual

[Home](#) » [Velleman](#) » velleman TIMER10 Countdown Timer with Alarm User Manual 

Contents

- [1 velleman TIMER10 Countdown Timer with Alarm](#)
- [2 Product Information](#)
- [3 Introduction](#)
- [4 General Guidelines](#)
- [5 Operation](#)
- [6 Technical Specifications](#)
- [7 Warranty](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

velleman®

velleman TIMER10 Countdown Timer with Alarm



Product Information

- **Product Name:** TIMER10
- **Model Number:** N/A

Introduction: The TIMER10 is a compact and versatile timer device that can be used for various timing purposes. It features a countdown or up function with a maximum time limit of 99 minutes and 59 seconds. The device can be mounted using the included clip or magnet, or it can be placed upright on a table. It is powered by a single 1.5V LR44 battery (V13GAC) which is included in the package.

General Guidelines: When using the TIMER10, it is important to follow these general guidelines for proper operation and to ensure the longevity of the device:

- Protect the device against extreme temperatures and dust.
- Keep the device away from rain, moisture, splashing, and dripping liquids.
- Do not modify the device as it may void the warranty.
- Use the device only for its intended purpose.
- Disregarding the guidelines in the manual may result in warranty void and the dealer will not accept responsibility for any ensuing defects or problems.

Introduction

To all residents of the European Union

Important environmental information about this product This symbol on the device or the package indicates that disposal of the device after its lifecycle could harm the environment. Do not dispose of the unit (or batteries) as unsorted municipal waste; it should be taken to a specialized company for recycling. This device should be returned to your distributor or to a local recycling service. Respect the local environmental rules.

If in doubt, contact your local waste disposal authorities.

Thank you for choosing Velleman! Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, don't install or use it and contact your dealer.

General Guidelines

Refer to the Velleman® Service and Quality Warranty on the last pages of this manual.

- Keep the device away from children and unauthorised users.
- Protect this device from shocks and abuse. Avoid brute force when operating the device.
- Protect the device against extreme temperatures and dust.
- Keep this device away from rain, moisture, splashing and dripping liquids.
- Damage caused by user modifications to the device is not covered by the warranty.
- Only use the device for its intended purpose. Using the device in an unauthorised way will void the warranty.
- Damage caused by disregard of certain guidelines in this manual is not covered by the warranty and the dealer will not accept responsibility for any ensuing defects or problems.

Features

- count down or up: max. 99 min. 59 sec.
- mounting: clip or magnet
- can also be placed upright

Operation

- Slide the battery compartment at the back of the timer open, remove the plastic protective tab and close the battery compartment.
 - Press the MIN button to increase the minutes; press the SEC button to increase the seconds. Press and hold down the button to increase setting speed.
 - Pressing the MIN and SEC buttons simultaneously will reset the time to 00:00 (zero).
 - Press the START/STOP button to start countdown. When the timer reaches 00:00, an alarm will sound.
 - Press any button to stop the alarm.
- Note:** when the timer is at 00:00 and the start button is pressed, the timer will start counting up.
- Place the device on a table or use the clip or the magnet at the back.

Technical Specifications

colour	white
dimensions	76 x 45 x 16 mm
power supply	1 x 1.5V LR44 battery (V13GAC, included)
LCD	38 x 17 mm
weight	± 35 g

Use this device with original accessories only. Velleman nv cannot be held responsible in the event of damage or injury resulting from (incorrect) use of this device. For more info concerning this product and the latest version of this manual, please visit our website www.velleman.eu. The information in this manual is subject to change without prior notice.

Warranty

Velleman® Service and Quality Warranty

Since its foundation in 1972, Velleman® acquired extensive experience in the electronics world and currently distributes its products in over 85 countries. All our products fulfil strict quality requirements and legal stipulations in the EU. In order to ensure the quality, our products regularly go through an extra quality check, both by an internal quality department and by specialized external organizations. If, all precautionary measures notwithstanding, problems should occur, please make appeal to our warranty (see guarantee conditions).

General Warranty Conditions Concerning Consumer Products (for EU):

- All consumer products are subject to a 24-month warranty on production flaws and defective material as from the original date of purchase.
- Velleman® can decide to replace an article with an equivalent article, or to refund the retail value totally or partially when the complaint is valid and a free repair or replacement of the article is impossible, or if the expenses are out of proportion.

You will be delivered a replacing article or a refund at the value of 100% of the purchase price in case of a flaw occurred in the first year after the date of purchase and delivery, or a replacing article at 50% of the purchase price or a refund at the value of 50% of the retail value in case of a flaw occurred in the second year after the date of purchase and delivery.

- **Not covered by warranty:**
 - all direct or indirect damage caused after delivery to the article (e.g. by oxidation, shocks, falls, dust, dirt,

- humidity...), and by the article, as well as its contents (e.g. data loss), compensation for loss of profits;
 - consumable goods, parts or accessories that are subject to an aging process during normal use, such as batteries (rechargeable, nonrechargeable, built-in or replaceable), lamps, rubber parts, drive belts... (unlimited list);
 - flaws resulting from fire, water damage, lightning, accident, natural disaster, etc....;
 - flaws caused deliberately, negligently or resulting from improper handling, negligent maintenance, abusive use or use contrary to the manufacturer's instructions;
 - damage caused by commercial, professional or collective use of the article (the warranty validity will be reduced to six (6) months when the article is used professionally);
 - damage resulting from inappropriate packing and shipping of the article;
 - all damage caused by modification, repair or alteration performed by a third party without written permission by Velleman®.
 - Articles to be repaired must be delivered to your Velleman® dealer, solidly packed (preferably in the original packaging), and be completed with the original receipt of purchase and a clear flaw description.
 - **Hint:** In order to save on cost and time, please reread the manual and check if the flaw is caused by obvious causes prior to presenting the article for repair. Note that returning a non-defective article can also involve handling costs.
 - Repairs occurring after warranty expiration are subject to shipping costs.
 - The above conditions are without prejudice to all commercial warranties.
- The above enumeration is subject to modification according to the article (see article's manual).


Made in PRC

Imported by Velleman nv

Legen Heirweg 33, 9890 Gavere, Belgium

www.velleman.eu

Documents / Resources

	<p>velleman TIMER10 Countdown Timer with Alarm [pdf] User Manual</p> <p>TIMER10, TIMER10 Countdown Timer with Alarm, Countdown Timer with Alarm, TIMER10 Countdown Timer, Countdown Timer, Timer</p>
---	--

References

-  [Velleman â€“ Wholesaler and developer of electronics](#)