



velleman VTUSC2 ULTRASONIC CLEANER WITH TIMER User Manual

[Home](#) » [Velleman](#) » velleman VTUSC2 ULTRASONIC CLEANER WITH TIMER User Manual 

Contents

1 VTUSC2 ULTRASONIC CLEANER WITH TIMER

- 1.1 ULTRASONIC CLEANER WITH TIMER
- 1.2 1. Introduction
- 1.3 2. Safety Instructions
- 1.4 3. General Guidelines
- 1.5 4. Overview
- 1.6 5. Surgery
- 1.7 6. Cleaning tips
- 1.8 7. Cleaning and maintenance
- 1.9 8. Technical Specifications
- 2 Documents / Resources
- 2.1 References
- 3 Related Posts


VTUSC2 ULTRASONIC CLEANER WITH TIMER

VTUSC2

PEREL®



USER MANUAL

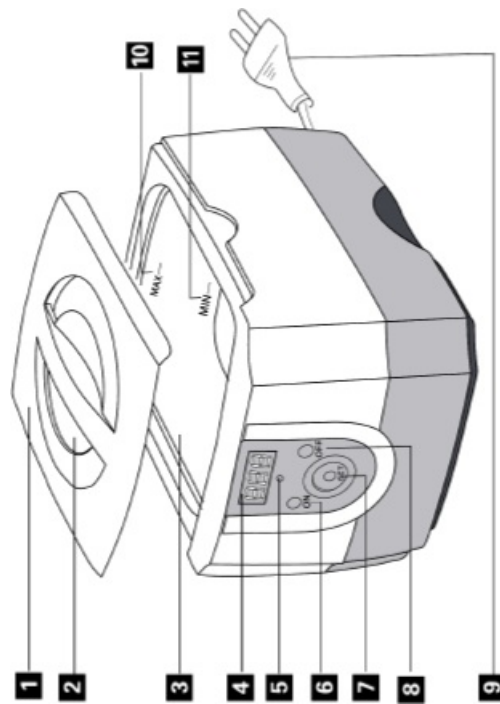

USER MANUAL

ULTRASONIC CLEANER WITH TIMER

1. Introduction

To all residents of the European Union

Important environmental information about this product



This symbol on the device or the package indicates that disposal of the device after its lifecycle could harm the environment. Do not dispose of the unit (or batteries) as unsorted municipal waste; it should be taken to a specialized company for recycling. This device should be returned to your distributor or to a local recycling service. Respect the local environmental rules.

If in doubt, contact your local waste disposal authorities.

Thank you for choosing Perel! Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, do not install or use it and contact your dealer.

2. Safety Instructions



Read and understand this manual and all safety signs before using this appliance.



Indoor use only.



grade 2

- This device can be used by children aged from 8 years and above, and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction

concerning the use of the device in a safe way and understand the hazards involved. Children shall not play with the device. Cleaning and users maintenance shall not be made by children without supervision.

- Damage caused by disregard of certain guidelines in this manual is not covered by the warranty and the dealer will not accept responsibility for any resulting defects or problems.
- Do not disassemble the cleaner. There are no user-serviceable parts.
- Never clean the tank with abrasive or corrosive chemicals.
- Unplug the cleaner from the mains before filling up the tank. Fill the tank up to the limit level only.
- Make sure that the available voltage does not exceed the voltage stated in the specifications of this manual.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Disconnect the device from the mains to clean it or when it is not in use. Handle the power cord by the plug only. Avoid touching the power cord with wet hands.
- Only use the cleaner when the tank is filled with water.
- Never leave the cleaner unattended when plugged in
- Keep the cleaner away from heat sources such as radiators. Operate on a dry and level surface.
- Do not immerse the cleaner.
- This cleaner is suited to clean a wide range of materials. However, we recommend not to clean the following items:
 - o delicate materials such as hawksbill, pearl, emerald, ivory, coral, agate...;
 - o brittle metals such as solder;
 - o non-water-resistant watches;
 - o other materials such as wood, contact lenses, ceramic, camera filters...
- Note that damage caused by user modifications to the device is not covered by the warranty.

3. General Guidelines

- Refer to the Velleman® Service and Quality Warranty on the last pages of this manual.
- All modifications of the device are forbidden for safety reasons. Damage caused by user modifications to the device is not covered by the warranty.
- Only use the device for its intended purpose. Using the device in an unauthorized way will void the warranty.
- Damage caused by disregard of certain guidelines in this manual is not covered by the warranty and the dealer will not accept responsibility for any ensuing defects or problems.
- Nor Velleman Group nv nor its dealers can be held responsible for any damage (extraordinary, incidental or indirect) – of any nature (financial, physical...) arising from the possession, use or failure of this product.
- Keep this manual for future reference.

4. Overview

Refer to the illustrations on page 2 of this manual.

1	lid
2	viewing window
3	tank
4	digital display
5	indication light
6	on button

7	setting button
8th	button
9	supply cord
10	maximum marking
11	minimum marking

5.Surgery

Open the lid and place the object to be cleaned nicely spread onto the grill.

Fill the tank with tap water. Mind the markings (MAX and MIN).

Connect the cleaner to the mains using the power cord.

Press the SET button and select the working cycle (180 is the default working cycle).

Press ON to start the cleaning process. The red LED will light and the timer will count down. You also want to hear the cleaner buzz. The red LED and the cleaner will switch off as soon as the timer reaches 000 . Press OFF to manually stop the cleaning process or ON to repeat the cleaning process with the same working cycle.

When finished, unplug the cleaner from the mains and take out the object out of the tank. Remove the water from the tank and dry the cleaner.

6. Cleaning tips

General Cleaning

Clean any item using regular tap water. Put the object onto the grill and fill the tank so as to completely submerge the object.

Cleaning Liquids

Add a tablespoon (4 ml) of regular washing-up liquid to the water when cleaning tableware. Remember to rinse the tableware with clean water.

7. Cleaning and maintenance

Use this cleaner only when filled with water.

Unplug and empty the tank after each use. Never keep the tank filled with water. Wipe the device regularly with a dry, lint-free cloth. Do not use alcohol or solvents. Disconnect the device from the mains prior to maintenance activities.

Store the cleaner in a dry and cool place.

8. Technical Specifications


power supply	220-240 V~, 50 Hz
power consumption	70 W
tank material	stainless steel SUS304
dimensions	
general	230 x 180 x 160 mm
basket	160 x 128 x 46 mm
tank capacity	1.4 L
ultrasonic frequency	42 kHz
timer	5 cycles, with digital display (90-180-280-380-480 s)

Use this device with original accessories only. Velleman Group nv cannot be held responsible in the event of damage or injury resulting from (incorrect) use of this device. For more info concerning this product and the latest version of this manual, please visit our website www.velleman.eu. The information in this manual is subject to change without prior notice.

© COPYRIGHT NOTICE

The copyright to this manual is owned by Velleman Group nv. All worldwide rights reserved. No part of this manual may be copied, reproduced, translated or reduced to any electronic medium or otherwise without the prior written consent of the copyright holder.

Documents / Resources



PEREL

VTUSC2

[velleman VTUSC2 ULTRASONIC CLEANER WITH TIMER](#) [pdf] User Manual

VTUSC2 ULTRASONIC CLEANER WITH TIMER, ULTRASONIC CLEANER WITH TIMER, CLEANER WITH TIMER

References

- Velleman – Wholesaler and developer of electronics