




velleman WST111 Adjustable Interval Timer Kit User Manual

[Home](#) » [Velleman](#) » velleman WST111 Adjustable Interval Timer Kit User Manual 

*velleman WST111 Adjustable Interval
Timer Kit User Manual*




Soldering

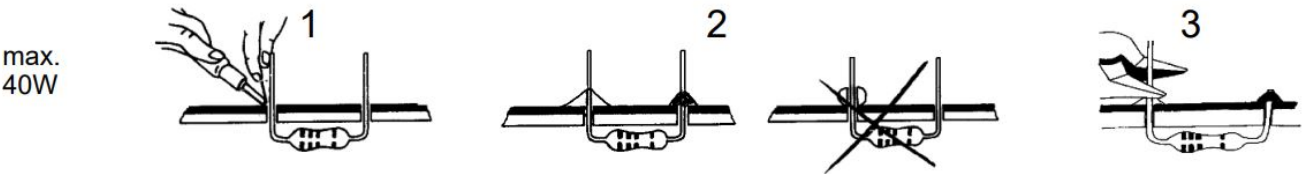

Contents

- [1 1 Resistor](#)
- [2 2 DIODE](#)
- [3 3 Trim potentiometer](#)
- [4 4 Capacitor](#)
- [5 5 LED](#)
- [6 6 IC-sockets](#)
- [7 7 Terminal blocks](#)
- [8 8 Electrolytic capacitor](#)
- [9 9 Relay](#)
- [10 10 IC – CI](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

1 Resistor

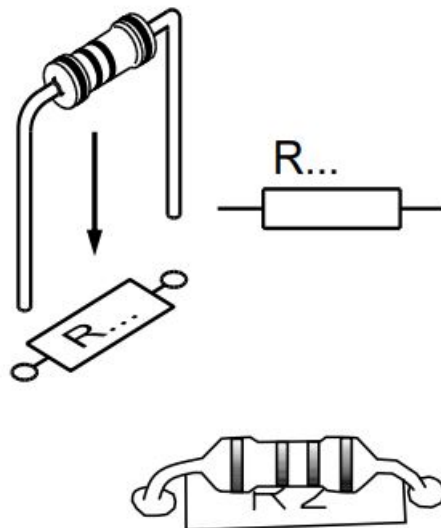


◇ R1 ... R3: 1K

Brown, Black, Red

2 DIODE


Watch the polarity

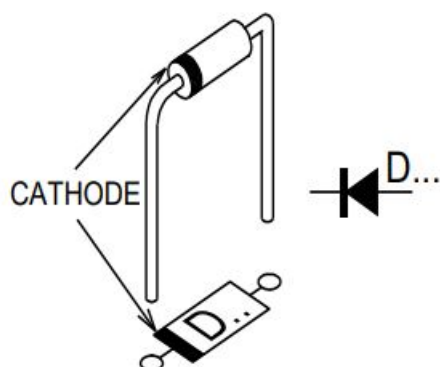


◇ D1: 1N4148
◇ D2: 1N4148
D3: 1N4007



3 Trim potentiometer

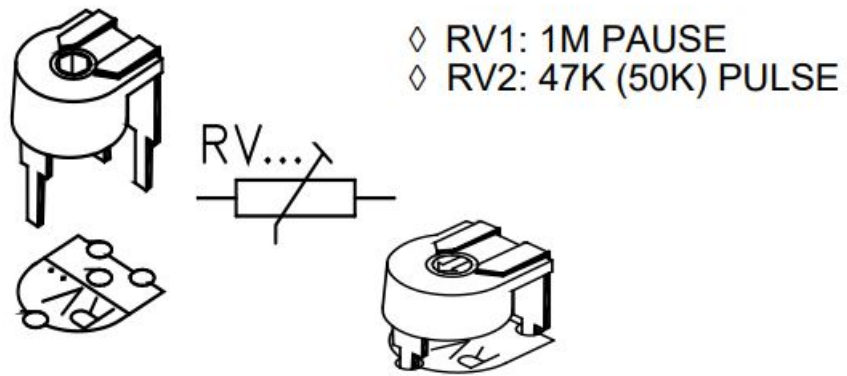


4 Capacitor

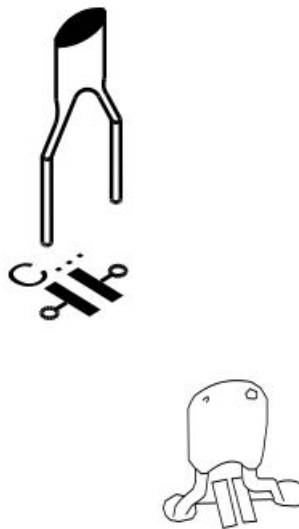

◇ C1: 100nF (104)


5 LED

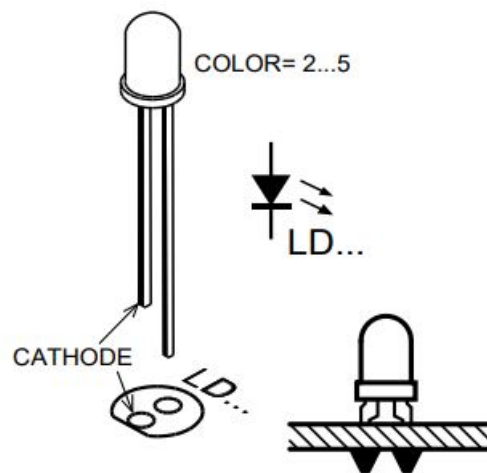

◇ LD1: 3mm


6 IC-sockets

Watch the notch

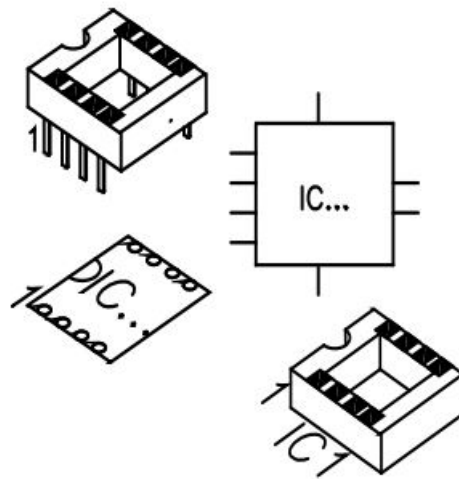

◇ IC1 : 8p


7 Terminal blocks

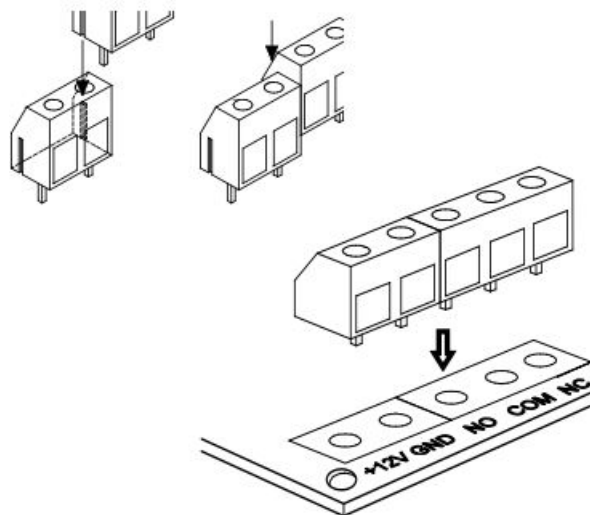


◇ J1 + J2

8 Electrolytic capacitor

Watch the polarity !

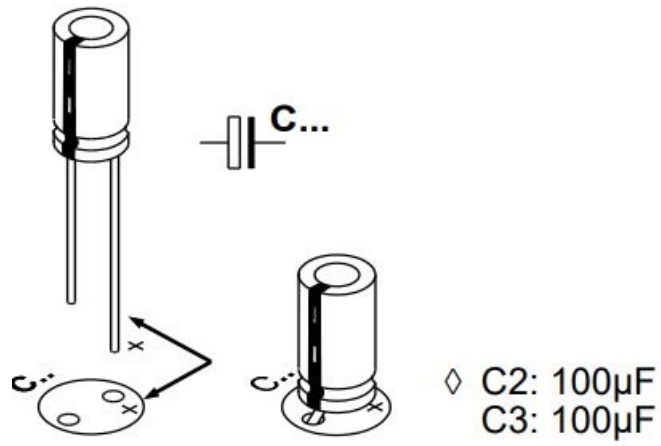


9 Relay


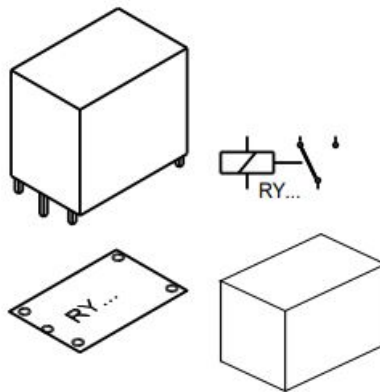


◇ RY1: 1C

10 IC – CI

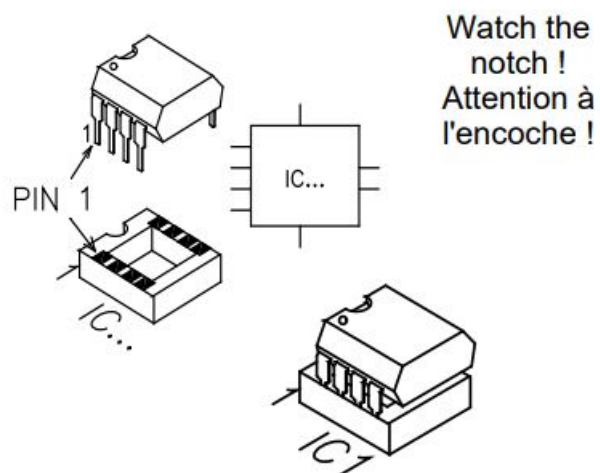


◇ IC1: 555

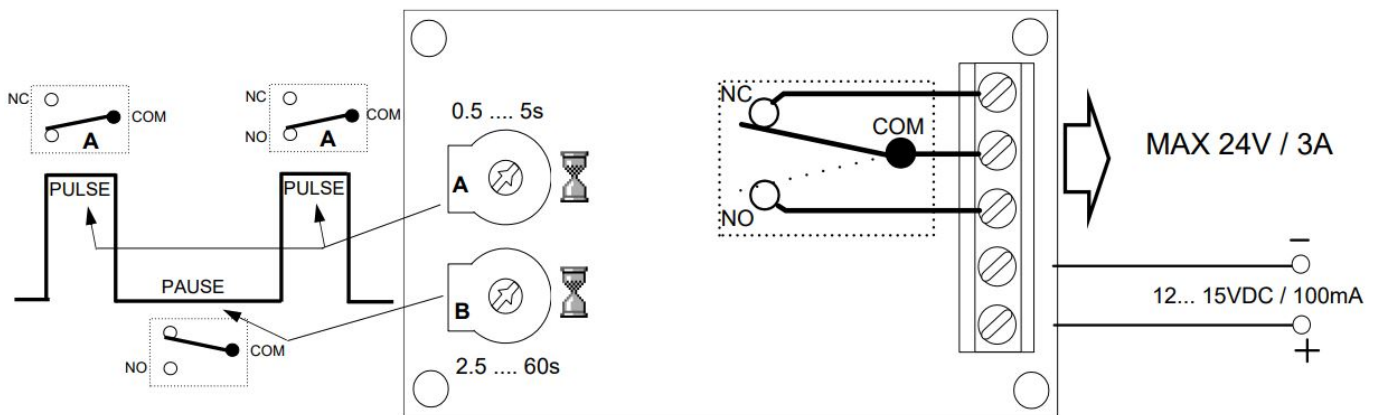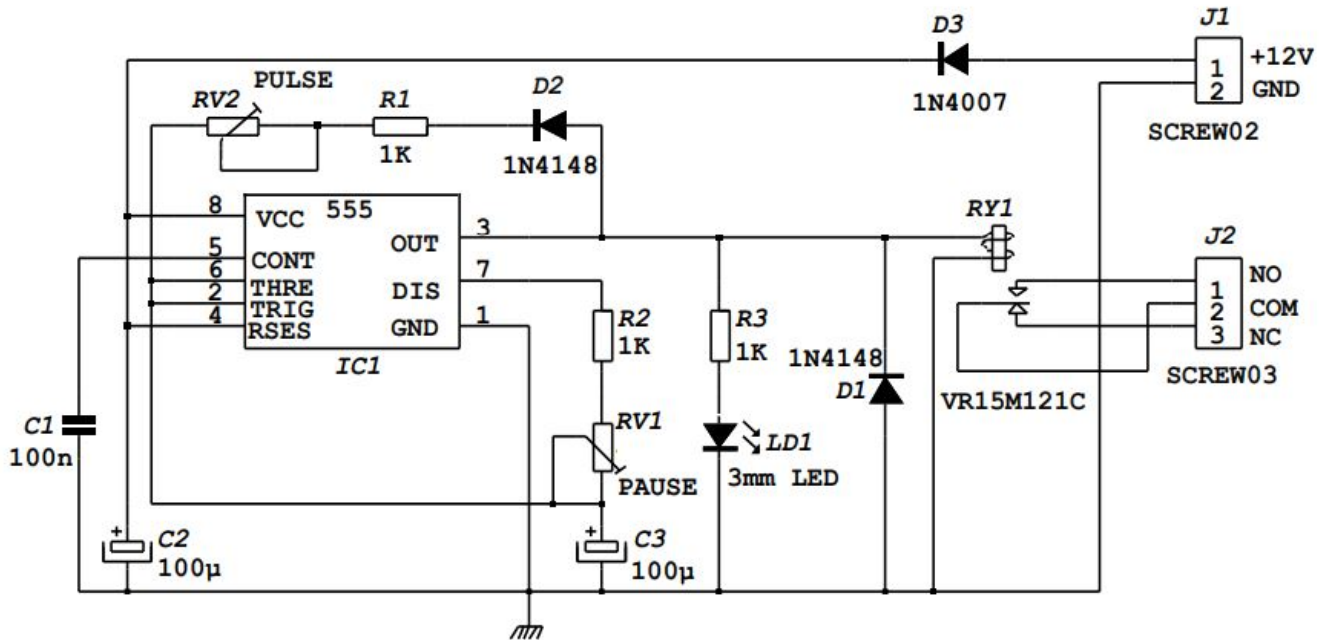

TO ALL RESIDENTS OF THE EUROPEAN UNION

Important environmental information about this product This symbol on this unit or the package, indicates that disposal of this unit after its lifecycle could harm the environment. Do not dispose the unit as unsorted municipal waste; it should be disposed by a specialized company for recycling. This unit should be returned to your distributor or to a local recycling service. Respect the local environmental rules. If any doubt contact your local authorities about waste disposal rules.

Documents / Resources

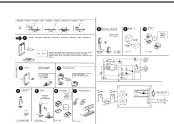

[velleman WST111 Adjustable Interval Timer Kit](#) [pdf] User Manual

WST111 Adjustable Interval Timer Kit, WST111, Adjustable Interval Timer Kit, Timer Kit