



## velleman WT33 Dcf-Controlled Clock User Manual

[Home](#) » [Velleman](#) » velleman WT33 Dcf-Controlled Clock User Manual 

# velleman®

WT33 Dcf-Controlled Clock  
User Manual



### Contents

- [1 Introduction](#)
- [2 Operation](#)
- [3 Technical Specifications](#)
- [4 Documents / Resources](#)
  - [4.1 References](#)
- [5 Related Posts](#)

### Introduction

## To all residents of the European Union

### Important environmental information about this product



This symbol on the device or the package indicates that disposal of the device after its lifecycle could harm the environment.

Do not dispose of the unit (or batteries) as unsorted municipal waste; it should be taken to a specialized company for recycling.

This device should be returned to your distributor or to a local recycling service.

Respect the local environmental rules.

### **If in doubt, contact your local waste disposal authorities.**

Thank you for choosing Velleman! Please read the manual thoroughly before bringing this device into service. If the device was damaged in transit, don't install or use it and contact your dealer.

## Operation

### • Time Setting

In time display, hold SET pressed for 2 seconds to enter the time setting mode. Press SET consequently to select the language, 12/24h mode, seconds, hours, minutes, year, month and date. Press once more to confirm. Press UP/CF to modify.

### • Alarm Setting

In time display, press MODE to select the alarm display mode. Hold SET pressed for 2 seconds to enter the alarm setting mode. Press SET consequently to select the hours and minutes. Press once more to confirm. Press UP/CF to modify. In alarm display, press UP/CF to turn the alarm on or off, press SNOOZE/LIGHT to turn on the backlight or to set the alarm in snooze mode.

### • Temperature Display

In time display, press UP/CF to switch the temperature display between °C and °F.

### • Summer Time

In time display, press DST to switch the summer time display on or off.

### • RCC Time Reception

In time display, hold UP/CF pressed for 2 seconds to enter the RCC time reception mode. The clock will automatically receive a time signal once every day. Note that the duration of reception depends on the signal strength. Press UP/CF to abort.

## Technical Specifications

Power Supply	2 x 1.5V AAA batteries (order code LR03C, not incl.)
Dimensions	80 x 46 x 87mm
Weight	100g


**Use this device with original accessories only. Velleman nv cannot be held responsible in the event of damage or injury resulted from (incorrect) use of this device.**

**For more info concerning this product, please visit our website [www.velleman.eu](http://www.velleman.eu).**

**The information in this manual is subject to change without prior notice.**

# velleman®

Documents / Resources

	<p><a href="#">velleman WT33 Dcf-Controlled Clock</a> [pdf] User Manual</p> <p>WT33 Dcf-Controlled Clock, WT33, Dcf-Controlled Clock, Controlled Clock, Clock</p>
---	---

References

-  [Velleman – Wholesaler and developer of electronics](#)