



VENTURE AC86350 Sensor Handheld Programmer Instructions

[Home](#) » [VENTURE](#) » VENTURE AC86350 Sensor Handheld Programmer Instructions 

Contents

- [1 VENTURE AC86350 Sensor Handheld Programmer](#)
- [2 Instructions](#)
- [3 Remote for sensor PH86347](#)
- [4 Memory Mode \(Commissioning\)](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



VENTURE AC86350 Sensor Handheld Programmer




Instructions

- **ON:** Turns ON luminaires
- **OFF:** Turns OFF luminaires
- **TEST:** Test mode will last 5 mins then return to previous setting. Test mode will hold time 2 seconds, SDL 50% and standby time 2 seconds.
- **RESET:** Press “RESET” button and settings will change back to the defaults.

TRIM-LEVEL:	100%	STANDBY DIM:	50%
SENSITIVITY:	High	STANDBY TIME:	30 min
HOLD TIME:	5 min	PHOTOCELL:	Disabled
F MODE DAYLIGHT HARVESTING: Disabled			

- **DIM+/-:** Remote will manually dim luminaire up or down by increments of 0.5 volts. Must be smooth dimming if holding dimming button.
- **TRIM-LEVEL:** Set maximum threshold value to 50/75/100% (Default = 100%)
- **SENSITIVITY:** OFF (PIR OFF enter PC ON/OFF function) / Low (50%) / High (100%) (Default = High)
- **HOLD TIME:** Time of no occupancy after which fixture goes to standby: 30s/5min/15min/30min (Default = 5min)
- **F MODE DAYLIGHT HARVESTING:** (Enable/Disable) Measure and set feature to allow the fixture to maintain a light level if turned ON. (Default = Disabled)
- **STANDBY DIM:** Select any Standby Dim level: 0/10/30/50% (Default = 50%)
- **STANDBY TIME:** Select Standby time: 10s/5min/15min/30min/1h/ means the standby time is infinite and the fixture is effectively controlled by the daylight sensor) (Default = 30min)
- **PHOTOCELL:** LOW (10fc) and HIGH (50fc) settings. Default = Disabled. CAL Collecting the current Lux Level.
- **MODE:** Set settings to a Program profile A to D.
- **SEND:** Send settings to sensor

Remote for sensor PH86347

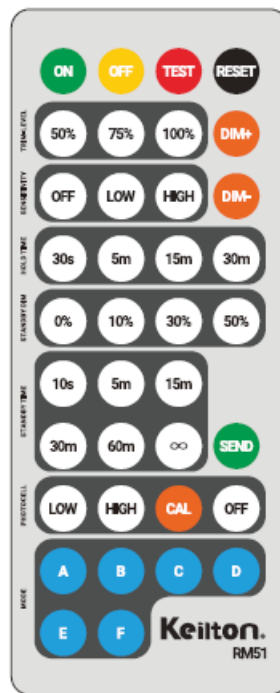

Memory Mode (Commissioning)

To begin commissioning, follow the steps below:

1. Select either A, B, C, D.
2. Indicator lights on the remote will flash to indicate the current saved settings.
3. Settings can be configured by pressing appropriate buttons in the highlighted gray area of the remote. (TRIM-LEVEL, SENSITIVITY, HOLD TIME, STANDBY DIM, STANDBY TIME, and PHOTOCELL). Review selected settings and make changes as necessary.
4. Point IR remote to desired luminaire for configuration and press “SEND”.
5. If configuration is successful, luminaire will flash two times suggesting settings are saved. Any parameter changes to the current saved settings on A to F will override previous settings and will be automatically saved on the remote. If configuring multiple luminaires, select the configured memory mode A to E then follow steps 4 and 5. E Mode allows visual adjustment to choose the desired dimming level.


Continuous Adjustment Mode or Daylight Harvesting (F Mode)

Enables dimmability in response to daylight availability.

1. Point IR remote to desired luminaire.
2. Press “ON” then press DIM+ or DIM- to adjust dimming level.
3. Press “F”, indicator lights on the remote will indicate current saved settings. Note: only TRIM-LEVEL, SENSITIVITY and HOLD TIME can be selected for Daylight Harvesting settings.
4. Review selected settings and make changes as necessary. Press “SEND”.
5. If configuration is successful, luminaire will flash twice to confirm setting saved. If configuring multiple luminaires, select the configured Daylight Harvesting settings then follow steps 4 and 5.

- 6675 Parkland Blvd., Suite 100
- Solon, Ohio 44139
- Tel. 800-451-2606
- VentureLighting.com

Documents / Resources

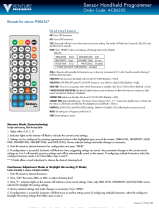	<p>VENTURE AC86350 Sensor Handheld Programmer [pdf] Instructions AC86350 Sensor Handheld Programmer, AC86350, Sensor Handheld Programmer, Handheld Programmer</p>
---	---

References

-  [LED Lighting Products](#)

Manuals+.