 




Vera ELW 5677 Computer Desk with Top Open Shelf Installation Guide

[Home](#) » [vera](#) » Vera ELW 5677 Computer Desk with Top Open Shelf Installation Guide 

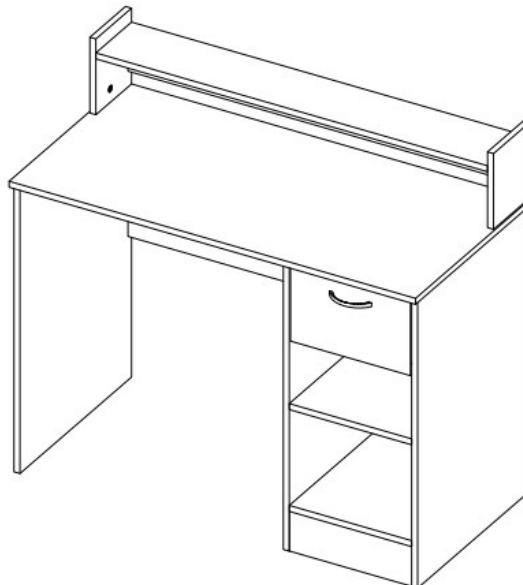

Height: 36,73 in
Width: 40,16 in
Depth: 19,69 in
COMPUTER DESK

Contents

- 1 ELW 5677 Computer Desk with Top Open Shelf
- 2 ASSEMBLY HARDWARE
- 3 ASSEMBLY PARTS
- 4 MAX SUGGESTED LOADS
- 5 ASSEMBLY RECOMMENDATIONS
- 6 WARRANTY POLICY
- 7 Documents / Resources
 - 7.1 References

ELW 5677 Computer Desk with Top Open Shelf



IMPORTANT RECOMMENDATIONS

Do not paint the cabinet.

The cabinet **MUST** be used exclusively indoors, do not expose to direct sun.

Clean metallic hardware with a dry cloth.

Do **NOT** overload the cabinet (see suggested load Do not hit or hammer the cabinet (just when indicated).

Clean with a slightly damp cloth, use gentle soap Do not drag, lift and move between two people.

 
Avoid direct contact with water, fire or exposure to heat sources.



WARNING

Never allow children to climb or manipulate the cabinet, furniture tip over can cause serious injuries or death.

REQUIRED TOOLS*

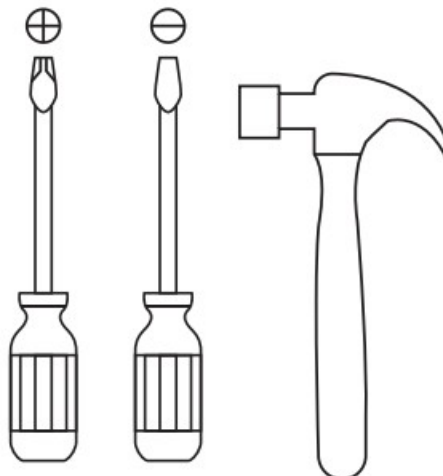


*Not included, and not shown actual size.


ASSEMBLY HARDWARE

Please check that the hardware content is correct.

 If any item is missing, please call to our customer service line.

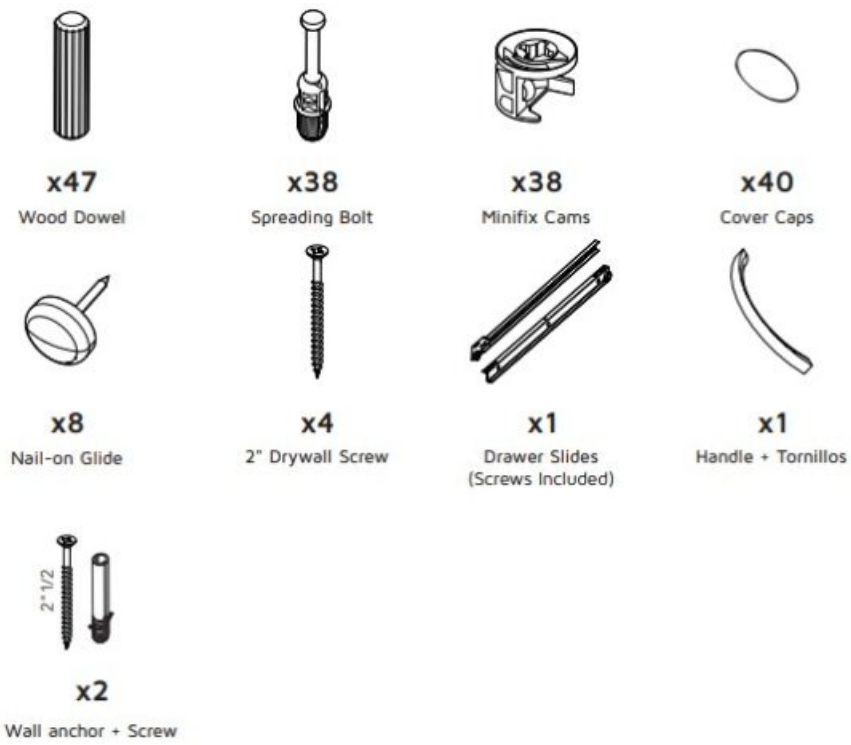


ASSEMBLY PARTS

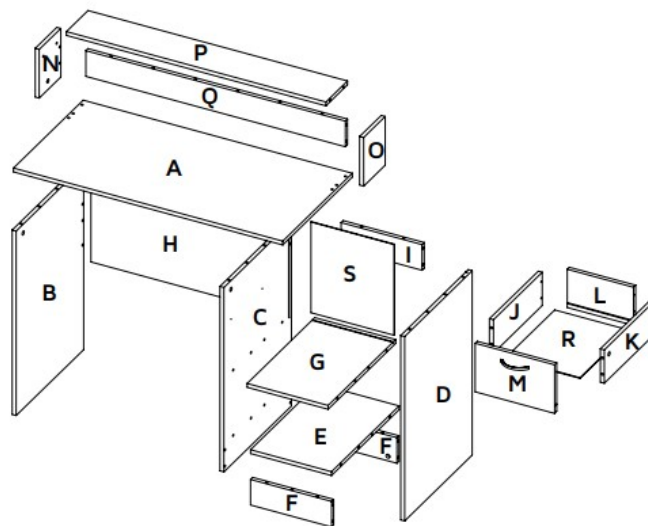 

A - x1	F - x2	K - x1	P - x1
B - x1	G - x1	L - x1	Q - x1
C - x1	H - x1	M - x1	R - x1
D - x1	I - x1	N - x1	
E - x1	J - x1	O - x1	

 MAX SUGGESTED LOADS

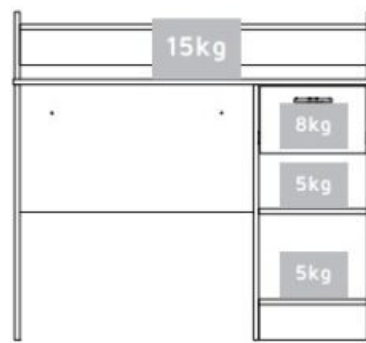


ASSEMBLY RECOMMENDATIONS

Two people are recommended to assemble the product.

Assemble the cabinet on a flat, smooth surface, preferably on a carpeted floor or the carton box of the product.

 Carefully read the assembly instructions and identify every wood and hardware part before start assembling the cabinet.

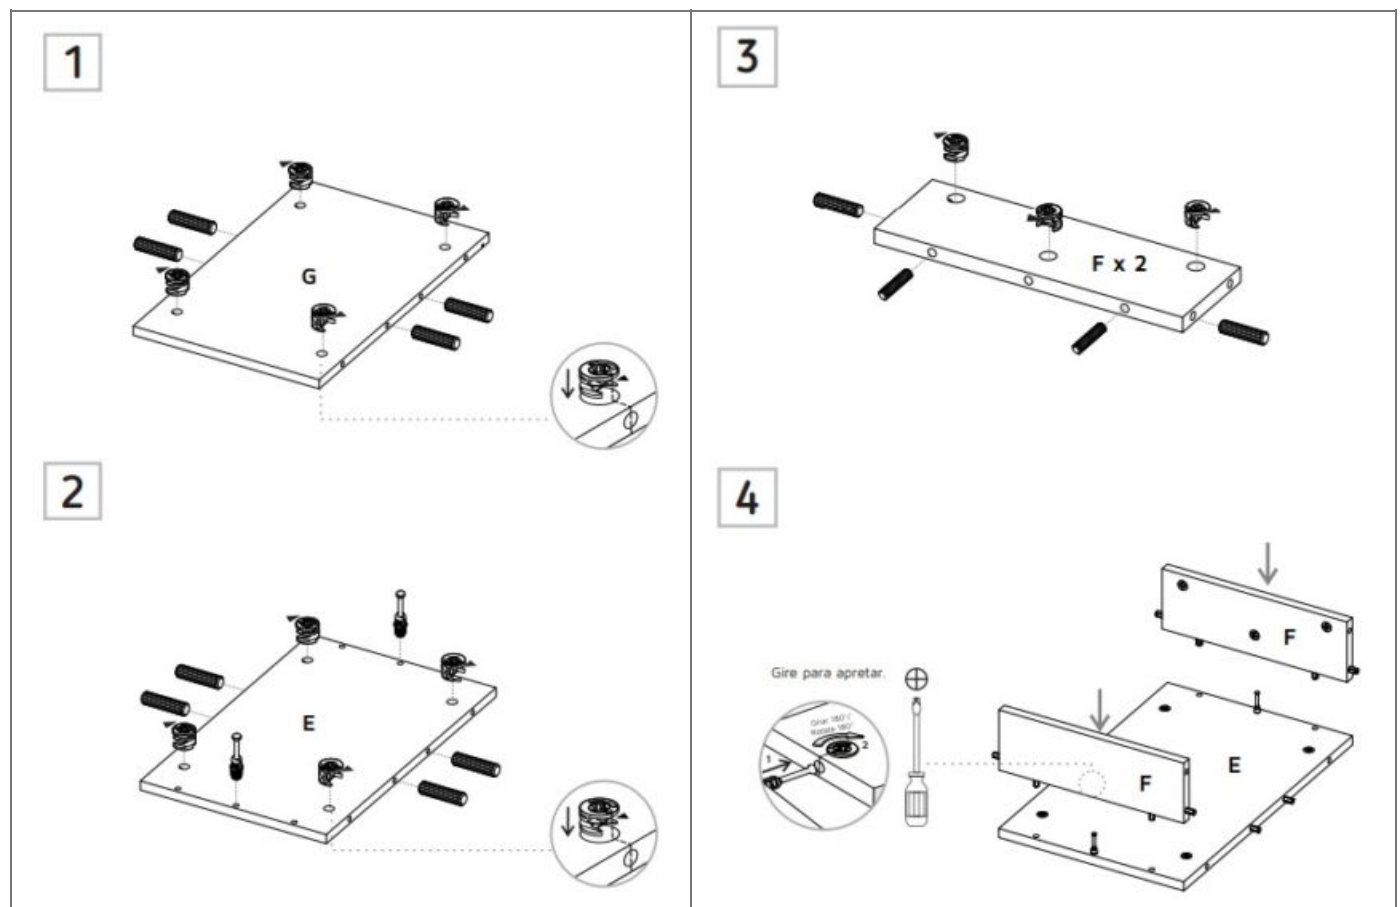


6

Diagram 6 illustrates the step of attaching the bottom panel. The main illustration shows the panel being secured to the frame with screws. A callout shows a screwdriver being used to tighten a screw. Another callout shows a warning triangle and a close-up of a screw being inserted into a pre-drilled hole.


8

Turn Over
Voltear

 9

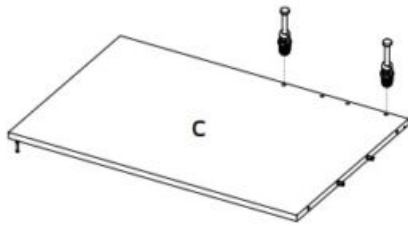


10

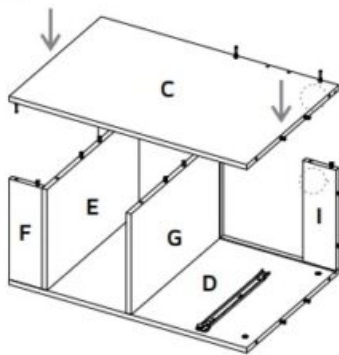 


Gire para apretar.
Rotate to tighten.



 
11

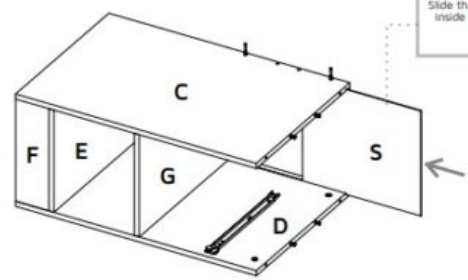


12

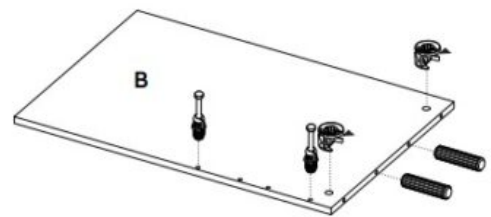 


13

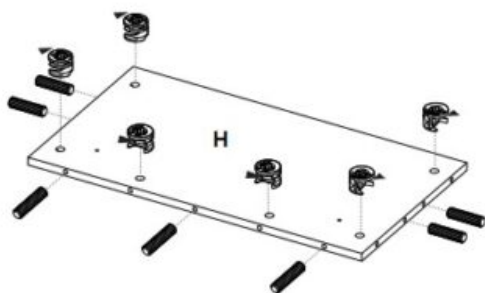 


14

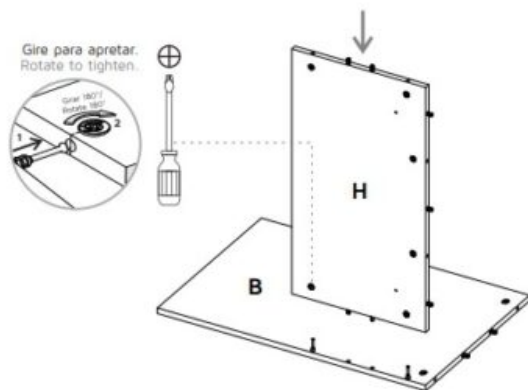 


15

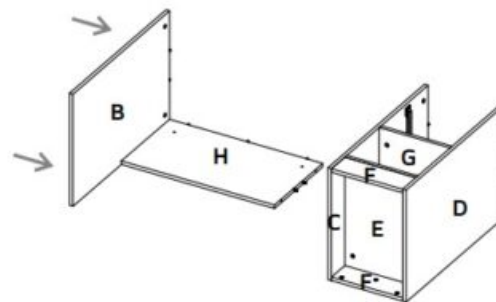 

16

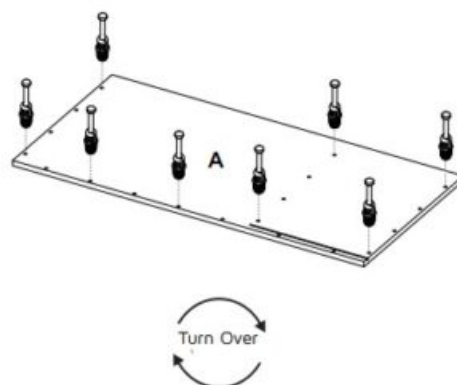 


17

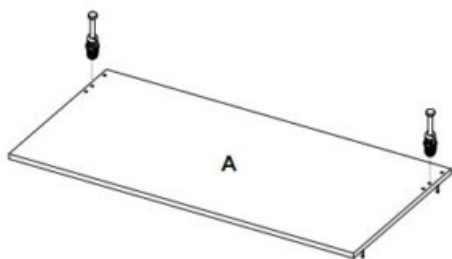 


18



 
Gire para apretar.
Rotate to tighten.

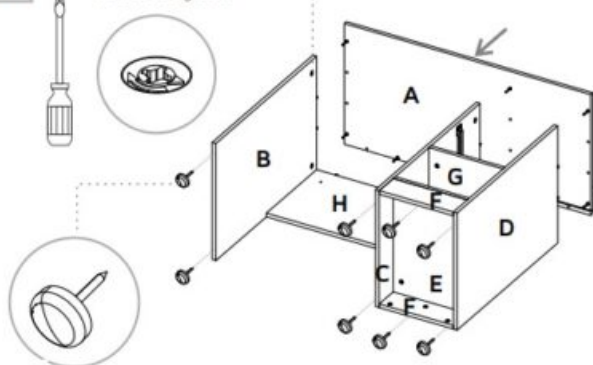


19

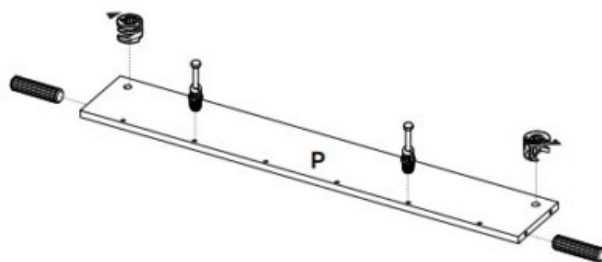 

20

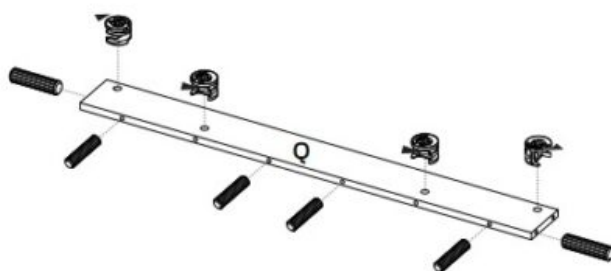 


21

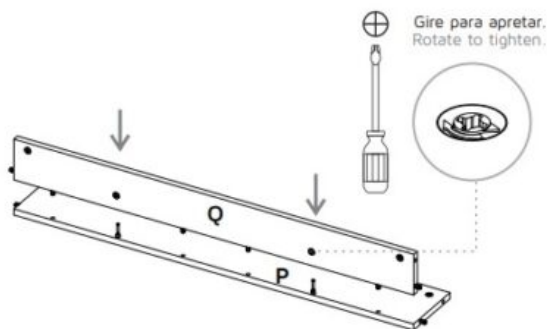 


Gire para apretar.
Rotate to tighten.

 22

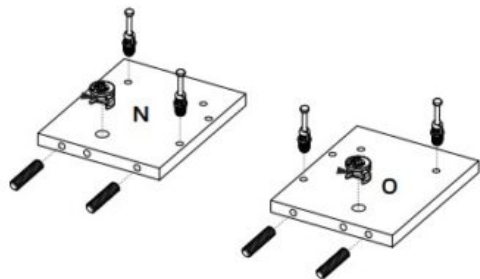


23

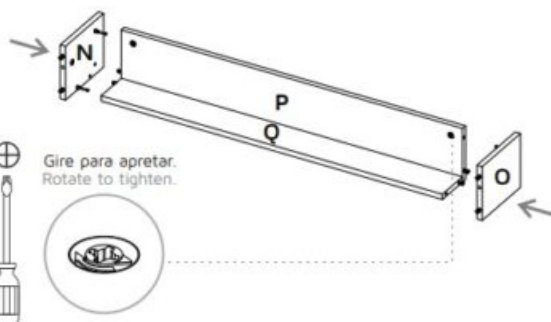 


Gire para apretar.
Rotate to tighten.

 24

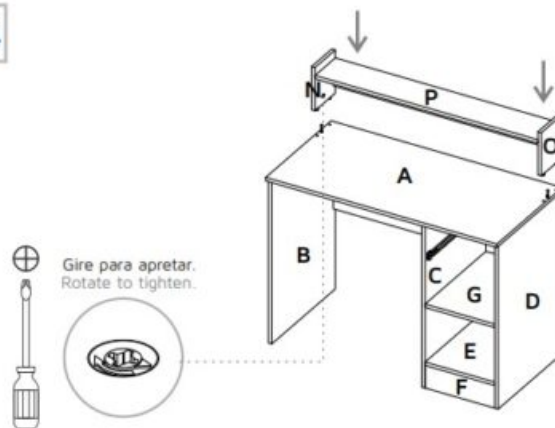


Gire para apretar.
Rotate to tighten.

 
25

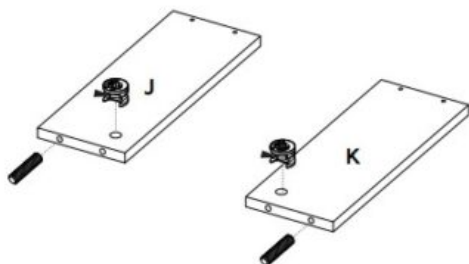


26

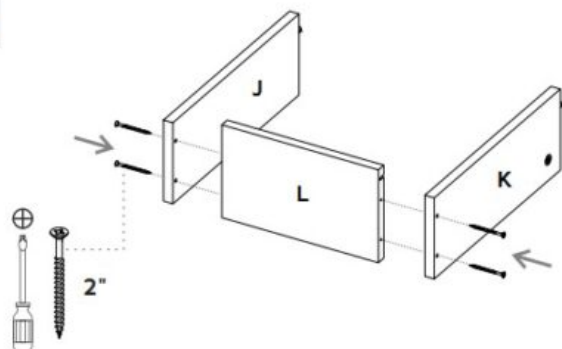 


27

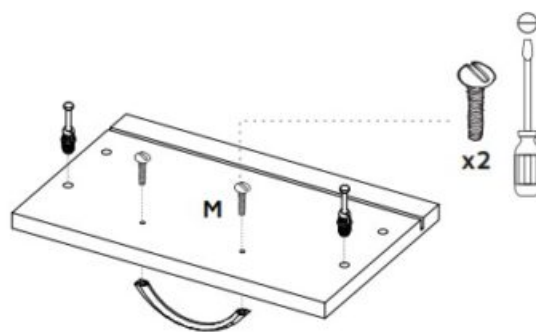 


28

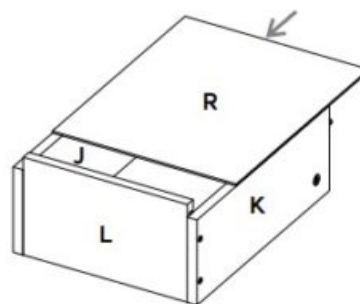 


29

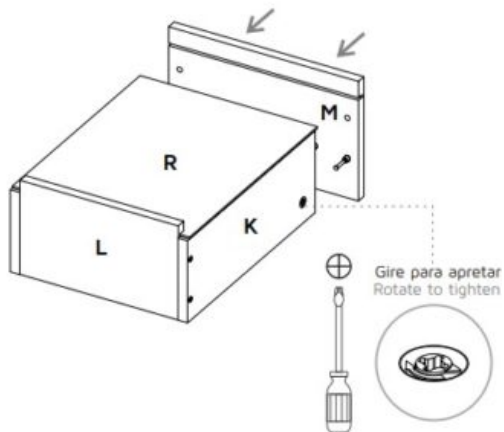 

30

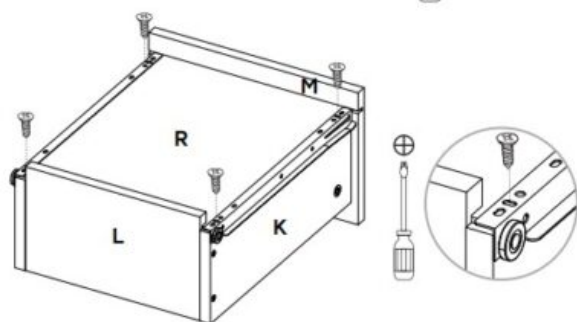 

 To prevent furniture tip-overs, it's important to properly install a tip-over device.
Here are the steps to secure the furniture to a wall:

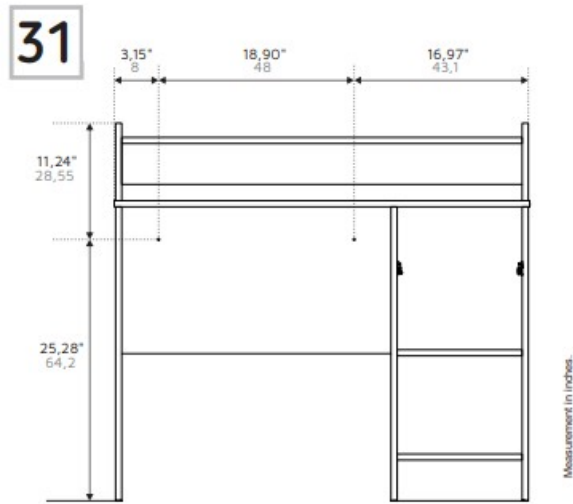

1. You must drill the bottoms guided by the holes in the structures with a 3/16" drill bit.
2. On the wall, measure and mark the points shown below



3. Drill on the markings with a 5/16" drill bit

 


4. Insert the wall anchors inside the drillings




5. Place the cabinet and secure it with the screws



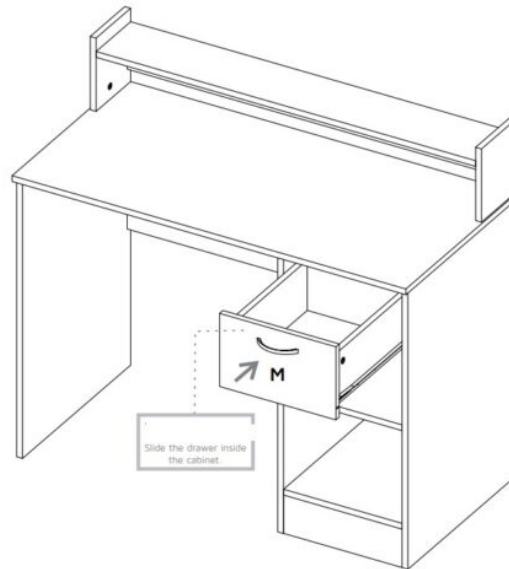

 After you finish the adjustment of the cams, cover them with the cover caps.

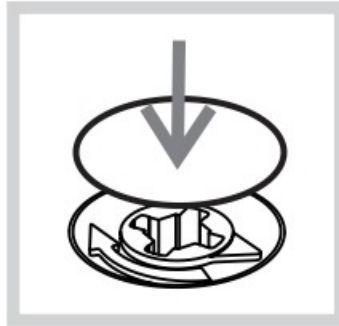

After you finish assembling the cabinet, take off the adhesive letters.



WARRANTY POLICY

Furniture has a 1 year warranty coverage in wooden parts and hardware pieces since its manufacturing date, which you can see in the lot number printed on the product box and the assembly instructions leaflet.

Warranty covers materials and workmanship imperfections which impair the assembly or correct functioning of the cabinet.

This warranty is not valid if the defects or imperfections are caused by the incorrect following of the assembly instructions, warnings and recommendations, misuse, intentional damage, fire or flood, or after modifications or any kind of alteration, or repaired by someone not authorized, when it's been assembled 3 months after the date of purchase. These defects **MUST** be reported before the warranty coverage period ends.

Once the product has been assembled, the company will not be responsible for defective and/or damaged parts.

This warranty is **ONLY** valid for the **ORIGINAL PURCHASER**, it doesn't apply if the product has been resold, rented, etc.

Furniture will take no liability for incidental or consequential damages caused to or by the product (This may not apply in your state).


To make this warranty valid you must write to our customer service email describing the product defect, lot number

and submitting your sales receipt or proof of purchase, or contact us at our customer service line. Replaced parts will be under the product's original warranty coverage period. Damaged parts will become property of the company.

There are no other warranties applicable to this product.



Documents / Resources

	<p>Vera ELW 5677 Computer Desk with Top Open Shelf [pdf] Installation Guide ELW 5677, ELZ 5678, ELI 5679, ELW 5677 Computer Desk with Top Open Shelf, ELW 5677, C omputer Desk with Top Open Shelf, Desk with Top Open Shelf, Top Open Shelf, Open Shelf, Sh elf</p>
---	--

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.