



Verbatim 70709 Pro Controller with Console Grip Instruction Manual

[Home](#) » [Verbatim](#) » Verbatim 70709 Pro Controller with Console Grip Instruction Manual 

Contents


- [1 Verbatim 70709 Pro Controller with Console Grip](#)
- [2 Product Diagram](#)
- [3 Installation Instructions](#)
- [4 Power & Charging](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)



Verbatim 70709 Pro Controller with Console Grip



Product Diagram

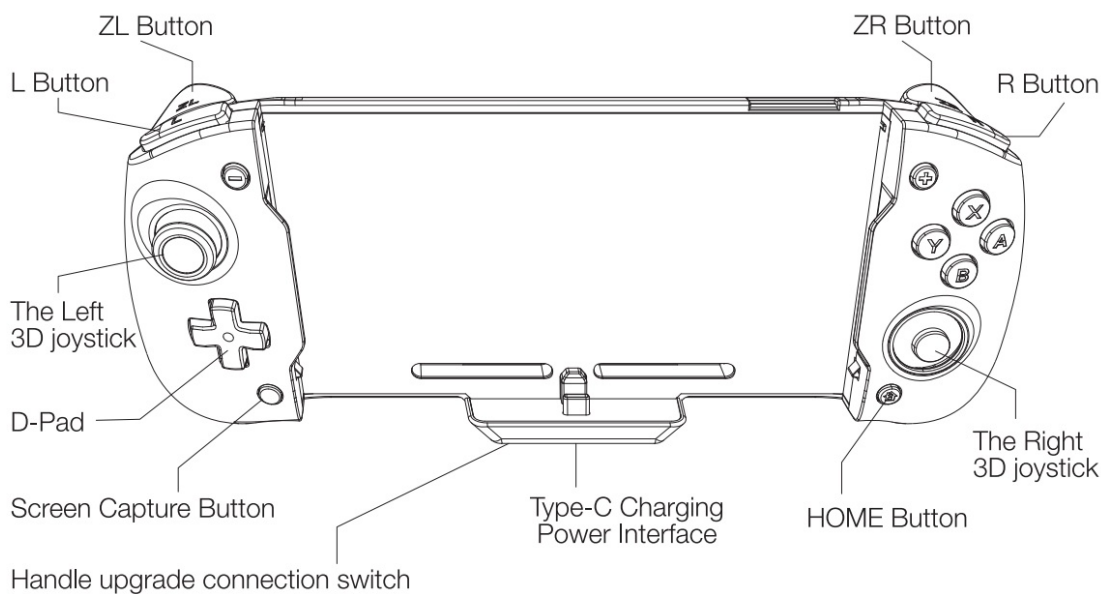

Installation Instructions


- 1. In the Nintendo Switch™ Settings menu, turn on “Pro Controller Wired Connection” under “Controllers and Sensors.”
- 2. Slide the Nintendo Switch™ into the controller, ensuring the USB-C™ connector in the controller is securely inserted into the USB-C slot on the Nintendo Switch™.
- 3. Power on the Nintendo Switch™ and press “A” on the controller to make sure the devices are connected.

Power & Charging

The Verbatim Pro Controller is powered by the Nintendo Switch™. The Nintendo Switch™ charger, included with the game system, can be connected to the controller for charging. You can continue playing even while the controller is charging. Other USB-C™ chargers using the PD (Power Delivery) protocol and the same power output as the Nintendo Switch™ adapter can also be used.

Input Voltage	Input Current	Notes
15V (PD)	1.5A	PD Protocol adapter is required

Documents / Resources

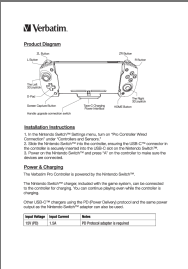

[Verbatim 70709 Pro Controller with Console Grip](#) [pdf] Instruction Manual
70709 Pro Controller with Console Grip, 70709, Pro Controller with Console Grip