




Verizon RC2655005-01B Remote Control User Manual

[Home](#) » [Verizon](#) » Verizon RC2655005-01B Remote Control User Manual 

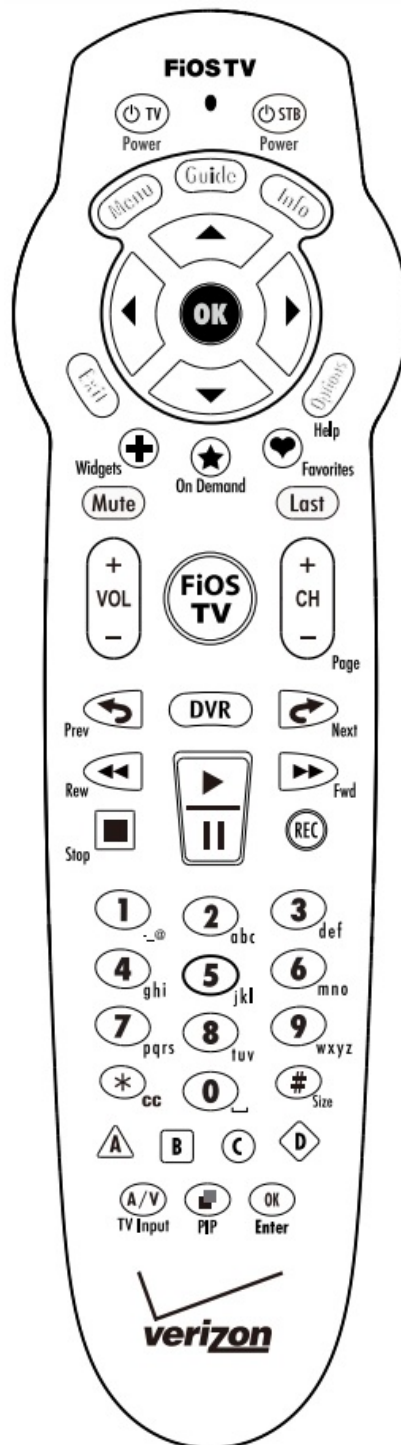



Model: RC2655005/01B

Contents

- 1 RC2655005-01B Remote Control
- 2 Quick Setup Guide-Verizon FiOS remote
- 3 Troubleshooting
- 4 Code Search Method to Program the RC
- 5 OPTIONAL FEATURES
- 6 Control TV Volume Through STB
- 7 Key Fix
- 8 General Instructions
- 9 Getting Started
- 10 New and Special Buttons
- 11 COMPLETE LIST OF TV BRAND CODES
- 12 Documents / Resources
- 13 Related Posts

RC2655005-01B Remote Control

For additional information about your FiOS TV service and your remote, go to www.verizon.com/fiostvhelp

For video instructions, press the <Menu> key on your remote then select Help on the Main Menu

Thank you for subscribing to FiOS TV Service. This User Manual will show you how to program and operate your new FiOS TV Remote Control (Model P265v3).

Quick Setup Guide-Verizon FiOS remote

The following steps will guide you to quickly set-up your Verizon FiOS TV remote for your TV.

1. Turn on your TV and the FiOS STB. Make sure you can see live television.




2. Locate the 3-digit code for your TV brand in the list to the right and circle the correct code.




If your TV brand is not listed, codes for additional TV brands are listed at the back of this manual.


- Once you locate the brand code, press and hold the <OK> and **0** keys together. The RED LED on the remote control will blink twice and then stay on.

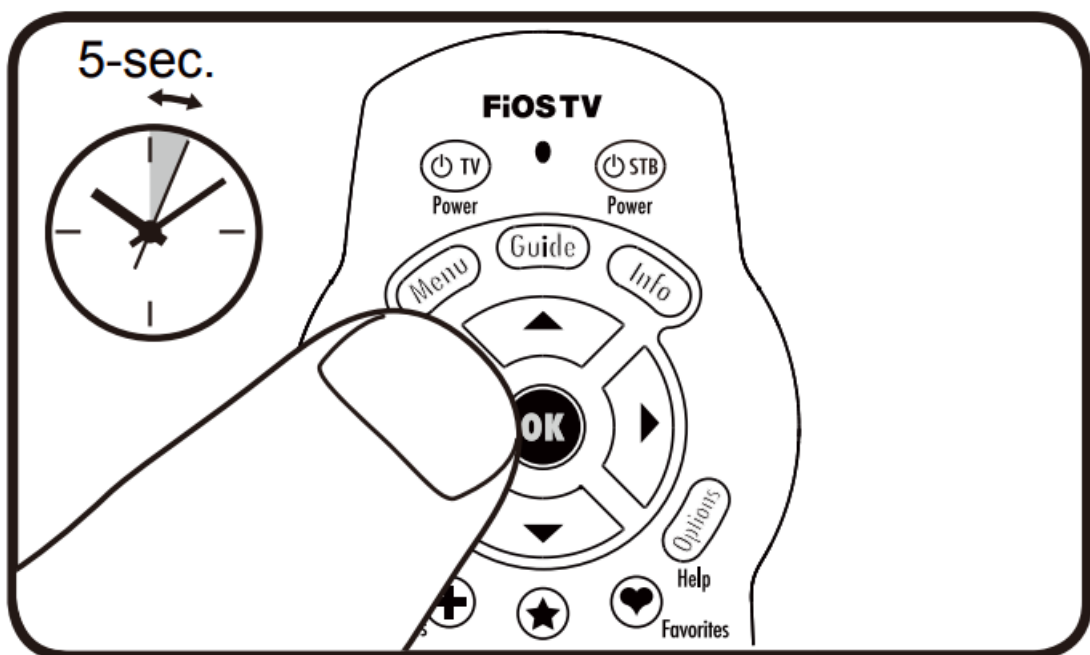

- Enter the 3-digit TV code for your TV brand using the number pad. The RED LED will blink twice and then stay on.

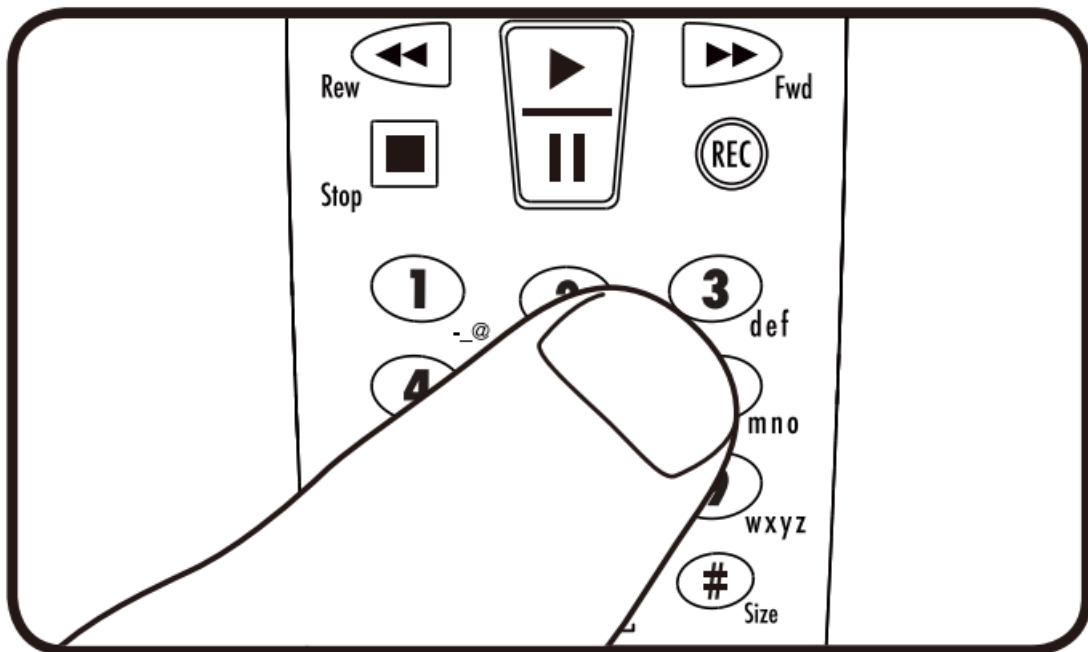

5. Press and release the <CH +> button repeatedly until the TV turns off. You can also “back up” by pressing the <CH -> button.

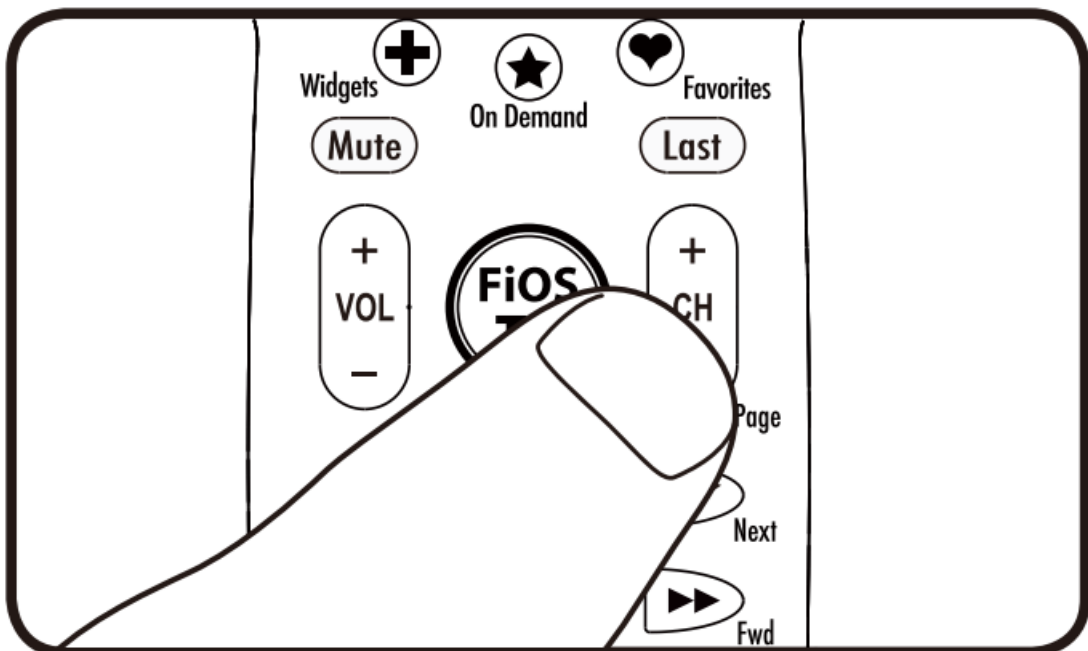


*Please note – some TVs may respond slower than others.


Please allow 1 second between button presses.

6. Test that remote control is programmed for your TV

- Turn the TV on using the  key.
- Press <VOL +> and <VOL -> to make sure that the volume keys work.
- Press  and  keys.
- If any of these keys do not work as expected, press and hold that key. Release it as soon as it works.

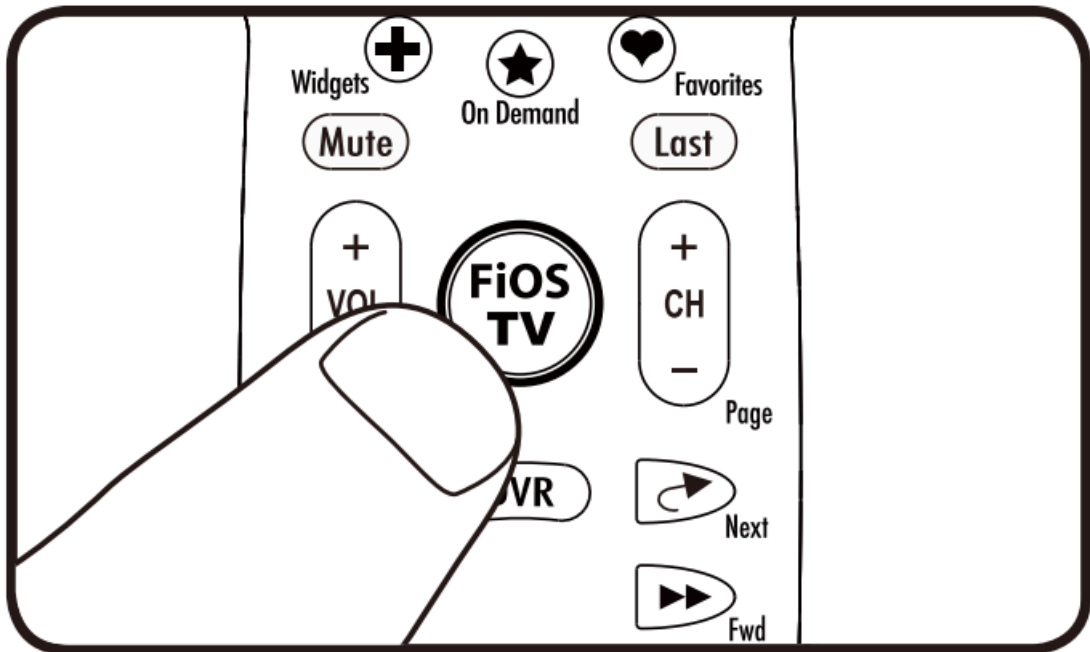

7. If all these keys work, press <OK> to save this TV brand code programming. The RED LED will blink 3 times and then turn off

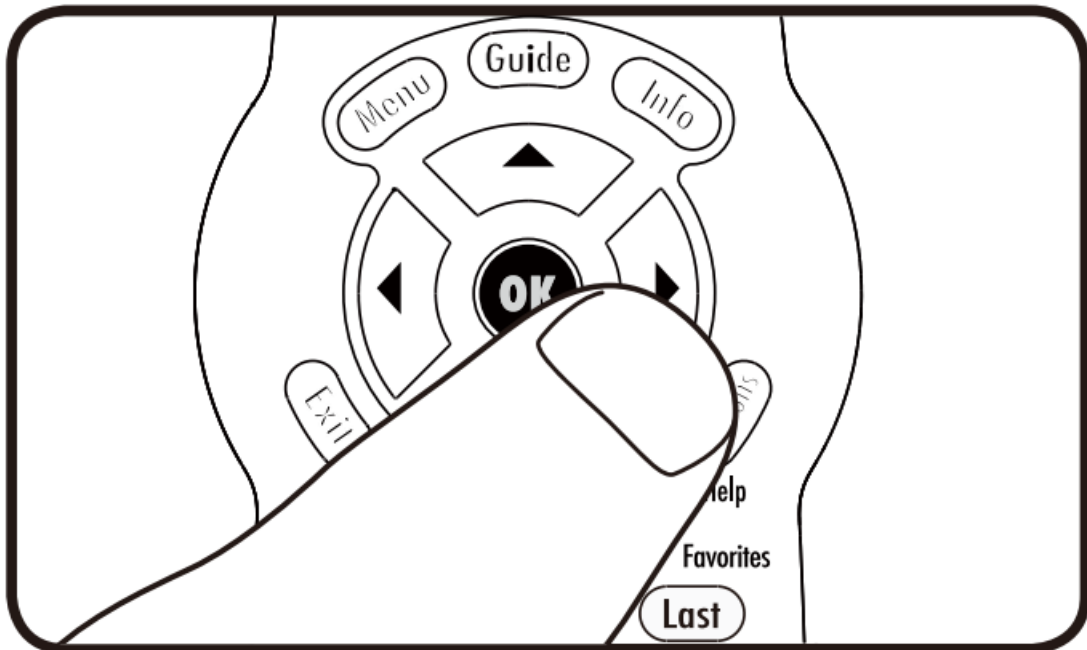

Your Remote Control is now programmed for your TV!

Acronyms

1. RC = Remote Control
2. STB = FiOS TV Set Top Box
3. VOL = Volume
4. CH+ = Channel Up
5. CH- = Channel Down

FiOS TV Remote Control Codes for Major TV Brands

TV Brand	Code
AOC	26
Audiovox	35
Coby	70
Envision	114
Funai	128
Haier	146
Hitachi	164
Insignia	180
JVC	193
LG	210
Magnavox	222
Mitsubishi	243
Panasonic	279
Philips	285
Pioneer	290
Polaroid	294
Proscan	302
RCA	321
Samsung	331
Sansui	332
Sanyo	333
Sceptre	335
Sharp	342
Sony	352
Sylvania	371
Toshiba	397
Viewsonic	418
Vizio	424
Westinghouse	433
Zenith	440

Troubleshooting

- a. If the button does not work correctly, make sure the TV is on and go back to Step 1 of the Quick Start Guide. You can also try the Code Search Method below.
- b. If the <VOL>, <Mute>, or <A/V> buttons do not work correctly, please refer to the Key Fix Feature.
- c. If you think you made a mistake with programming your remote, you can always press the <Exit> button and start over. The RED LED will turn off if the RC is not in programming mode.
- d. If you don't press any buttons for 60 seconds, the remote control will automatically exit programming mode.
- e. Note, if you press the <CH> button many times and the lights on the remote control all flash rapidly, the programming attempt was not successful.
- f. If the Brand Search method does not work, please try the Code Search Method below, which scans the complete database for all TV codes.
- g. If you are still having problems programming the remote, please refer to our website at www.verizon.com/fiosvhelp

Code Search Method to Program the RC

(This method could take up to 12 minutes)

1. Turn on your TV and the FiOS STB.
2. Make sure you can see live television.
3. Press and hold the <OK> and  buttons together, then release both.
 - The RED LED will blink twice and then stay on.
4. Press and hold down the  button.
5. The Remote Control will try a new TV code every second, and the RED LED will blink each time a new code is sent.
6. When the TV turns off, stop pressing the play button right away.
 - Please note – some TVs may respond slower than others.
7. You can press the <CH +> or <CH -> buttons to go forward or back one TV code at a time.
8. Test that the remote control is programmed for your TV.
 - a. Turn the TV on using the  key.
 - b. Press <VOL +> and <VOL -> to make sure that the volume keys work.
 - c. Press  and .
 - d. If any of these keys do not work as expected, press and hold that key. Release it as soon as it works.
9. If these keys all work, press <OK> to save this TV brand code programming. The RED LED will blink 3 times and then turn off.

Your Remote Control is now programmed for your TV!
10. Troubleshooting
 - a. If the  button does not work correctly, make sure the TV is on and go back to Step 1 of the Code Search Method.
 - b. If the <VOL>, <Mute>, or <A/V> buttons do not work correctly, please refer to the Key Fix Feature.
 - c. If you think you made a mistake with programming your remote, you can always press the <Exit> button and start over. The RED LED will turn off if the RC is not in programming mode.
 - d. Please Note, the Code Search Method could take up to 12 minutes, as it must go through over 500 codes.

The most common codes are tried first, but you may need to press and hold  for a while to locate the correct code.
 - e. Once you have tried all the TV codes in the remote control, the RED LED and the backlit buttons will flash 4

times rapidly, the RED LED will turn off and the remote will exit the programming mode.

f. If you are still having problems programming the remote, please refer to our website at

www.verizon.com/fiostvhelpt

OPTIONAL FEATURES

<STB Power> Button Turns on TV and STB

Your remote has separate power buttons for the TV and STB. You can program the  key to turn on/off both your TV and STB at the same time.

1. Turn both your TV and STB on.
2. Press and hold the <OK> and buttons together, then release both.
 - The RED LED will blink twice and then stay on.
3. Press 9 – 7 – 7.
 - The RED LED will blink twice and remain on.
4. Press .
 - The RED LED will blink 3 times and then turn off.
5. Test that the  key now turns on the TV and STB at the same time.
6. If you want to reset the remote so that the  key controls Only the STB, follow the same steps as above but press <OK> in Step 4.

Control TV Volume Through STB

If the volume control keys don't work with your TV, you can program the remote so that the STB will control the volume.

1. Press and hold the <OK> and 2 buttons together, then release both.
2. The RED LED will blink twice and then stay on.
3. Press 9 – 5 – 5.
4. The RED LED light will blink twice, and remain on.
5. Press .
6. The RED LED will blink 3 times and then turn off.
7. If you want to change it back again so that volume buttons control the TV follow the same steps as above but press  in Step 5.

Key Fix

If your remote control is programmed for your TV, but the <VOL>, <Mute>, or the <A/V> keys do not work correctly, then you can try using the Key Fix feature to fix the buttons.

1. Press and hold the <OK> and buttons simultaneously.
 - The RED LED will blink twice and then stay on.
2. Press and hold the key that does not work correctly. The remote control will try a new code every second.

3. Once the TV responds correctly, release the button.
4. Press <OK> to save the current settings and finish programming your remote control.

General Instructions

1. Make sure the remote control has a clear, unobstructed view of the STB and TV.
2. Your FiOS TV remote control will only operate your FiOS TV STB and your TV.
3. The remote will not operate other devices like DVD Player or Audio Receiver.
4. The <TV Power>, <VOL +>, <VOL ->, <Mute> and <A/V> buttons will always control your TV.
5. All other keys on the remote control will always control your FiOS TV STB.

Getting Started

1. Turn on your TV and the STB using the  and  buttons.
2. If you have just watched a DVD, make sure your TV is set to the correct A/V Input for your STB.
3. Press the <CH +>, or <CH -> buttons to see the next higher or lower channel.
4. You can go directly to any channel by entering the channel number on the number pad and pressing <OK>.
5. Press  to see a list of TV programs.
6. Press  to return to TV watching.
7. Press the  button to launch the FiOS TV Main Menu. From the Main Menu you can access all the features of your FiOS TV service.
8. Press <▲> <▼> <▶> <◀> keys to navigate through the FiOS TV Menus and Guides.
To select any item, press <OK>.
9. Press  to return to the last channel.
10. Press <Info> to see information about the current program.
11. Press <Exit> to return to the previous menu option or to watch TV.

New and Special Buttons

1.  "On Demand" displays a list of movies and other programs you can watch at any time.
2.  "Widgets" displays local weather, traffic, and other information.
3.  displays your list of recorded programs if you have DVR service.
4.  "Favorites" displays your list of favorite channels.
5.  is a rocker button. Press lower half of the button  to pause the program. Press upper half of the button <▶> to continue to play from where you left off.
6.  jumps back 30 seconds in the program you are watching.
7.  jumps forward 30 seconds in the program you are watching.
8.  records the current program.
9. Buttons , , and  will only operate during normal TV watching if you have DVR service.
10. "If the RED LED starts blinking 5 times rapidly when you press the <CH +/->, <VOL +/->, and <OK>, or if the buttons stop lighting up, you should replace the remote control batteries"

COMPLETE LIST OF TV BRAND CODES

TV Brand	Code	TV Brand	Code	TV Brand	Code
3M	1	Beko	40	Craig	78
A.R. Systems	2	Belcor	453	Crosley	79
Abex	3	Bell & Howell	41	Crown	80
ABS	600	BenQ	42	Crown Mustang	618
Accurian	441	Beon	43	CTX	81
Acer	4	Bestar	44	Curtis	82
Action	442	BGH	608	Curtis Mathes	83
Admiral	5	Blue Sky	45	CXC	84
Advent	6	BOSS	46	CyberHome	466
Adventura	7	Boxlight	454	CyberPower	619
Aftron	443	BPL	47	Cytron	85
Aiko	8	Bradford	48	Daewoo	86
Aim	9	Brilliant	49	Dansai	87
Aiwa	10	Brinkmann	50	Dawa	88
Akai	11	Brionvega	51	Daytron	89
Akiba	12	Brockwood	455	Dayu	620
Akira	601	Broksonic	52	Decca	90
Akura	13	Bush	53	Dell	91
Alaron	444	Byd:sign	54	Delta	467
Alba	14	C & M	456	Denon	92
Albatron	15	Cadia	457	Denstar	468
Alfide	602	Cailing	609	Desmet	93
Alienware	603	Candle	55	Diamant	94
Alleron	16	Canon	56	Diamond Vision	469
Allstar	17	Carena	57	Digisonic	621
A-Mark	445	Carnivale	58	Digistar	470
Ambassador	446	Carver	59	Digital Lifestyles	471
America Action	18	Cascade	60	Digital Projection Inc.	472
Ampro	19	Casio	458	Dikom	622

Amstrad	20	Cathay	61	Dimensia	96
Amtron	21	CCE	62	DirecTV	473
Anam	22	Celebrity	63	Disney	97
Anam National	23	Celera	64	Dixi	98
Anhua	604	Centurion	65	Dream Vision	474
Anitech	24	Champion	459	Dual	99
Ansonic	25	Changcheng	610	Dumont	100
Anthem	447	Changfeng	611	Durabrand	101
AOC	26	Changhong	66	Dwin	102
Aomni	448	Chun Yun	612	Dynatech	475
Apex Digital	28	Chung Hsin	613	Dynatron	103
Apple	605	Cinego	460	Dynex	104
Archer	449	Cinema	614	Eiki	105
Archos	29	Cineral	615	Elbe	106
Aristona	30	Citizen	67	Electroband	107
Asberg	31	Clairtone	461	Electrograph	108
Astar	32	Clarion	68	Electrohome	109
Atlantic	33	Classic	462	Elektra	623
Audiosonic	34	Clatronic	69	Element	110
Audio-Technica	450	CME	463	Elin	111
Audiovox	35	Coby	70	Elite	112
Aurora Systems	451	Colortyme	71	Emerson	113
Aventura	36	Colt	72	Emprex	476
Axion	37	Commercial Sol utions	73	Encross	477
Baile	606	Compaq	464	Envision	114
Bang & Olufsen	452	Computime	465	Epson	115
Basic Line	38	Concerto	74	Erae	478
Baur	39	Condor	75	Erres	116
Beijing	607	Conrowa	616	ESA	117
Fidelity	121	Contec	76	Euroman	118
Finlux	122	Contec/Cony	77	Europhon	119
Firstline	123	Continental	617	Exquisit	120

Fisher	124	Hornyphon	165	Kolin	651
FlexVision	479	Howard Computers	636	Kolster	203
Flint	125	Huafa	637	Konig	652
Fortress	624	Huari	638	Konka	204
Fraba	126	Humax	167	Korpel	205
Frigidaire	625	Huodateji	639	Kosmos	206
Fujimaro	626	Hush	640	Kost	494
Fujimaru	627	Hypson	168	Kreisen	207
Fujitsu	127	Hyundai	169	KTV	208
Funai	128	Iberia	170	Kunlun	653
Furi	628	iBUYPOWER	641	Leyco	209
Futuretech	129	ICE	171	LG	210
Galaxis	130	I-Inc	484	Liesenkotter	211
Garrard	480	iLo	172	Lifetec	212
Gateway	131	Ima	173	Linksys	654
GE	132	Imperial	174	LiteOn	495
GEC	133	Imperial Crown	642	Lloyd's	213
Genexxa	134	Indiana	175	Loewe	214
GFM	135	Infinity	176	Logik	215
Gibraltar	136	InFocus	177	Luce	496
Gibson	629	Initial	178	Luma	216
Go Video	137	Inno Hit	179	Lumatron	217
Goldline	138	Insignia	180	Luxman	218
GoldStar	139	Inteq	181	LXI	219
Goodmans	140	Interfunk	182	M & S	655
GPX	141	Intervision	183	MAG	220
Gradiente	142	iRIS	485	Magnasonic	221
Granada	143	Irradio	184	Magnavox	222
Grundig	144	IRT	643	Magnin	223
Grunpy	145	Isukai	185	Majestic	224
H & B	481	ITS	186	Manesth	225
Haier	146	ITV	187	Marantz	226

Hallmark	147	IX	486	Mark	227
Hankook	630	Janeil	188	Mastro	656
Hanns.G	482	JBL	189	Matsui	228
Hannspree	148	JC Penney	190	Matsushita	229
Hanseatic	149	JCB	191	Maxent	230
Hantarex	150	JCM	487	MB Quart	497
Hantor	151	Jean	644	Media Center P C	657
Harley Davidson	152	Jensen	192	Mediator	231
Harman/Kardon	153	Jiahua	645	Medion	232
Harsper	483	Jinfeng	646	Megapower	233
Harvard	154	Jinxing	647	Megatron	234
Harwood	155	JVC	193	MEI	498
Hauppauge	631	Kaisui	194	M-Electronic	235
Havermy	156	Kamp	488	Memorex	236
HCM	157	Kangli	648	Mercury	237
Helios	158	Karcher	195	MGA	238
Hello Kitty	159	Kawasho	196	Micro	499
Heran	632	Kaypani	489	Microsoft	658
Herosonic	633	KDS	490	Midland	239
Hewlett Packard	160	KEC	197	Mind	659
Hikona	634	Ken Brown	649	Minoka	240
HiLine	161	Kendo	198	Mintek	241
Hinari	162	Kenwood	199	Minutz	242
Hisense	163	Kioto	650	Mitsubishi	243
Hitachi	164	KLH	200	Monivision	244
Hongmei	635	Kloss	491	Motorola	246
Multitech	248	Kloss Novabeam	201	Moxell	500
NAD	250	KMDS	492	MTC	247
Nakamichi	501	Kneissel	202	Mudan	660
National	661	Planar	291	Sceptre	335
Naxa	502	Plantron	292	Schneider	336
NEC	251	Plextor	293	Scimitsu	524

Neckermann	252	Polaroid	294	Scotch	337
NEI	253	Polyvision	670	Scott	338
NetTV	503	Portland	295	Sears	339
Neufunk	255	Presidian	513	SEG	340
New Tech	256	Priceclub	296	SEI	341
Newave	662	Prima	297	Seleco	525
Newsonic	663	Princeton	298	Semp	677
Nexus Electronics	504	Prism	299	Shaofeng	678
Nikkai	257	Profitronic	300	Sharp	342
Nikko	258	Projectiondesign	514	Sharper Image	526
Niko	505	Proline	301	Shen Ying	679
Nimbro	664	Proscan	302	Shencai	680
Niveus Media	665	Prosonic	303	Sheng Chai	681
Noblex	506	Proton	304	Sheng Chia	343
Norcent	259	Protron	305	Sherwood	527
Northgate	666	Proview	306	Shogun	528
Norwood Micro	260	ProVision	307	Siarem	344
Noshi	507	Proxima	308	Sierra	345
Novatronic	261	Pulsar	309	Signature	346
NTC	262	Puneet	515	Signet	529
NuVision	263	Pvision	516	SIM2 Multimedia	347
Okano	264	Pye	310	Simpson	348
Olevia	265	Pyle	311	Sinotec	530
Olympus	508	Qingdao	671	Sinudyne	349
Onida	667	Quanta	517	Skyworth	531
Onwa	266	Quasar	312	Solarism	532
Opera	267	Quelle	313	Sole	533
Oppo	268	Radialva	314	Sonic Blue	534
Optimus	269	Radio Shack	315	Sonoko	350
Optoma	270	Radiola	317	Sontec	351
Optonica	271	Radiomarelli	318	Sony	352
Orbit	272	RadioShack	319	Soundesign	353

Orion	273	Radiotone	320	Soundwave	354
Orline	274	RCA	321	Sova	535
Osaki	275	Realistic	322	Sowa	682
Otic	668	Recor	323	Soyo	355
Otto Versand	276	Redstar	324	Spectricon	536
Ovation	509	Reflex	325	Spectroniq	537
Palladium	277	Relon	672	Squareview	356
Panama	278	Remotec	518	SSS	357
Panasonic	279	Render	519	Stack 9	683
Panavision	280	ReplayTV	520	Standard	358
Panda	669	RevolutionHD	521	Starlite	359
PARK	510	Revox	326	Starvision	538
PDI	511	Rhapsody	522	Strato	360
Penney	281	Ricavision	673	Studio Experience	361
Perdio	282	R-Line	327	SunBrite	539
Perfekt	283	Rosen	328	Sunstar	363
Petters	512	Rowa	674	Sunwood	364
Philco	284	Runco	329	Superscan	365
Philips	285	Sampo	330	Supersonic	366
Phoenix	287	Samsung	331	SuperTech	367
Phonola	288	Samsux	523	Supre-Macy	368
Pilot	289	Sansei	675	Supreme	369
Pioneer	290	Sansui	332	SVA	370
Syntax	373	Sanyo	333	Sylvania	371
Systemax	685	Sanyuan	676	Symphonic	372
Tacico	686	SBR	334	Synco	684
Tagar Systems	687	Tokai	396	Vidikron	416
Tandy	375	Toshiba	397	Vidtech	417
Tashiko	540	Tosonic	545	Viewsonic	418
Tatung	376	Totevision	398	Viking	419
TCL	688	Touch	692	Villain	553
Teac	377	Trans Continens	399	Viore	420

Technics	378	Trical	546	Visa	554
Technika	689	Triumph	400	Visart	555
Technol Ace	541	TruTech	401	Visco	421
Techview	379	TVS	402	Vision	422
Techwood	380	Uher	403	Vistron	556
Teco	542	Ultra	547	Vito	423
Teknika	381	Ultravox	404	Vizio	424
Telecor	383	Unic Line	405	Voodoo	694
Telefunken	384	Universal	406	Vortec	425
Telegazi	385	Universum	407	Voxson	426
Telemagic	543	Univox	408	VU	695
Telemeister	386	US Logic	548	Waltham	427
Telesonic	387	UTI Technology	549	Wards	428
Telestar	388	Vector Research	409	Warumaia	696
Teletech	389	Venturer	411	Watson	429
Tensai	390	VEOS	550	Waycon	430
Tera	544	Vestel	412	Wega	431
Thomas	391	Vexa	413	Weltblick	432
Thomson	392	Victor	414	Westinghouse	433
Thorn	393	Video Concepts	551	Wharfedale	697
Tiane	690	Videocon	693	White Westinghouse	434
TMK	394	VideoSystem	415	WinBook	557
TNCi	395	Xrypton	435	Wyse	558
Tobo	691	Yamaha	436	XR-1000	559
Yamishi	437	Zenith	440	Yokan	438
Yapshe	698	Zonda	560	ZT Group	699
Yoko	439				

verizon

Documents / Resources

	Verizon RC2655005-01B Remote Control [pdf] User Manual RC2655005-01B Remote Control, RC2655005-01B, Remote Control, Control
---	--

Manuals+.