



Home » VEVOR » VEVOR DB-6, DB-8 Wall Vent User Manual 🯗



Contents [hide]

- 1 VEVOR DB-6, DB-8 Wall Vent User Manual
- 2 Safety Instructions
- **3 LIST OF COMPONENTS**
- **4 PARAMETER LIST**
- 5 Installation Guide
- 6 Documents / Resources
 - 6.1 References

VEVOR DB-6, DB-8 Wall Vent User Manual



MODEL:DB-6/DB-8

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Safety Instructions

Read and understand this entire manual before assembling, installing, operating, or servicing this product. Failure to follow these warnings and instructions can cause personal injury or damage to valuable property.

WARNING: Please carefully read the following instructions in order to reduce the risk of injuries, accidents or damage to the product by itself.

- 1. Products shall be installed by adults;
- 2. Products are installed away from children and pets;
- 3. Please wear gloves to install the product to avoid hand injury;


LIST OF COMPONENTS

number	component	quantity
1	cover	1
2	base	1
3	M4×8 screws	4
4	M4 expansion screws	4
5	ST4×35 self-tapping screws	4



PARAMETER LIST

model	DB-6	DB-8 360×320mm	
size of mounting plate (A×B)	300×260mm		
nstall hole spacing (C×D)	270×230mm	330×290mm	
diameter of ventilation pipe (E)	5.87inch(149mm)	7.8inch(198mm)	
length of vent (F)	2.4inch(61mm)	2.4inch(61mm)	
product height (G)	180mm	190mm	
cover height (H)	73mm	73	
cover height (I)	90mm 90		
cover width (J)	170mm	220mm	

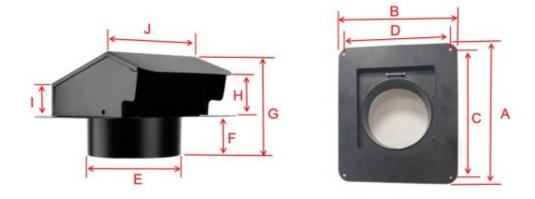


Installation Guide

1.1.Put the cover into the base;


1.2. The screws are fixed with M4×8 screws on both sides and behind the lid, a total of 3 screws.



2. A round hole should be opened at the roof installation position, and the inner diameter of the round hole is 5mm larger than the outer diameter of the ventilation pipe.

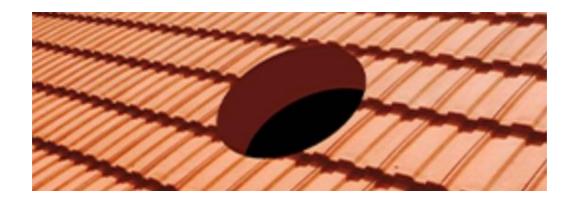

3. Place the wall vent in the circular hole, mark four points on the roof according to the screw holes of the mounting plate, drill holes with a diameter of 6mm and a depth of 40mm at the marked points, and finally install M4 expansion screws in the four small holes.

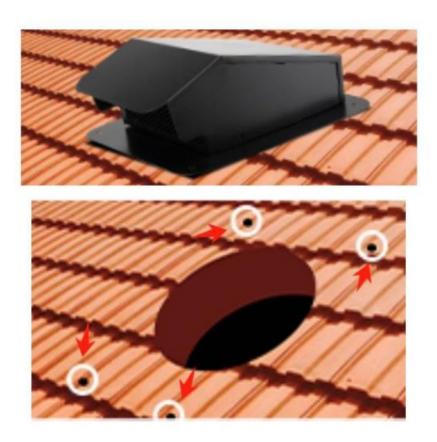

4. If you are connecting the exhaust fan, please refer to the outer diameter of the product ventilation pipe and purchase flexible duct and duct clamp by yourself. First, fix the flexible duct on the ventilation pipe of the wall vent.



5. Then put the wall ventilation port into the middle of the large hole, and align the screw hole of the mounting plate with the expansion screw; fix the product with ST4×35 self-tapping screws, and complete the installation;



6. The ventilation opening in the wall is installed in the same way on other vertical walls.

Note: When the flexible duct is connected with the wall exhaust port and the exhaust fan, if the two ends are not completely sealed, the airflow will produce turbulence, which will cause noise in the wall exhaust port!!!

Manufacturer: Shanghaimuxinmuyeyouxiangongsi

Address: Shuangchenglu 803nong11hao1602A-1609shi, baoshanqu,

shanghai 200000 CN.

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD

NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim

Place, Rancho Cucamonga, CA 91730



Read More About This Manual & Download PDF:

Documents / Resources

VEVOR DB-6, DB-8 Wall Vent [pdf] User Manual

DB-6, DB-8, DB-6 DB-8 Wall Vent, DB-6 DB-8, Wall Vent, Vent

References

• User Manual

DB 8, DB-6, DB-6 DB-8, DB-6 DB-8 Wall Vent, Vent, VEVOR, Wall

■ VEVOR Vent

Leave a comment

Your email address will not be published. Required fields are marked*

Comment *

Name		
Email		
<u> </u>		
Website		
☐ Save my name, email, and website in this browser for the next time I com	ment.	
Post Comment		
Search:		
e.g. whirlpool wrf535swhz	Search	

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.