

VEVOR JK-220A Meat Slicer



VEVOR JK-220A Meat Slicer Operating Instruction

[Home](#) » [Support](#) » VEVOR JK-220A Meat Slicer Operating Instruction 

Contents

- [1 VEVOR JK-220A Meat Slicer](#)
- [2 Note](#)
- [3 The safety sign](#)
- [4 Main Technical Specifications](#)
- [5 References](#)
- [6 Related Posts](#)

VEVOR®

VEVOR JK-220A Meat Slicer



Before use, please read this manual Please pay attention to safety and health.

Thank you for selecting this company production of semi-automatic food-slicing machines This company produces the same machines in a comprehensive home and abroad for the same kind of product based on the advantage of making the operation more convenient, and using it more safely.

Note

- The power must comply with electric requirements on the label rating, it will cause serious trouble a fire, or the machine if improperly used.
- The machine must be earthed when used, it is dangerous to get an electric shock if not grounded or not reliably grounded.
- Please turn off all switches and unplug them when an Emergency happens.
- The hand or other part of the body is not allowed to enter the work space when the machine opens or will hurt you.
- The machine should be repaired by the manufacturer or agent if it does not work.
- We are not Responsible for hurting or requiring hurt as a self-amending machine.
- When the electric wire is damaged, must instead it.
- The electric wire must be used special soft wire, buy it from the manufacturer or repair department.
- The machine can not be washed with water, the machine is not a waterproof structure, and it will cause an electric shock and damage the mechanical department and electric parts.
- Please turn off all switches when not operating and unplug.
- Please stop operating and unplugging when the workman cleans the machine.
- Must stop the machine operating when find the machine operating unusually. Often check the blade cover, table loading meat, slicer, and other parts whether tight or damaged.
- Can not cut the frozen meat below the temperature of -6°C.
- Please attach the manual operation when reselling the machine.
- Please contact us when damage or lose the manual operation. Please contact us when you meet other items which are not detailed in the manual operation.

The safety sign

The machine before operation must have reliable grounding, to avoid leakage accidents and personal accidents. In the machine operation, it is strictly prohibited to a finger into the work area, so avoid cutting off your fingers. In the machine and cleaning replacement blade, the finger may not touch the blade edge, lest stabbing fingers.

Main Technical Specifications

Model	Voltage	Power W	Slice Thick ness mm	Blade Di ameter mm	Max sli cing wi dth	Weight	Measurement
JK-195	220- 240V/50Hz/60Hz110V/60Hz	120W	0.2-12MM	195MM	160M M	14KG	520*420*380M M
JK-220J S	220- 240V/50Hz/60Hz110V/60Hz	120w	0.2-12MM	220MM	160M M	14.5K G	520*420*380M M
JK-220A	220- 240V/50Hz/60Hz110V/60Hz	120W	0.2-12MM	220MM	160M M	17KG	575*465*415M M
JK-220						18KG	
JK-220L						19KG	
JK-250A	220-240V/50Hz/60Hz 110V/60Hz	150W	0.2-12MM	250MM	160M M	18KG	575*465*415M M
JK-250						19KG	
JK-250L						20KG	
JK-275A	220-240V/50Hz/60Hz 110V/60Hz	250W	0.2-15MM	275MM	200M M	25KG	615*525*500M M
JK-275						26KG	
JK-275L						28KG	
JK-300A	220-240V/50Hz/60Hz 110V/60Hz	250W	0.2-15MM	300MM	220M M	27KG	615*525*500M M
JK-300						28KG	
JK-300L						30KG	

References

- [User Manual](#)