



VICTOR TOOLS K984 Extendable Torch Instruction Manual

[Home](#) » [VICTOR TOOLS](#) » VICTOR TOOLS K984 Extendable Torch Instruction Manual 

Contents

- 1 VICTOR TOOLS K984 Extendable Torch
- 2 Dimensions
- 3 Technical Details
- 4 Instructions for Use
 - 4.1 BATTERY INSTALLATION
- 5 CHARGING BATTERY BEFORE FIRST USE
- 6 RE-CHARGING
- 7 OPERATION
- 8 BATTERIES
- 9 Plug wiring (UK & IRELAND)
- 10 DISPOSAL
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts



VICTOR TOOLS K984 Extendable Torch



Dimensions

(D) 3.4 x (L) 14.3cm

- 550-700 LUMENS
- RANGE UP TO 300m
- SLIDE ZOOM FUNCTION FOR WIDE AND NARROW FIELDS OF VISION
- 60° SIDELIGHT OPTION
- HIGH BEAM, MEDIUM BEAM, FLASH & SOS FUNCTIONS
- USB RECHARGEABLE
- CARRY STORAGE CASE (not shown)
- 4-6 HOURS OF USAGE FROM ONE FULL CHARGE
- ALUMINIUM
- WEIGHT – 125g

Technical Details

- **INPUT VOLTAGE:** 100-250V a.c.
- **OUTPUT VOLTAGE:** 3.7V d.c. 500ma.
- **POWER FREQUENCY:** 100 Hz
- **WATTAGE:** 15W
- **BATTERY DETAILS:** Lithium-Ion 1200mAh (included)

Instructions for Use

Unpack the components carefully. Please check all parts have been removed from the packaging.

BATTERY INSTALLATION

- Unscrew the cover and install the battery with the positive end (with groove) towards the torch head, then close the lid.



Inserting Lithium-ion battery (included).

Or use normal batteries (requires additional part inside the torch)



CHARGING BATTERY BEFORE FIRST USE

- Install the charging battery with the positive end (with groove) towards the torch head, and then replace the cover.
- The battery is pre-charged. Do not charge before first use.
- When the power is low, the red warning light starts flashing as a reminder to recharge the battery.



RE-CHARGING

- Remove the cover from the charger socket and plug the charger lead into the torch and the mains adaptor.
- When the charger is plugged into the main socket, the charger LED will be green.
- Plug the charger into the socket on the torch.
- When charging, the charger LED will be red.
- Once the torch is fully charged, the LED will turn green.
- Always discharge the torch fully before recharging.
- Once fully discharged the battery will take up to 7 hours to recharge.

OPERATION

- To turn the torch on, press the silver button on the shaft of the torch until it clicks.
- The torch can perform 3 different functions: High beam, low beam, flashing, and COB lantern light/SOS function. To switch between the functions, gently press the silver button.
- To turn off, press the silver button in until it clicks again.
- Once performance reduces, the torch will need to be recharged.

WARNING:

- NEVER POINT THE TORCH DIRECTLY TOWARD YOUR EYES OR THE EYES OF OTHERS.
- DO NOT OVERCHARGE OR CHARGE FOR LONGER THAN 7 HOURS.
- ONLY USE WITH THE TRANSFORMER PROVIDED.
- OR USE WITH A SIMILAR RECHARGEABLE BATTERY PROVIDED.

BATTERIES


- Keep batteries away from children and pets.
- Do not mix used and new batteries.
- Remove the batteries if left for long periods.
- Never dispose of batteries in a fire.
- Battery disposal spent or expired batteries must be properly disposed of and recycled in compliance with local regulations. For detailed information, contact your local authority.
- Follow the battery manufacturer's safety, usage, and disposal instructions.

Plug wiring (UK & IRELAND)

- This appliance is supplied with a mains adaptor/charger with BS1363 plug pins.
- DO NOT use if the socket outlets in your home or office are not suitable for this product's mains adaptor/charger plug pins. Attempts to insert the mains adaptor/charger into the wrong socket is likely to cause electric hazard or damage.
- DO NOT use any other mains transformer/charger than the one that is supplied with this product.

DISPOSAL

- Coopers of Stortford use recyclable or recycled packaging where possible.
- Please dispose of all packaging, paper, cartons, and packaging in accordance with your local recycling regulations.
- At the end of the product's lifespan please check with your local council authorised household waste recycling center for disposal.
- Plastics, polybags – these are made from the following recyclable plastic.

Code & Symbol	
Type of Plastic	Please ABS
Commonly used for	CD's, crisp packets, various flexible packaging, baby bottles, sunglass lenses
Notes	Not often or widely recycled


UK Head Office, 11 Bridge Street, Bishop's Stortford, CM23 2JU Tel: 0844 4824400*, Fax: 01279 756595
www.coopersofstortford.co.uk.

EU address:

D.S.B. LD, 160 Bd. de Fourmies, 59100 Roubaix, France Tel: (+44) 1279 701269

UK Calls cost around 7 pence per minute plus your telephone company's network access. Please check with your telephone supplier.

Documents / Resources

	VICTOR TOOLS K984 Extendable Torch [pdf] Instruction Manual K984 Extendable Torch, K984, Extendable Torch, K984 Torch, Torch
---	---

References

- C [Coopers of Stortford | Home, Garden and Lifestyle | UK Delivery](#)
- C [Coopers of Stortford | Home, Garden and Lifestyle | UK Delivery](#)