



VICTRIX 049-006 Gambit Tournament Controller User Guide

[Home](#) » [VICTRIX](#) » VICTRIX 049-006 Gambit Tournament Controller User Guide 




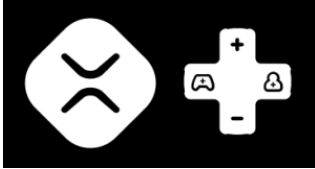




VICTRIX 049-006 Gambit Tournament Controller



Contents

- 1 WHAT'S IN THE BOX
- 2 Audio Settings
- 3 Programmable Back Buttons
- 4 Trigger Stops
- 5 Removing the Faceplate
- 6 Removing/Adding the Precision Analog Stick
- 7 Removing/Adding the D-pad
- 8 Removing/Adding the Gates
- 9 App
- 10 LIMITED WARRANTY
- 11 Documents / Resources
- 12 Related Posts

WHAT'S IN THE BOX

 WIRED TOURNAMENT CTRL	 2 FACEPLATES INCLUD ED	 INTERCHANGEABLE GA TES	 INTERCHANGEABLE D- PADS
 INTERCHANGEABLE AN ALOG STICKS	 INTERCHANGEABLE BA CK PADDLES	 3M BRAIDED USB-C CA BLE	 CARRYING CASE

Audio Settings


- A.** To adjust the game volume, hold down the “function” button and press\ Up/Down on the D-pad.
- B.** To adjust the game/chat balance, hold down the “function” button and press Left/Right on the D-pad.
- C.** Cycle through different audio mode profiles by holding down the “function” button and pressing LB/RB. The LED on the “function” button will cycle between Red, Green, or Blue to indicate the profile.
- D.** To mute your microphone, press the “function” button twice; the LED will illuminate amber.



Programmable Back Buttons


- A.** To program the back buttons, hold the “function” button and press the button you’d like to map a control to. Once the LED is flashing, press any button on the controller to map that button’s function to the back. The LED will blink quickly 3 times, indicating successful programming.
- B.** To clear a mapped button, hold down the “function” button and double press any back button.



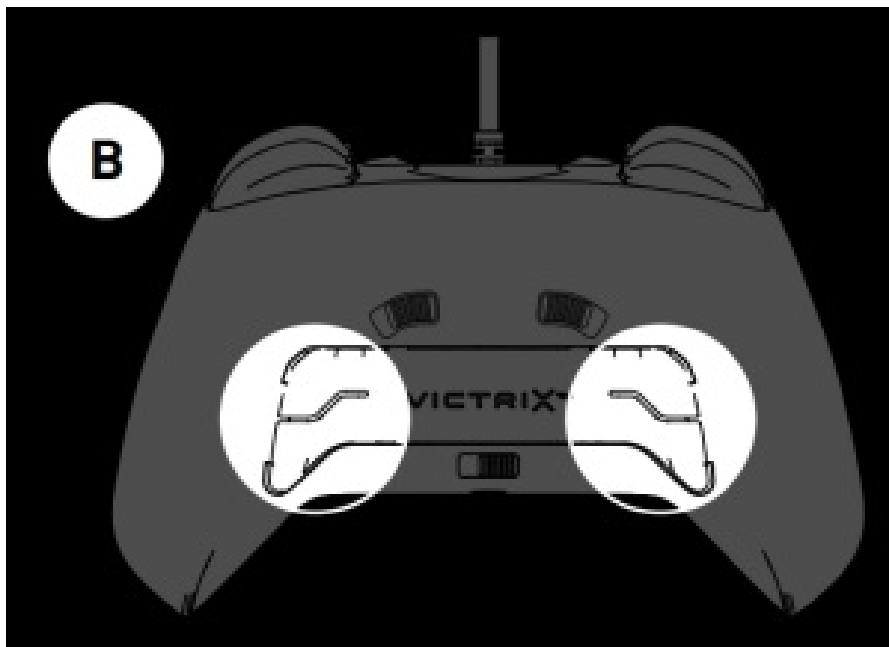


Trigger Stops

1. The Victrix Gambit Tournament Controller features 5 trigger stop settings.
2. To adjust the trigger stop, press and hold the purple clutch button on the back of the controller, then press the trigger down to the desired position. To set, release the clutch button. Repeat for the other trigger.

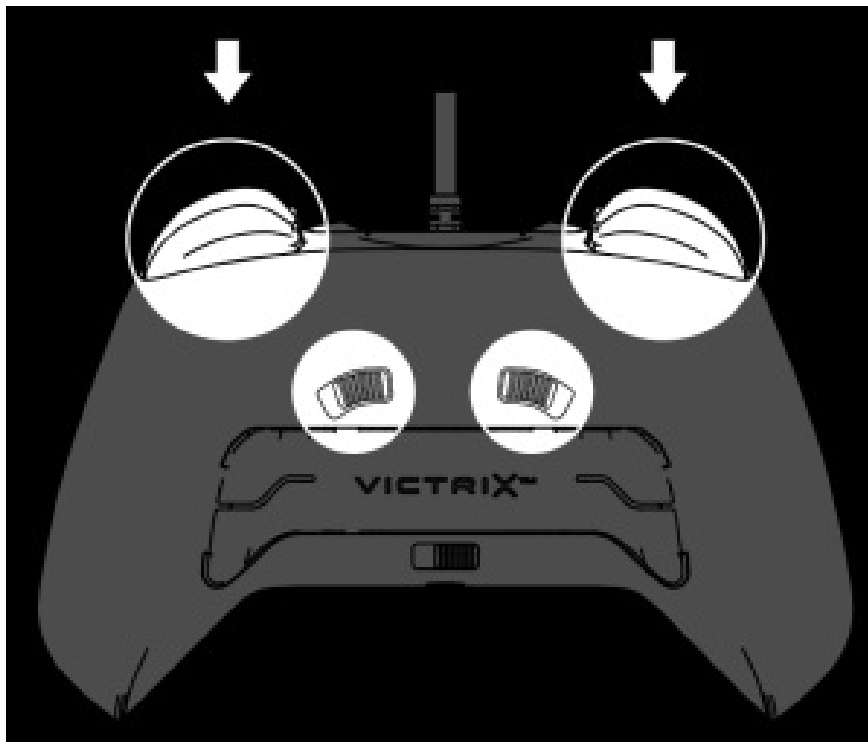


Removing the Faceplate

To remove the faceplate, locate the small finger indentation (above the 3.5mm audio jack) and pull up. The faceplate is held on by magnets and should easily release.

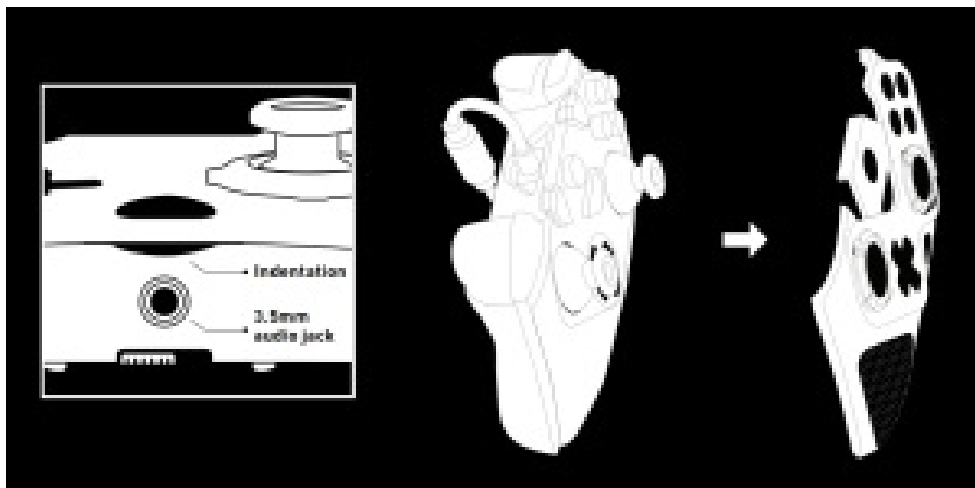

Removing/Adding the Precision Analog Stick


1. First, make sure the faceplate is removed.
2. To remove the analog stick, use a little force and pull the analog stick off the controller.
3. To add the precision analog stick, line it up with the controller and gently push the stick down.

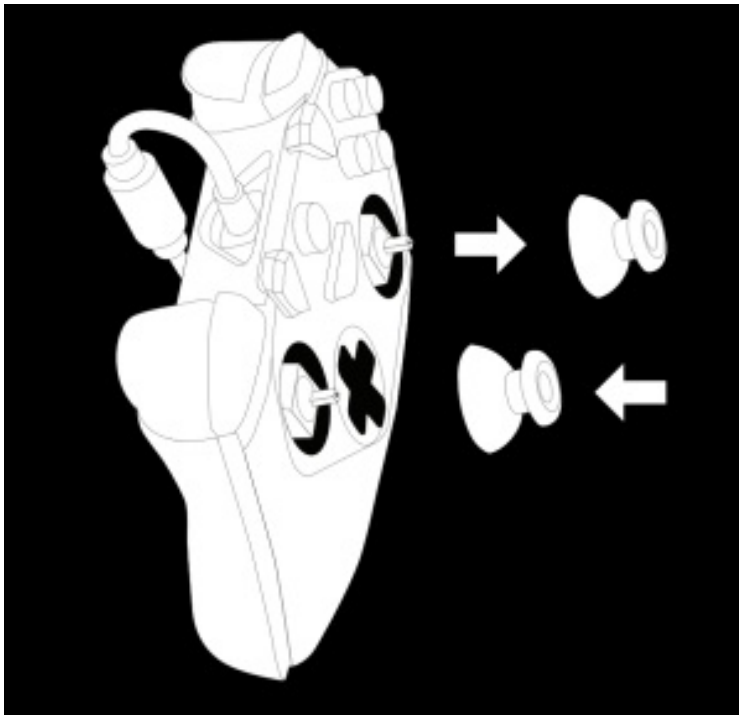

Removing/Adding the D-pad


1. To remove a D-pad, hold between two fingers and gently pull off.
2. To add a D-pad, line it up with the controller and gently push down until you hear a click.

***Note:** If a circular D-pad is on your controller, you will need to remove that first before trying to remove the faceplate or any other pieces.

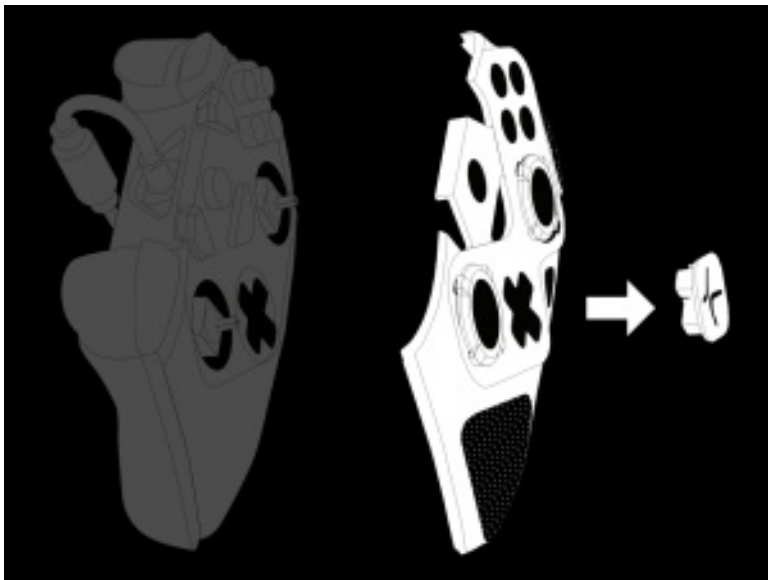

Removing/Adding the Gates

1. Once again, make sure the faceplate is removed first.
2. To remove a gate, flip the faceplate over (so the back is facing you) and press firmly on the back side of the gate with your thumb; the gate should pop out.
3. When adding a gate, first make sure the front of the faceplate is facing you. Then, line up the four notches of the gate with the gaps and use your thumbs to push in until it clicks.

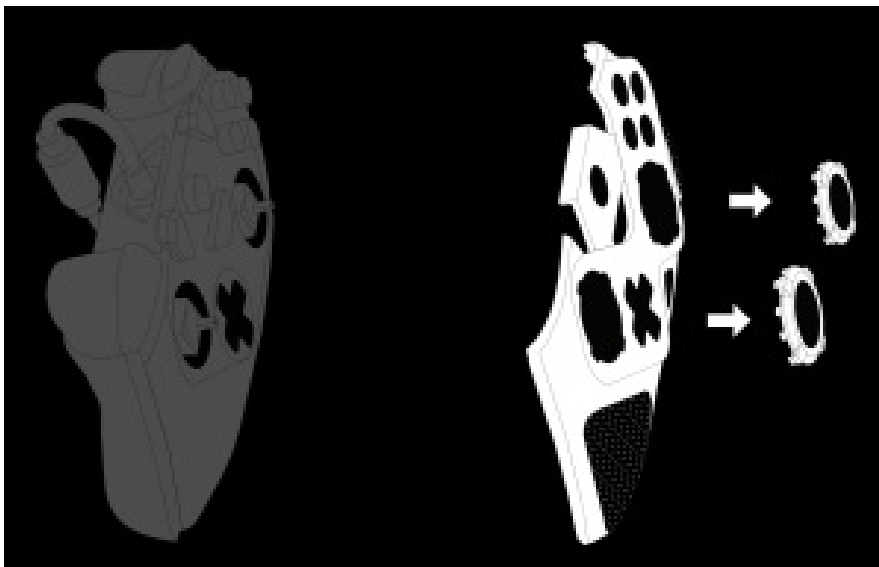

App

To customize your controller further, download the free Victrix Control Hub App from the Microsoft Store on your PC or Xbox. You can use it to re-map buttons, configure custom audio profiles, recalibrate analog sticks and triggers, run diagnostics, and much more.



LIMITED WARRANTY

- **Coverage and Term:** Victrix warrants that this product will be free from manufacturing defects for two years from the original date of purchase. Manufacturing defects are those defects in materials and/or workmanship, subject to final determination by Victrix's customer service department. This warranty applies only to original purchasers with a valid proof of purchase from an authorized Victrix retailer that clearly shows the date of purchase.

- **Exclusive Remedy and Exclusions:** The exclusive remedy for valid claims will be the repair, replacement, or refund of the product.

This warranty does not cover defects caused by accidents, improper or abusive use of the product, unauthorized or improper modifications, repairs, or handling.

- **How to Get Service:** Purchasers with product issues should not return the product to the store, but instead contact Victrix's customer service department first. You can contact Victrix customer service by phone at 1-800-331-3844 (US and Canada only), Monday to Friday from 8 AM to 6 PM PST. International customers can contact us by phone at +442036957905. You can always reach us, 24/7, by visiting victrixpro.com/support-victrix. Inquiries are typically answered within 24 business hours.

- **Your Rights Under Applicable Law:** This warranty does not affect the legal rights of customers under applicable state, provincial, or national laws governing the sale of consumer goods.

- **Additional Information for Australian Consumers:** Victrix products come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits given to you under our express warranty are in addition to other rights and remedies you have under the Australian Consumer Law and other laws.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Hereby, Victrix, declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. The declaration of conformity may be consulted at www.pdp.com/en/sitemap

This product is manufactured and imported by Victrix.


4225 W Buckeye Rd #2, Phoenix, AZ 85009
Herikerbergweg 88, 1101 CM Amsterdam, Netherlands
GPO Box 457 Brisbane, QLD 4001, Australia
Tower 42, 25 Old Broad Street, London, EC2N 1HQ



©2021 Victrix. Victrix and its respective logos are trademarks and/or registered trademarks of Victrix. All rights reserved.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Atmos and the double-D symbol are trademarks of Dolby Laboratories. Microsoft, Xbox, Xbox "Sphere" Design, Xbox Series X|S, Xbox One and Windows are trademarks of the Microsoft group of companies. All other trademarks are the property of their respective owners.

Documents / Resources

	VICTRIX 049-006 Gambit Tournament Controller [pdf] User Guide 049-006, Gambit Tournament Controller, 049-006 Gambit Tournament Controller, Tournament Controller
--	---