



# ViewSonic ID1330 ViewBoard Pen Display User Guide

[Home](#) » [Viewsonic](#) » ViewSonic ID1330 ViewBoard Pen Display User Guide 

## Contents

 
- [1 ViewSonic ID1330 ViewBoard Pen Display](#)
- [2 Overview](#)
- [3 Package Contents](#)
- [4 Connection](#)
- [5 Setting Up the ID1330](#)
- [6 Important information](#)
- [7 Support Option](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)



**ViewSonic ID1330 ViewBoard Pen Display**



## Overview

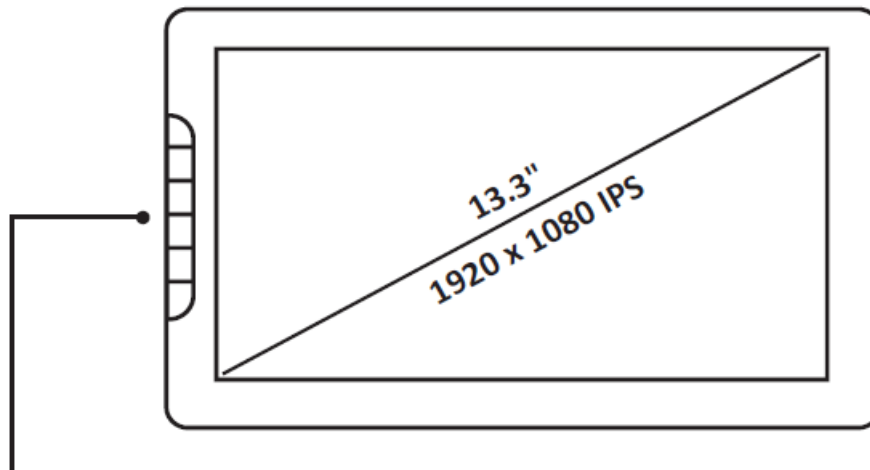

### Shortcut keys(Six)

 
 
 
**NOTE:** The six shortcut keys can be customized as needed.

## System Requirements

**Windows:** 7/8/10 or above **Mac OSX :** 10.11 or above

## Package Contents


- ID1330 x1
- Protection Cover x1
- Stylus x1
- Pen Nibs x3 and Pen Nibs Remover x1
- Type-C to Type-C Cable x1
- Mini HDMI to HDMI Cable x1
- USB-A to Type-C Cable x1
- Quick Start Guide x1

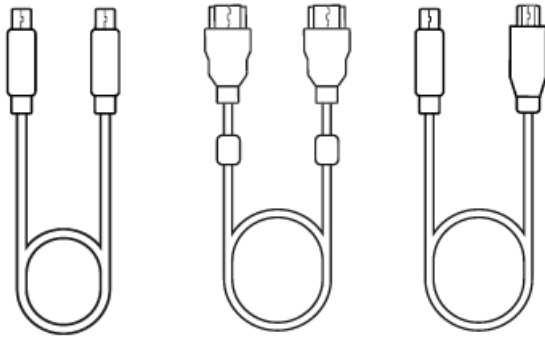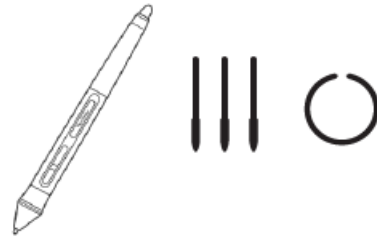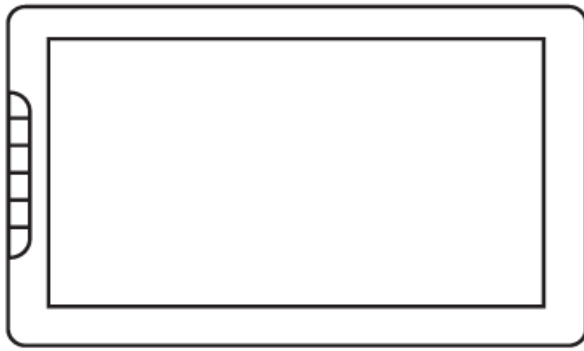

## Connection


Type-C to USB & Mini HDMI to HDMI

 1. Connect the Type-C/Mini HDMI end to the ID1330
2. Connect USB/HDMI end to your computer and Connect the USB/HDMI end to your computer, then press and hold the ID1330's power button for 3 seconds.

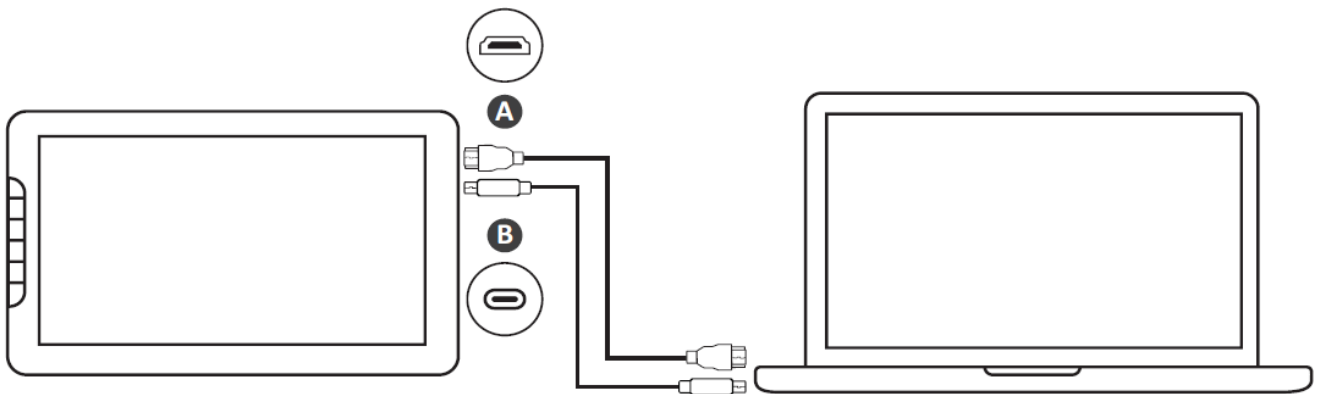

## Type-C to Type-C

 Connect the ID1330 to your computer using the Type-C cable and see above note. If you have black or blurred screen, please plug in the adapter for more power supply. Please plug in other adapter when you want to use over 70% brightness.

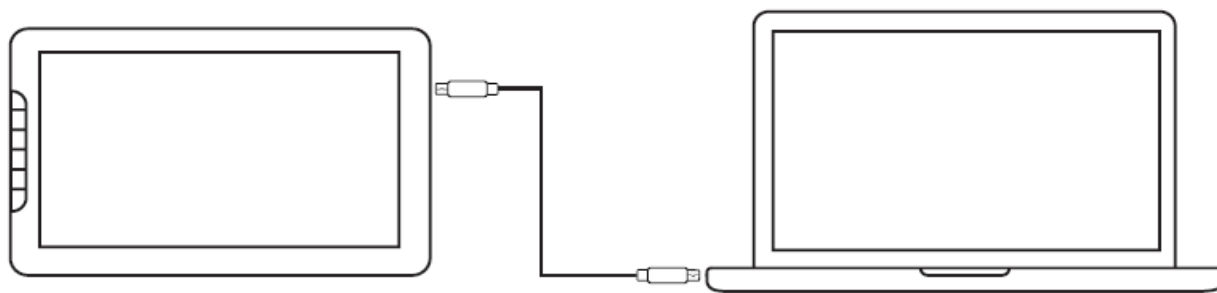

## Setting Up the ID1330

### Before Installing

 
1. Uninstall and completely remove any driver of other graphic tablets/monitors installed on your computer/laptop before.
2. Disable any anti-virus software and firewall temporarily.
3. Make sure you are installing the driver as an administrator.

### Installation

1. Download and install the driver from: <https://www.viewsonic.com/global/products/pendisplay/ID1330>
2. After a successful installation, reboot the computer.
3. Plug in the ID1330 and the system will show the “ViewSonic Pen Manager” icon in the system tray.

### Changing the Pen Tip

1. Pull out the pen nib from the pen by using the nib removal tool.
2. Insert a new nib and push it into the pen.

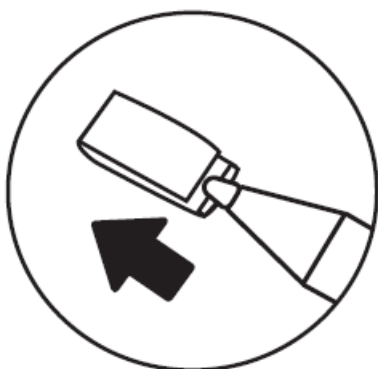

### Important information



1. The user manual is uploaded into ViewSonic product page. It provides detailed information in using and customizing your ID1330
2. You may find a solution from FAQ if you have any questions with ID1330
3. Check for updated driver of ID1330 from Driver page:  
<https://www.viewsonic.com/global/products/pendisplay/ID1330>

Support Option

- 1. Visit ViewSonic <https://www.viewsonic.com/global/products/pendisplay/ID1330> for driver update, user manual and FAQ
- 2. 2 Click “contact us” to send your enquiry

ID1330\_QSG\_1a\_ENG\_20210202  
Copyright © 2020 ViewSonic Corporation. All rights reserved.

Documents / Resources

	<p><a href="#">ViewSonic ID1330 ViewBoard Pen Display</a> [pdf] User Guide ID1330, ViewBoard Pen Display</p>
	<p><a href="#">ViewSonic ID1330 ViewBoard Pen Display</a> [pdf] User Guide ID1330 ViewBoard Pen Display, ID1330, ViewBoard Pen Display</p>