



ViewSonic PF0730-I0WW ViewBoard Notepad User Guide

[Home](#) » [Viewsonic](#) » ViewSonic PF0730-I0WW ViewBoard Notepad User Guide 

ViewSonic PF0730-I0WW ViewBoard Notepad User Guide



Contents

- [1 Package Contents](#)
- [2 System Requirements](#)
- [3 Specifications](#)
- [4 How to connect](#)
- [5 Know your Ink Pen](#)
- [6 Replacing ballpoint refill](#)
- [7 Support option](#)
- [8 Official website](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)

Package Contents

- PF0730-I0WW / ID0730
- Ink Pen
- Notebook
- Ink Refill x2
- Nib Remover
- USB Cable
- Quick Start Guide
- Double-sided Tape

System Requirements

- Free USB Port
- Windows® 7 or Later
- macOS 10.15 or Later
- Google Chrome OS

Specifications

Model Name	PF0730 / ID0730	Interface	USB
Dimensions	200 x 170 x 7.5mm	Pen	Battery Free
Active Area	6.4" x 4" (7.5")	Pressure Level	4096
Weight	165g±10%	Diameter	12mm
Resolution	5080 LPI	Accuracy	0.25mm
Reading Speed	250 PPS		


ViewBoard Notepad is a plug and play digital writing pad, equipped with an Ink Pen and ViewSonic Notebook. Users can write on the Notebook and it will simultaneously display on your computer screen. No installation of drivers is needed to use the ViewBoard Notepad.

Note: Please download and install the driver, "ViewSonic Pen Manager", from the official website to achieve pen pressure for MacOS.

How to connect


Step 1

1. Take out the ViewSonic Notebook and double-sided tape.
2. We recommend sticking the double-sided tape on the upper back end of the Notebook.
3. Now take out the device and stick the Notebook within the four corner frame of the active area.
4. ViewBoard Notepad is easy to use to edit and share your notes.

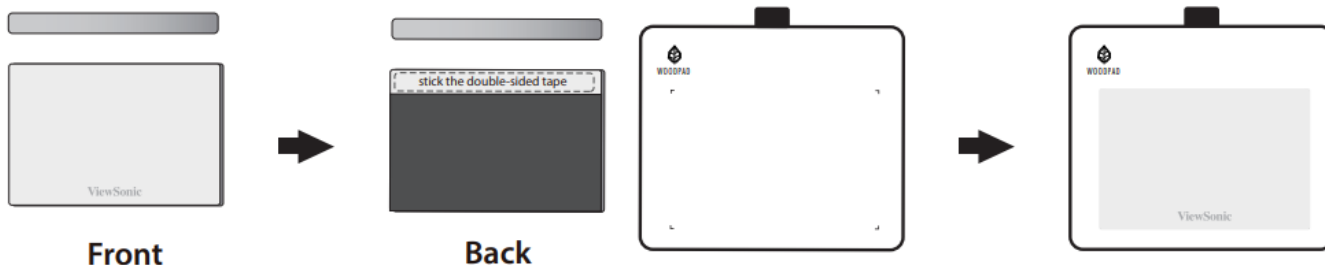

Step 2

1. Connect the micro USB cable to the ViewBoard Notepad.
2. Connect the other end of the USB cable to the USB interface of your PC/Mac/ Chromebook.

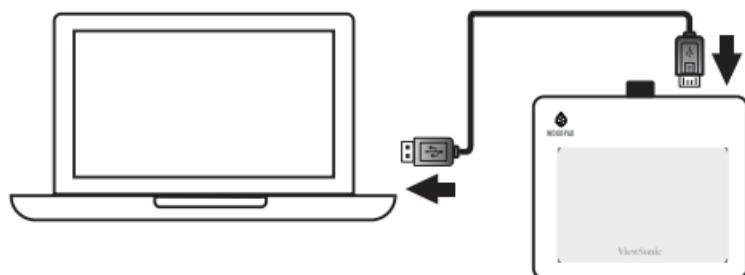


Installation

1. Uninstall and completely remove any driver of other graphic tablets/ monitors installed on your computer/laptop before.
2. Disable any anti-virus software and firewall temporarily.
3. Make sure you are installing the driver as an administrator.
4. Download and install the driver from:
<https://www.viewsonic.com/us/id0730.html#downloads>
5. After a successful installation and reboot of the computer, plug in the ViewBoard Notepad and the system will show the "ViewSonic Pen Manager" icon in the system tray.

Know your Ink Pen


Just like using a ballpoint pen, the Ink Pen is for writing on the Notebook.

Note: Do not write on the device without the Notebook, this will leave an ink mark on the device affecting the surface of the digital writing pad.

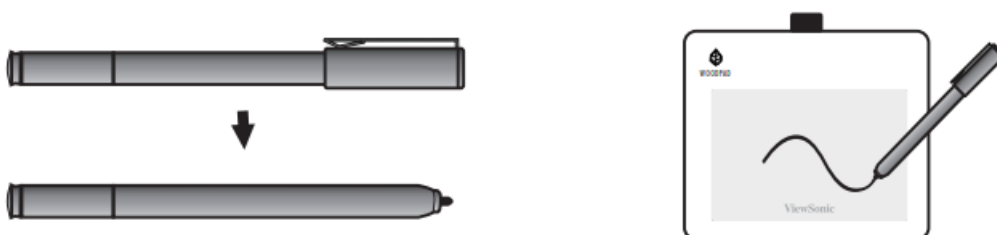

Replacing ballpoint refill

1. Remove the refill using the nib removal tool.
2. Insert the new refill back into the pen tip and press it down firmly.

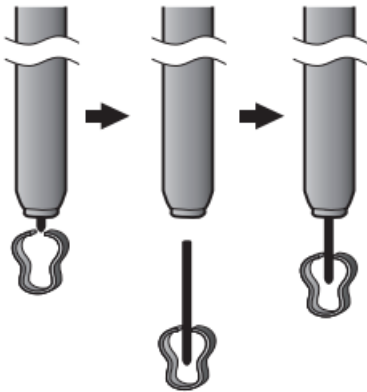

Note: Genuine D1 refill cartridges for PF0730-I0WW can be purchased through your local ViewSonic Customer Service.

Support option

1. Visit ViewSonic®: <https://www.viewsonic.com/us/id0730.html#> for product support and FAQ.
2. Select “Contact Us” to send your inquiries.
3. Please check the official website for quick guides and user guide updates in other languages.

Official website

1. ViewSonic® : <https://www.viewsonic.com/us/>
2. ViewSonic® PenDisplay <https://pendisplay.viewsonic.com/>



Warning : Choking Hazard

- This device may contain small parts which may be a choking hazard to children under 3.
- Keep small parts away from children.



This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Documents / Resources



[ViewSonic PF0730-I0WW ViewBoard Notepad](#) [pdf] User Guide
ID0730, PF0730-I0WW, ViewBoard Notepad, PF0730-I0WW ViewBoard Notepad

References

- [ViewBoard Notepad - ViewSonic](#)
- [Viewsonic ID0730, VB Pen Tablet](#)

[Manuals+.](#)