

VIKING
RC-3 Relay Remote
Touch Tone Controller



VIKING RC-3 Relay Remote Touch Tone Controller Instruction Manual

[Home](#) » [VIKING](#) » VIKING RC-3 Relay Remote Touch Tone Controller Instruction Manual 

Contents

- 1 VIKING RC-3 Relay Remote Touch Tone Controller
- 2 Product Information
- 3 Product Usage Instructions
- 4 FAQ – Frequently Asked Questions
- 5 INTRODUCTION
- 6 Features
- 7 Applications
- 8 Specifications
- 9 Definitions
- 10 Installation
- 11 RC-3 Operation Commands
- 12 Programming
 - 12.1 Entering the Programming Mode
- 13 Operation
 - 13.1 E-30 Mode
- 14 Warranty
- 15 TWO-YEAR LIMITED WARRANTY
- 16 FCC REQUIREMENTS
- 17 Documents / Resources
 - 17.1 References

VIKING

VIKING RC-3 Relay Remote Touch Tone Controller



Product Information

Specifications:

- **Product Name:** RC-3 Relay Remote Touch Tone Controller
- **Manufacturer:** Viking Electronics
- **Manufactured in:** USA
- **Relay Control:** 3 relays, expandable up to 9 relays
- **Memory:** Nonvolatile E2 memory
- **Compatibility:** Standard Touch Tone phone
- **Power Source:** 32V talk battery or C.O. line/analog PABX/KSU station

Features:

- Control up to 3 maintained ON, maintained OFF, or momentary relay contacts remotely
- User programmable with access code for security
- Daisy chains up to three RC-3 units to control up to nine relays
- Switchable 32V talk battery for easy installation
- Loop detection for phone usage indication

Applications:

The RC-3 is ideal for remote control of various devices or systems that require relay switching, such as security systems, communication setups, and access control systems.

Product Usage Instructions

Access Code:

The Access Code is a user-programmable touch-tone code (1-6 digits) used to access the RC-3's relays. Change the default code for security. Disable by setting dip switch 2 to OFF.

Loop Detection:

The RC-3 includes loop detection hardware to detect phone usage for relay control state initiation and termination.

Normal Mode:

Operate in Normal Mode by setting dip switch 4 to OFF. Custom relay commands can be programmed. Dial Q +

access code for relay commands if dip switch 2 is ON.

Programming Timer:

A 20-second timer for remote programming. Reload the timer with each touch tone entry. Three beeps signal timeout.

Relay Commands:

User-programmable touch-tone commands for relay control, timed closure, and status indication. Default values listed in the manual.

Ring Trip Connection:

Connect to a CO line or analog PABX/KSU station for relay closures initiated by incoming calls after programmed ring delay.

Secure State:

When the access code is enabled, RC-3 is in a Secure State until the correct code is entered. Only responds to Q + Access Code or Security Code for access.

FAQ – Frequently Asked Questions

- **Can I connect more than three RC-3 units?**

No, the maximum daisy chain limit is three RC-3 units to control up to nine relays.

- **How do I reset the Access Code?**

To reset the Access Code, follow the programming instructions in the manual and set a new unique code.

INTRODUCTION

- The RC-3 enables a standard Touch Tone phone to control up to 3 maintained ON, maintained OFF, or momentary relay contacts from a remote location. The RC-3 is fully user-programmable and uses non-volatile E2 memory.
- Up to three RC-3's can be daisy-chained on the same line to control up to nine relays.
- The RC-3 features a switchable 32V talk battery allowing easy installation on a trunk port. In addition, the unit can be connected directly to a C.O. line or analog PABX/KSU station.

Features

- Operational commands can be customized 1, 2 or 3 digits in length
- User Touch Tone programmable
- Non-volatile E2 memory
- 6 digit security code (to access programming)
- 1-6 digit access code (disable or enable for additional control security)
- Switchable 32V talk battery
- Relay interrogation tones
- Programmable relay timed closures
- Cascade up to three RC-3's to control up to nine relays
- Programmable ring delay before answering
- Status LED's for relays 1, 2, 3 and power

- One power adapter can power up to three units

Applications

Remote Control of:

- High-security building entry systems
- Door strikes and gates in conjunction with doorboxes (W-1000, etc.)
- Signs, lights, cameras, sprinklers, motors
- Other contact-controlled equipment

Specifications

- **Power:** 12-24V AC or DC, 120V AC/12V DC 500mA UL listed adapter provided
- **Shipping Weight:** 0.54 kg (1.2 lbs) Dimensions: 133mm x 89mm x 44mm (5.25" x 3.5" x 1.75")
- **Environmental:** 0°C to 32°C (32°F to 90°F) with 5% to 95% non-condensing humidity
- **Talk Battery Output:** 32V DC
- **Relay contact ratings:** 5A @ 30VDC / 250VAC (relay 1), 0.5A @ 125VAC / 1A @ 30VDC (relays 2 and 3)
- **Connections:** (1) 6-position screw terminal strip, (1) 9-position screw terminal strip

Definitions

ACCESS CODE:

The Access Code is a user-programmable touch-tone code from 1 – 6 digits in length which can be used to access the RC-3's relays. If the RC-3 is programmed to require an access code, it will not respond to relay commands until "Q" plus the access code has been successfully entered. It is recommended that the default Access Code of 123456 be changed to a unique code by the user in programming. The requirement of "Q" plus the access code is disabled by setting dip switch 2 to OFF.

ACCESS TIMER:

The function of the Access Timer is to set the RC-3 back to the Secure State if Relay Commands are no longer being entered. The access timer always applies when using the RC-3 in the Ring Trip Connection (access code enabled or disabled) and the Parallel Connection but only when Access Code is enabled (dip switch 2 ON). The timer has a default value of 20 seconds and counts down in the background when the RC-3 is in the Relay Control State. Every time a touch-tone is entered, the Access Timer is reloaded, so it is possible to stay in the Relay Control State as long as touch tones are being entered. If the Access Timer elapses, it gives three beeps and sets the unit back to the Secure State. To return to the Relay Control State, it is necessary to reenter "Q" plus the Access Code. The minimum programmable time for the Access Timer is 3 seconds.

E-30 MODE:

The E-30 Mode is enabled by setting dip switch 4 to ON. This mode is used when using one or more Viking E-30 or E-30-EWPs (hands-free speakerphone with dialer) on the same line with the RC-3. This mode changes the default relay commands in the RC-3 to commands that do not conflict with the features or programming of the E-30 speakerphones. When set to the E-30 mode, custom relay commands can not be programmed (error beeps are provided). The E-30 mode is compatible with the relay bank number programming, so it is possible to have three RC-3's and nine E-30's on the same line for nine entry phones and nine door or gate control relays.

INTERDIGIT TIMER:

This timer operates in the Relay Control or insecure state and can be thought of as a "start over" timer. Its purpose is to allow the user to go back and start a Relay Command over if an error was made. In the normal entry of Relay Commands, as long as the time between touch tones does not reach three seconds, the Interdigit Timer does

nothing. However, if a mistake is made, the user can just wait three seconds, hear a single beep and start the Relay Command entry over. The Interdigit Timer only applies when the RC-3 is programmed with relay commands that are two or three digits in length. When programmed for single-digit commands, there are no “incomplete” commands, so the single beep is not provided.

LOOP DETECTION:

The RC-3 includes hardware to provide loop detection. When a phone is connected to the OUT terminals of the RC-3, this tells the unit when the phone is in use, making it possible to both start and terminate the Relay Control State (if programmed).

NORMAL MODE:

The RC-3 is running in the Normal Mode anytime dip switch 4 is set to OFF to disable the E-30 Mode. In the Normal Mode, default relay commands exist but custom relay and global commands of one, two or three digits in length can be programmed. When dip switch 2 is set to ON, “Q” plus a one to six digit access code must be dialed before relay commands can be entered.

PARALLEL CONNECTION:

The Parallel Connection allows the RC-3 to be “parallel” connected to a phone line (or talk path) and detect touch tones to control relays when the device using the line is not connected to the “Output” side of the RC-3. Ideally, the phone line or talk path is passed through the RC-3 from “In” to “Out”, so the RC-3 can use its Loop Detection to determine when the line is in use or goes back to idle. The Parallel Connection allows the RC-3 to function properly in cases when it is not possible to wire all devices that share the line through the “In” and “Out” of the RC-3. To use the Parallel Connection, tap off the phone line or talk path connect it to the “In” side of the RC-3 and set the Talk Battery switch to OFF.

PROGRAMMING TIMER:

The Programming Timer is a 20-second timer that runs when remote programming is entered by calling into the RC-3. Every time a touch-tone is entered, the timer is reloaded, so it is possible to stay in programming as long as at least one touch tone is entered every twenty seconds. If the timer elapses, the RC-3 gives three beeps and hangs up.

RELAY COMMANDS:

These are user-programmable touch-tone commands that tell the RC-3 to turn the relays on or off, start a timed closure, or indicate status. The default values for the Relay Commands are listed in the RC-3 Operation Commands section.

RELAY CONTROL STATE:

The RC-3 is in the Relay Control State when the access code is enabled (dip switch 2 ON) and “Q” plus the correct Access Code has been entered. Once in this mode, it will respond to Relay Commands. The RC-3 leaves the Relay Control State when the Access Timer elapses (Ring Trip Connection or Parallel Connection with Access Code enabled) or when the user hangs up in Trunk Connection or Series Connection. Similar to the Unsecure State but in the Unsecure State the Access Timer does not apply.

RING TRIP CONNECTION:

In the Ring Trip Connection, the RC-3 is connected to a CO line or analog PABX/KSU station. Talk battery is provided by the CO or PABX, so the RC-3 talk battery switch should be turned OFF. The CO or PABX rings the RC-3, which answers after the programmed ring delay and can then provide relay closures.

SECURE STATE:

When the access code is enabled (dip switch 2 ON) and “Q” plus the correct access code has not yet been entered, the RC-3 is in the Secure State. In this Secure State, the RC-3 ignores all other touch-tone dialing except “Q” plus a match to the Access Code to access the Relay Control State or “Q” plus a match to the Security Code to access the programming mode.

SECURITY CODE:

The Security Code is a six-digit touch tone code used to enter programming. Once the code has been successfully entered, any of the programmable features can be changed. It is recommended that the default Security Code of 845464 be changed to a unique code by the user in programming. See Programming.

SERIES CONNECTION:

The Series Connection is when the phone line or talk path is passed through the RC-3 from "In" to "Out". The RC-3 then uses its Loop Detection to determine when the line is in use or goes back to idle. Once the Relay Control State has been accessed, the user remains in the Relay Control State as long as the loop is still detected. The Access Timer and Programming Timer are not running in the Series Connection.

TRUNK CONNECTION:


In the Trunk Connection, the RC-3 is connected to a trunk input of a phone system or phones dedicated for relay control. The RC-3 provides 32V of talk battery, and the unit is accessed by just going off hook on a connected phone or accessing the trunk input. The Access Timer and Programming Timer are not running in the Trunk Connection.

UNSECURE STATE:

When the access code is disabled (dip switch 2 OFF), the RC-3 is in the Unsecure State. In this mode, the RC-3 continuously monitors touch tones and acts on any match to a relay command it detects, even if they are preceded by or followed by other touch tones. The Access Timer is not running in the Unsecure State.

Installation

Single RC-3

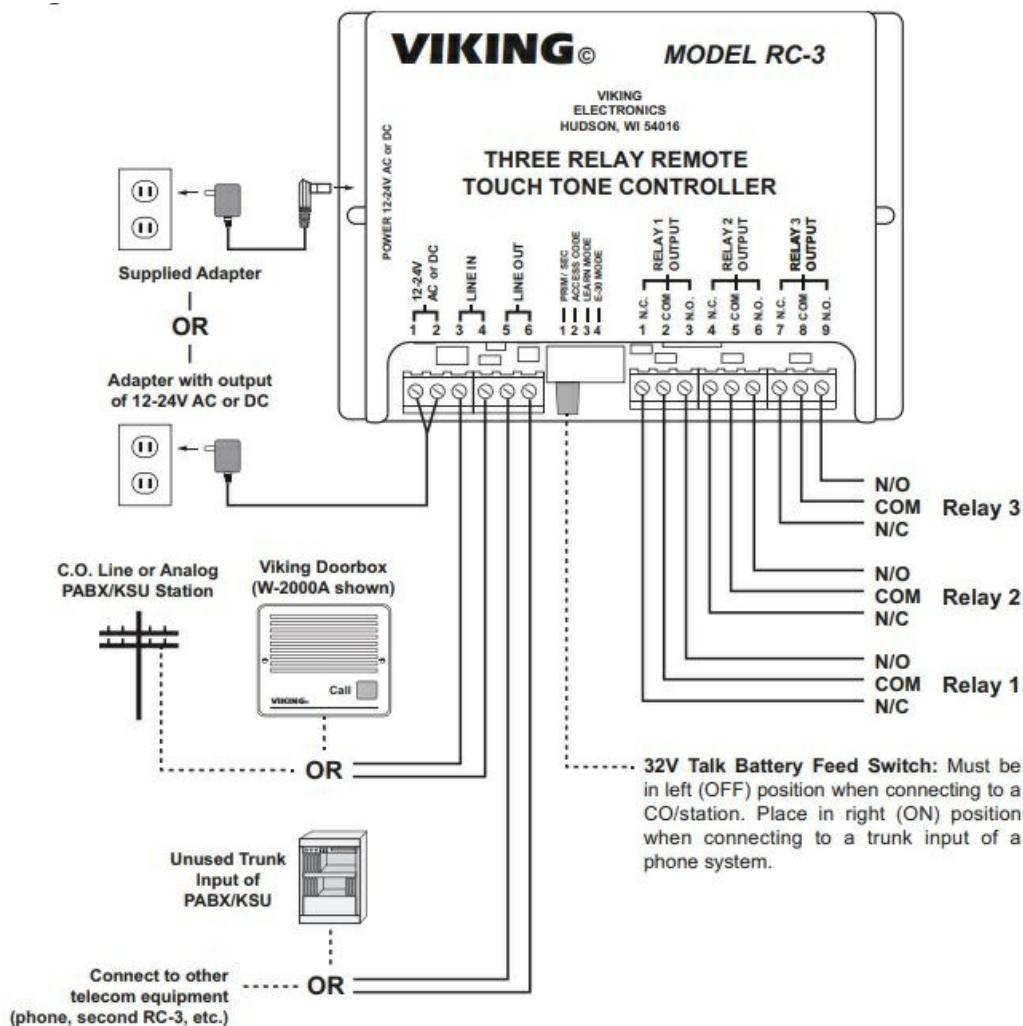


Expanding to Control 4 to 9 Relays

Two or three RC-3s can be daisy chained to the same line to control 1 to 9 relays. One “primary” RC-3 can power up to two “secondary” RC-3s by daisy chaining power from the power terminals (marked “12-24”). Dipswitch 1 should be turned OFF in each secondary unit. This disables the secondaries ring detection and also reduces the total REN loading on the line.

Notes:

1. Each unit must be programmed separately before being connected to the same line (see Programming), and all units must be programmed with the same access code.
2. Battery feed switches on both secondary units must be in the OFF position for Ring Trip applications. The battery feed switch of secondary RC-3 #1 should be set to ON in Trunk applications with only two RC-3s total and OFF with three RC-3s. The battery feed switch of secondary RC-3 #2 should be set to ON in Trunk applications.
3. The primary battery feed switch should always be set to OFF.
4. When the “relay bank number” is programmed in any RC-3, the timing for “timed activation” of each relay is set back to 5 seconds.

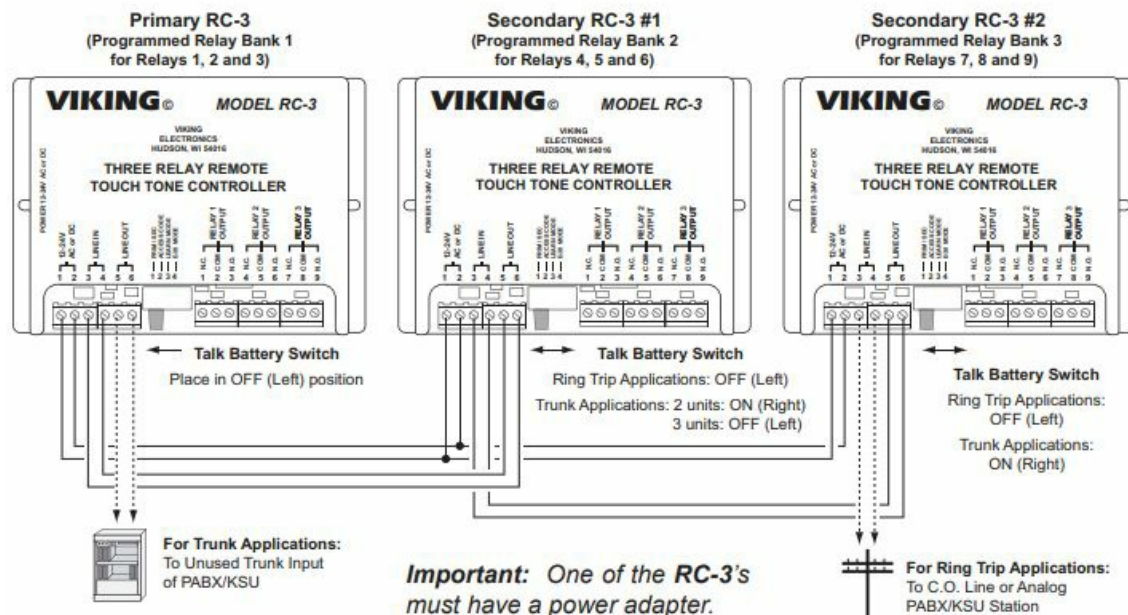

RC-3 Operation Commands

Default Relay Commands

The RC-3 is factory programmed with default relay commands that are two digits in length. The first digit is the relay (1-9) to control and the second digit determines if the relay is activated, deactivated or interrogated. To use the default commands, enter the relay number (1-3 for a single unit or 1-9 for multiple units) then enter one of the following digits:

Description	Digit
Activate relay (latch)	1
Deactivate relay (unlatch)	0
Timed activation (factory set to 5 seconds)	2
Interrogate relay status (one beep = deactivated, two beeps = activated)	3

Custom Relay Commands

The RC-3 can be programmed to respond to custom relay commands. See Programming for a description of how to program custom commands. Note that the commands can consist of any touch tones in the standard 12-tone matrix, that the commands may be one, two or three digits long, but that they must all be the same number of digits. To use custom relay commands, access the RC-3 and enter the relay command as programmed.

Notes:

1. If the number of digits in relay commands is changed in programming, all relay commands and global commands are disabled so they can be reprogrammed with the correct number of digits.
2. The touch tones “Q” and “#” can be used in your custom commands but if “Q” is the first (or only) digit of a command AND the access code is disabled (dip switch 2 OFF), it will no longer be possible to access programming by dialing “Q” + the security code. The only way to enter programming, in this case, is to either set dip switch 2 ON to enable the access code or turn dip switch 3 ON to enable the learn mode (see Programming section A).
3. When custom relay commands have been programmed and a user in the Relay Control State or Unsecure State dials a custom relay command, the RC-3 searches for a match to a programmed relay command starting at memory location “#10”. If the digits dialed do not match the command programmed in memory location “#10”, the RC-3 checks memory location “#11” and continues searching from the lowest to the highest memory location (“#42”). Once it does find a match to a relay command, it reacts to the first match found and does not search any further. If the same custom relay command is programmed into multiple memory locations, only the command programmed in the lowest memory location will work properly in operation.

Default Secondary Commands

As shown in Installation Section B, multiple RC-3 units can be stacked to control up to 9 relays in larger applications. The primary unit is assigned relay numbers 1-3, while the first secondary has 4- 6, and the second secondary has 7-9. Default relay commands for the secondary units then have a first digit of 4-6 or 7-9, and a second digit the same as the primary unit (see section A).

Note: The procedure for programming secondary RC-3s is described in Installation section B and Programming section D. Quick Programming Features. When the relay bank number is set in programming to 2 or 3 (which sets the unit up to act as a secondary), the default relay commands are automatically reprogrammed, so that the first digit of the commands are 4-6 or 7-9 instead of 1-3. Also, the timed activation of all relays is set back to 5 seconds following any relay bank number programming. For these reasons, it is important that the relay bank number be set first, before any other secondary programming.

Custom Secondary Commands

Secondary RC-3s can be programmed with custom relay commands as well. The same limitations and requirements apply as with the custom relay commands.

Default Global Commands


Command	Digits
To force the RC-3 to hang up	01
To start a timed activation for all relays	02

Custom Global Commands

As with the RC-3 relay commands, custom global commands may be programmed as well. The same limitations and requirements apply as with the custom relay commands.

Programming

DIP Switch Programming

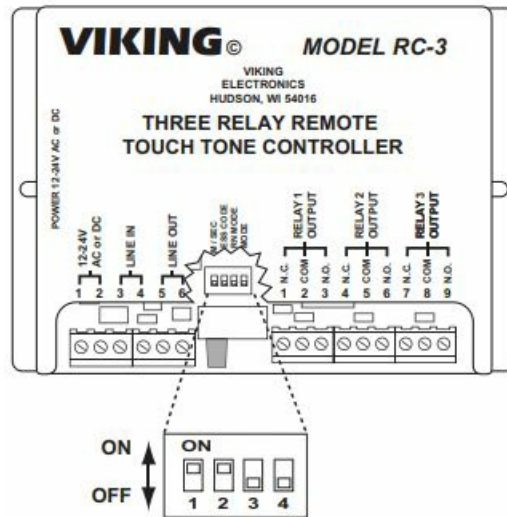

DIP Switch	Position	Description
1	OFF	Unit configured as a Secondary
1	ON*	Unit configured as a Primary
2	OFF	Access Code disabled
2	ON*	Access Code enabled
3	OFF*	Learn Mode disabled
3	ON	Learn Mode enabled
4	OFF*	** E-30 Mode disabled
4	ON	** E-30 Mode enabled

Factory Settings

** **Note:** When the RC-3 is switched into or out of the E-30 Mode, the timing for the “timed activation” of each relay is set back to 5 seconds. See Operation, section E.

Entering the Programming Mode

Notes:

- The touch tones “Q” and “#” can be used in your custom commands but if “Q” is the first (or only) digit of a command AND access code is disabled (dip switch 2 OFF), it will no longer be possible to access programming by dialing “Q” plus the security code. The only way to enter programming, in this case, is to either turn on dip switch 2 to enable access code or turn on dip switch 3 to enable the learn mode (see Programming section A. DIP Switch Programming).
- If the E-30 Mode has been enabled (dip switch 4 ON), “#” plus the security code is used to enter the programming mode, rather than “Q” plus the security code.
- Programming can only be accessed in the Series, Trunk or Ring Trip Connections. There is no way to access

the program mode in Parallel Connection.

1. To Locally Program the RC-3 Using a Security Code (without connecting unit to a telco line)

Step 1.	Connect a touch tone phone to the OUT terminals.
Step 2.	Place the TALK BATTERY switch in the ON position.
Step 3.	Come off hook.
Step 4.	Enter Q and the security code (factory set to 845464).
Step 5.	Two beeps should be heard. You are now in the programming mode.

2. To Locally Program the RC-3 without the Security Code (without connecting unit to a telco line)

Step 1.	Connect a touch tone phone to the OUT terminals.
Step 2.	Place the TALK BATTERY switch in the ON position.
Step 3.	Turn dip switch 3 (Learn Mode) ON .
Step 4.	Come off hook.
Step 5.	Two beeps indicate that you are in programming.
Step 6.	Be sure to return dip switch 3 to the OFF position when finished.

Note: To leave programming, hang up. The 20 second Programming Timer is not running while locally programming.

3. To Remotely Program the RC-3 Using a Security Code

Step 1.	Place the TALK BATTERY switch in the OFF position.
Step 2.	Connect the IN screw terminals to a CO line or analog PABX/KSU extension.
Step 3.	Call into the unit.
Step 4.	When the unit answers, one or two beeps should be heard.
Step 5.	Enter Q plus the security code (factory set to 845464).
Step 6.	Two beeps indicate that you are in programming.

4. To Remotely Program the RC-3 without the Security Code

Step 1.	Place the TALK BATTERY switch in the OFF position.
Step 2.	Connect the IN screw terminals to a CO line or analog PABX/KSU extension.
Step 3.	Turn DIP switch 3 (Learn Mode) ON .
Step 4.	Call into the unit.
Step 5.	The unit answers after one ring and two beeps indicate you are in programming.
Step 6.	Be sure to return dip switch 3 to the OFF position when finished.

Note: To leave programming, enter ##7 for immediate RC-3 hang up or just hang up the remote phone and the RC-3 will hang up 20 seconds later.

Programming Acknowledgment Beeps

The RC-3 acknowledges each correct programming entry with two beeps, and indicates incorrect entries by giving three beeps.

Note: During remote programming, a 20-second timer is running in the background. The timer is reloaded whenever a touch tone is entered, so it is possible to stay in programming as long as at least one touch tone is entered every 20 seconds. If no touch tones are entered for 20 seconds, the programming timer expires, the RC-3 gives three beeps and hangs up.

Quick Programming Features

Acknowledgement Tones		Enter Digits
Enable acknowledgement tones (factory setting)		*1
Disable acknowledgement tones		*2

Programming Relay Commands and Relay Timing	Enter Digits	+	Memory Location
Latch Relay 1 OFF	1-3 digits	+	#10
Latch Relay 1 ON	1-3 digits	+	#11
Relay 1 timed closure	1-3 digits	+	#12
Interrogate Relay 1	1-3 digits	+	#13
Relay 1 timed relay activation (HHMMSS), 18 hour maximum (000000 or blank is disabled, factory set to 5 seconds)	6 digits	+	#14
Latch Relay 2 OFF	1-3 digits	+	#20
Latch Relay 2 ON	1-3 digits	+	#21
Relay 2 timed closure	1-3 digits	+	#22
Interrogate Relay 2	1-3 digits	+	#23
Relay 2 timed relay activation (HHMMSS), 18 hour maximum (000000 or blank is disabled, factory set to 5 seconds)	6 digits	+	#24
Latch Relay 3 OFF	1-3 digits	+	#30
Latch Relay 3 ON	1-3 digits	+	#31
Relay 3 timed closure	1-3 digits	+	#32
Interrogate Relay 3	1-3 digits	+	#33
Relay 3 timed relay activation (HHMMSS), 18 hour maximum (000000 or blank is disabled, factory set to 5 seconds)	6 digits	+	#34
To enter * as part of a command	**		
To enter # as part of a command	* #		
Disable any of the above relay commands or timing	#	+	memory location

Programming Unit Operation	Enter Digits	+	Memory Location
Hang up (factory set to 01)	1-3 digits	+	#41
Timed activation all programmed relays (factory set to 02)	1-3 digits	+	#42
Security code (factory set to 845464)	6 digits (0-9)	+	#51
Access code (factory set to 123456)	1-6 digits(0-9)	+	#52
Ring delay before answering (1 to 99 rings, 00 = disabled, factory set to 15)	1-2 digits	+	#53
Set relay bank number (when using two or three RC-3's on the same line, factory set to relay bank 1)	1, 2 or 3	+	#54
Access code timeout in seconds (120 seconds maximum, 3 second minimum, factory set to 20 seconds)	1-3 digits	+	#55
Digits in relay commands (factory set to 2) Caution: This will erase all relay and global commands	1, 2 or 3	+	#56
To enter * as part of a command	**		
To enter # as part of a command	* #		
Return programming to default settings	###		
Disable any of the above commands	#	+	memory location

Note Programming a Secondary Unit: If using #54 to set the relay bank number, this must be done before setting the number of digits in relay commands (#56) or programming the individual relay commands. See *RC-3 Operation Commands, C. Default Secondary Commands*, on page 5.

Note Programming a Secondary Unit: If using #54 to set the relay bank number, this must be done before setting the number of digits in relay commands (#56) or programming the individual relay commands. See RC-3 Operation Commands, C. Default Secondary Commands, on page 5.

Unit Function	Enter Digits
Hang up in Programming	##7

Enable / Disable Acknowledgement Tones

- With acknowledgement tones enabled (“Q1”), the RC-3 confirms valid relay or global commands with acknowledgment beeps. Two beeps are provided when the relay is currently activated and a single beep is provided when the relay is currently deactivated.
- These acknowledgement tones can be disabled in programming using the “Q2” programming command. This will only disable acknowledgment tones following relay activation commands, relay interrogation commands or the timed activation of all relay’s global commands. All other operational beeps are still provided by the RC-3. It will still provide one or two beeps when it answers a call (in Ring Trip Connection), two beeps after a valid Access Code has been dialed (if Access Code is enabled), a single beep when the 3-second Interdigit Timer expires (incorrect length relay command has been dialed), three beeps when the Access Timer has expired (if applicable) and three beeps when the touch tone hang up command has been dialed.

Operation

Trunk Connection

In the Trunk Connection, the RC-3 can be accessed by going off the hook on the analog phone or trunk input connected to the OUT terminals of the RC-3 (see Installation, section A). If the Access Code is disabled, the user has immediate access and can begin entering Relay Commands. If the Access Code is enabled, the user enters “Q” plus the Access Code hears two acknowledgment beeps, enters the Relay Control State, and can start controlling the relays. The Access Timer is not running in the trunk mode. To leave the Relay Control State, just hang up the phone or trunk input.

Ring Trip Connection

In the Ring Trip Connection, the RC-3 can be accessed by calling the CO line or station connected to the IN terminals of the RC-3 (see Installation, section A). The RC-3 answers after its programmed ring delay. If the Access Code is disabled, the unit gives two acknowledgment beeps to indicate that it is ready to receive Relay Commands. If the Access Code is enabled, the RC-3 gives a single beep as a prompt to enter the Access Code. The user enters “Q” plus the Access Code, hears two beeps, enters the Relay Control State and can start controlling the relays. The Access Timer is running in the background and will pull the RC-3 out of the Relay Control State, provide three beeps, and hang up if the timer expires. To reenter the Relay Control State it is necessary to call the unit again and reenter the Access Code. To leave the Relay Control State, either hang up, allow the Access Timer to expire, or enter the hang-up command. The default value for this command is “01”, but this can be programmed to any 1 – 3 digit number (see Programming).

Parallel Connection

While the RC-3 is designed to be used in either the Trunk or Ring Trip Connection as described above, it may also be used in the Parallel Connection. This is done by connecting the IN terminals of the RC-3 in parallel with a CO line, station or other analog phones. Be sure to leave the RC-3’s talk battery switch turned OFF if the talk battery is being supplied by another source. If the Access Code is disabled, the RC-3 continuously monitors touch tones and acts on any match to a relay command it detects, even if they are preceded by or followed by other touch tones. If the Access Code is enabled, a user that enters “Q” plus the Access Code will hear two beeps, enter the Relay Control State and can start controlling the relays. The Access Timer is running in the background and will pull the RC-3 out of the Relay Control State and provide three beeps if the timer expires. To reenter the Relay Control State it is necessary to dial “Q” and reenter the Access Code. It should be noted that the Parallel Connection is not

suited for applications that require more than a very minimal level of security. The program mode of the RC-3 can not be accessed in the Parallel Connection.

Series Connection

In the Series Connection, a CO line or analog PABX/KSU station is connected to the IN terminals and a Viking entry phone or any other standard analog phone is connected to the OUT terminals of the RC-3. The RC-3 can be accessed any time the entry phone is using the CO line or PABX station. If the Access Code is disabled, the user has immediate access and can begin entering Relay Commands. If the Access Code is enabled, the user enters "Q" plus the Access Code, hears two acknowledgement beeps, enters the Relay Control State and can start controlling the relays. The Access Timer is not running in the Series Connection. The RC-3 leaves the Relay Control State when the phone or entry phone hangs up.

E-30 Mode

1. Setting up the E-30 Mode

- To program the RC-3 to operate in the E-30 mode, just flip DIP switch 4 to the ON position. The RC-3 automatically programs the E-30 relay/global commands, sets all three timed relay closures to five seconds, and sets the access code to Q. The E-30 Mode was designed to make the RC-3 and E-30 handsfree speakerphones fully compatible with one another when used on the same CO line or PABX/KSU station. This mode forces RC-3 commands to fixed values that will not interfere with E-30 operation. The programming mode of either the RC-3 or the E-30 can be accessed remotely and RC-3 relays can be controlled during outgoing or incoming calls. Any programmed custom relay commands have no affect in the E-30 mode. The E-30 mode is compatible with expanding to two or three RC-3's on the line. Relay bank number programming still applies for the second and third RC-3 to change their relay codes. Since this mode of operation uses "Q" for relay control, "#" plus the valid security code must be used to access the programming mode. The E-30 mode relay commands are two digits in length and are very similar to the default relay commands. The first digit is the relay (1 to 9) to control and the second digit determines if the relay is activated, deactivated or interrogated. To use the E-30 relay commands, enter the relay number (1-3 for a single unit or 1-9 for multiple units) then enter one of the following digits:

Description	Digit
Activate relay (latch)	9
Deactivate relay (unlatch)	Q
Timed activation (factory set to 5 seconds)	2
Interrogate relay status (one beep = deactivated, two beeps = activated)	3

- The E-30 mode global commands are set as follows:

Description	Digits
To force the RC-3 to hang up	Q1
To start timed activation for all relays	Q2

- Note 1:** The relay numbers change from 1-3 to 4-6 when programmed to relay bank number 2 (2#54). The relay numbers change to 7-9 when programmed for relay bank 3 (3#54).

- **Note 2:** The Access Code can be disabled in the E-30 mode but this is not recommended when the E-30's are programmed to dial phone numbers or extension numbers.
- **Note 3:** The RC-3 will not provide any error beeps when “#” is dialed or when “#” plus six digits are dialed that do not match the security code.
- **Note 4:** The E-30 can not be programmed to dial a “Q” touch tone as part of a phone number (for example, programming the E-30 to dial “Q67” before the rest of the number to block caller ID data). The “Q” from the E-30 will set the RC-3 to the Relay Control State.
- **Note 5:** Programming a pause as part of a phone number in the E-30 will set the RC-3 to the Relay Control State, since a pause in the E-30 is programmed with “Q7”. If pauses are needed in the E-30 dial string, remove power to all RC-3's that are on the line while programming the E-30's, then reconnect power to the RC-3's when finished programming.
- **Note 6:** In the E-30 Mode, if you access the program mode of the RC-3 and attempt to program custom relay commands, custom global commands or the access code, the RC-3 will provide three error beeps. Custom commands can not be programmed in the E-30 mode.
- **Note 7:** When the RC-3 is switched into or out of the E-30 mode, the timing for “timed activation” of each relay is set back to five seconds. This can be changed to any value up to 18 hours.

2. Operation in the E-30 Mode (Access Codes Enabled – Dipswitch 2 ON)

- **Outgoing Calls:** When the button is pushed on an E-30, the E-30 starts dialing its programmed phone numbers. When the call is answered, the user enters a “Q”, they hear two beeps and can start controlling the relays. The Access Timer is not running in the E-30 Mode if the CO line or PABX/KSU station is connected to the IN terminals and the E-30's are connected to the OUT terminals of the RC-3. If the RC-3 is wired in parallel to the CO line or PABX/KSU station (nothing connected to the OUT terminals of the RC-3), the Access Timer will be running and will pull the RC-3 out of the Relay Control State and provide three beeps if the timer expires (to reenter the Relay Control State it is necessary to dial “Q” again).
- **Inbound Calls:** Call the CO line or PABX/KSU station connected to the RC-3 and E-30's and wait for an E-30 or the RC-3 to answer the call. You can then enter the “Q”, will hear two beeps and can start controlling the relays. Whether the Access Timer is running or not running depends on how the RC-3 is connected, as described above in “Outgoing Calls”.

Notes for All Modes of Operation

1. If the timed activation of a relay is disabled by programming “000000” (or blank) as the time value, the RC-3 will provide three error beeps when a user in the Relay Control State or Unsecure State attempts to dial the timed activation command for that relay.
2. When custom relay commands have been programmed and a user in the Relay Control State or Unsecure State dials a custom relay command, the RC-3 searches for a match to a programmed relay command starting at memory location “#10”. If the digits dialed do not match the command programmed in memory location “#10”, the RC-3 checks memory location “#11” and continues searching from the lowest to the highest memory location (“#42”). Once it does find a match to a relay command, it reacts to the first match found and does not search any further. If the same custom relay command is programmed into multiple memory locations, only the command programmed in the lowest memory location will work properly in operation.

Warranty

IF YOU HAVE A PROBLEM WITH A VIKING PRODUCT, CONTACT VIKING TECHNICAL SUPPORT AT: [715-386-8666](tel:715-386-8666)

Our Technical Support Department is available for assistance Monday to Friday 8:00 am – 5:00 pm central time. Before you call, please:

1. Know the model number, the serial number, and what software version you have (see serial label).
2. Have the Product Manual in front of you.
3. It is best if you are on site.

RETURNING PRODUCT FOR REPAIR

The following procedure is for equipment that needs repair:

1. Customers must contact Viking's Technical Support Department at [715-386-8666](tel:715-386-8666) to obtain a Return Authorization (RA) number. The customer MUST have a complete description of the problem, with all pertinent information regarding the defect, such as options set, conditions, symptoms, methods to duplicate the problem, frequency of failure, etc.
2. **Packing:** Return equipment in the original box or in proper packing so that damage will not occur while in transit. The original product boxes are not designed for shipping – an overpack box is required to prevent damage in transit. Static-sensitive equipment such as a circuit board should be in an anti-static bag, sandwiched between foam and individually boxed. All equipment should be wrapped to avoid packing material lodging in or sticking to the equipment. Include ALL parts of the equipment. C.O.D. or freight collect shipments cannot be accepted. Ship cartons prepaid to: VIKING ELECTRONICS 1531 INDUSTRIAL STREET HUDSON, WI 54016
3. **Return shipping address:** Be sure to include your return shipping address inside the box. We cannot ship to a PO Box.
4. **RA number on carton:** In large printing, write the RA number on the outside of each carton being returned.

RETURNING PRODUCT FOR EXCHANGE

The following procedure is for equipment that has failed out-of-box (within 10 days of purchase):

1. Customers must contact Viking's Technical Support at [715-386-8666](tel:715-386-8666) to determine possible causes for the problem. The customer MUST be able to step through recommended tests for diagnosis.
2. If the Technical Support Product Specialist determines that the equipment is defective based on the customer's input and troubleshooting, a Return Authorization (RA) number will be issued. This number is valid for fourteen (14) calendar days from the date of issue.
3. After obtaining the RA number, return the approved equipment to your distributor. Please reference the RA number on the paperwork being shipped back with the unit(s), and also the outside of the shipping box. The original product boxes are not designed for shipping – an overpack box is required to prevent damage in transit. Once your distributor receives the package, they will replace the product over the counter at no charge. The distributor will then return the product to Viking using the same RA number.
4. The distributor will NOT exchange this product without first obtaining the RA number from you. If you haven't followed the steps listed in 1, 2 and 3, be aware that you will have to pay a restocking charge.

TWO-YEAR LIMITED WARRANTY

- Viking warrants its products to be free from defects in the workmanship or materials, under normal use and service, for two years from the date of purchase from any authorized Viking distributor. If at any time during the warranty period, the product is deemed defective or malfunctions, return the product to Viking Electronics, Inc., 1531 Industrial Street, Hudson, WI., 54016. Customers must contact Viking's Technical Support Department at [715-386-8666](tel:715-386-8666) to obtain a Return Authorization (RA) number.
- This warranty does not cover any damage to the product due to lightning, over-voltage, under-voltage, accident, misuse, abuse, negligence or any damage caused by use of the product by the purchaser or others. This warranty does not cover non-EWP products that have been exposed to wet or corrosive environments. This warranty does not cover stainless steel surfaces that have not been properly maintained.
- NO OTHER WARRANTIES. VIKING MAKES NO WARRANTIES RELATING TO ITS PRODUCTS OTHER THAN AS DESCRIBED ABOVE AND DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTIES OR MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.
EXCLUSION OF CONSEQUENTIAL DAMAGES. VIKING SHALL NOT, UNDER ANY CIRCUMSTANCES, BE LIABLE TO THE PURCHASER, OR ANY OTHER PARTY, FOR CONSEQUENTIAL, INCIDENTAL, SPECIAL OR EXEMPLARY DAMAGES ARISING OUT OF OR RELATED TO THE SALE OR USE OF THE PRODUCT SOLD HEREUNDER.
- EXCLUSIVE REMEDY AND LIMITATION OF LIABILITY. WHETHER IN AN ACTION BASED ON CONTRACT, TORT (INCLUDING NEGLIGENCE OR STRICT LIABILITY) OR ANY OTHER LEGAL THEORY, ANY LIABILITY OF VIKING SHALL BE LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT, OR AT VIKING'S OPTION, REFUND OF THE PURCHASE PRICE AS THE EXCLUSIVE REMEDY AND ANY LIABILITY OF VIKING SHALL BE SO LIMITED.
- IT IS EXPRESSLY UNDERSTOOD AND AGREED THAT EACH AND EVERY PROVISION OF THIS AGREEMENT WHICH PROVIDES FOR DISCLAIMER OF WARRANTIES, EXCLUSION OF CONSEQUENTIAL DAMAGES, AND EXCLUSIVE REMEDY AND LIMITATION OF LIABILITY, IS SEVERABLE FROM ANY OTHER PROVISION AND EACH PROVISION IS A SEPARABLE AND INDEPENDENT ELEMENT OF RISK ALLOCATION AND IS INTENDED TO BE ENFORCED AS SUCH.

FCC REQUIREMENTS

- This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the side of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.
- The REN is used to determine the number of devices that may be connected to a telephone line. Excessive REN's on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of the RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total REN's, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.
- The plug used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this RC-3 does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

- If the RC-3 causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.
- The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make the necessary modifications to maintain uninterrupted service.
- If trouble is experienced with the RC-3, for repair or warranty information, please contact:
- Viking Electronics, Inc., 1531 Industrial Street, Hudson, WI 54016 Phone: [715-386-8666](tel:715-386-8666)
- If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.
- Connection to Party Line Service is subject to State Tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

WHEN PROGRAMMING EMERGENCY NUMBERS AND (OR) MAKING TEST CALLS TO EMERGENCY NUMBERS:


- Remain on the line and briefly explain to the dispatcher the reason for the call. Perform such activities in the off-peak hours, such as early morning or late evening.
- It is recommended that the customer install an AC surge arrester in the AC outlet to which this device is connected. This is to avoid damaging the equipment caused by local lightning strikes and other electrical surges.

PART 15 LIMITATIONS

This equipment has been tested and found to comply with the limits for a Class A digital device, according to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used under the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Product Support: [715-386-8666](tel:715-386-8666)

Documents / Resources

 <p>VIKING PRODUCT MANUAL RC-3 Control 1 to 9 Relays Remotely</p>	<p>VIKING RC-3 Relay Remote Touch Tone Controller [pdf] Instruction Manual RC-3 Relay Remote Touch Tone Controller, RC-3, Relay Remote Touch Tone Controller, Remote Touch Tone Controller, Touch Tone Controller, Tone Controller, Controller</p>
---	--

References

- [V Security & Communication Systems - Access Control | Viking Electronics, Inc](#)
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.