 




VIMUKUN CM8009 Mini Single Serve Coffee Maker User Manual

[Home](#) » [VIMUKUN](#) » VIMUKUN CM8009 Mini Single Serve Coffee Maker User Manual 

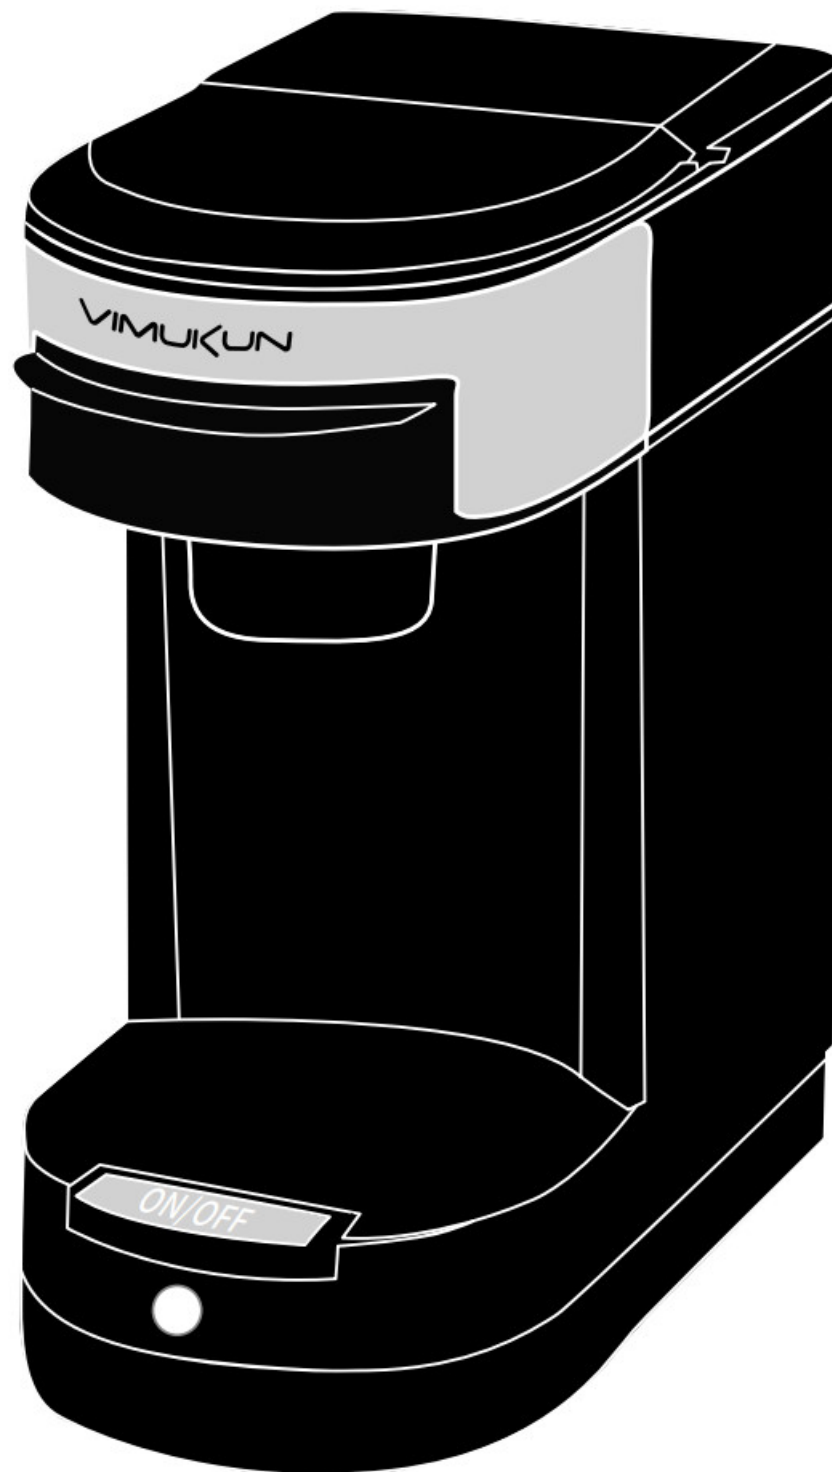



**FOR HOUSEHOLD USE ONLY
DO NOT IMMERSE IN ANY LIQUID**

Contents

- 1 IMPORTANT SAFEGUARDS**
- 2 KNOW YOUR COFFEE MAKER**
- 3 BEFORE YOUR FIRST USE**
- 4 HOW TO USE YOUR MINI COFFEE MAKER**
- 5 CLEANING AND MAINTENANCE**
- 6 DECALCIFYING**
- 7 Documents / Resources**
 - 7.1 References**

IMPORTANT SAFEGUARDS

Please read this instruction manual carefully before using this appliance. Save and store for future reference. When using this appliance, basic safety precautions should always be followed.

1. The Coffee Maker is NOT dishwasher safe.
2. Always turn Coffee Maker OFF when not in use.
3. Make sure all parts are completely dry before and after each use.
4. After the Coffee Maker has run for 5 minutes, the appliance will automatically power OFF.
5. For your safety, DO NOT open the lid while the Coffee Maker is in use.
6. Once you add cold water to the machine, turn the machine ON and wait 5 minutes.
7. After each use, once appliance cools down completely, throw away the used coffee grounds from the Coffee Basket.
8. Appliance can hold up to 13oz of water.
9. Allow appliance to cool down before cleaning.
10. DO NOT submerge coffee maker in water or any other liquids.
11. DO NOT use outdoors. This appliance is only intended for indoor domestic household use.
12. Close supervision is necessary when any appliance is used by or near children.
13. The product should be serviced by authorized personnel only.
14. To prevent fire or shock hazards. DO NOT expose this appliance to rain or moisture at any time.
15. DO NOT operate this appliance with a damaged cord or plug, after a malfunction or if the product has been damaged in any way. In this case, seek advice from your local qualified service technician.
16. DO NOT place this product on or near a hot gas or electric burner or into any other appliance. Never block the air vents, and DO NOT spill water or any other foreign objects into the vents.
17. Accessible parts may become hot during use. Children should be kept at a safe distance during (and directly after) the appliance is in use.
18. A fire may occur if the oven is covered or is in contact with flammable material, including curtains, drapes, walls, and similar. DO NOT store any item in the oven.
19. To avoid damaging the appliance, never use abrasive or harsh cleaning products to clean.
DO NOT step, lean, or sit on any part of this appliance.
20. DO NOT use this appliance for anything other than its intended use.
21. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury, and will void warranty.
22. DO NOT let cord hang over edge of table or counter, or touch hot surfaces, including the stove.
23. Pod Coffee Maker must be used on a flat surface away from the edge of counter to prevent accidental tipping.
24. DO NOT overfill the cold water reservoir with water.
25. Use only water in this appliance. DO NOT put any other liquids or foods in the water reservoir except as instructed in this user guide.
26. Unplug and allow to cool before putting on or taking off parts, and before cleaning the pod coffee maker.
27. CAUTION: The pod holder tray contains a sharp piercing needle. Use caution when cleaning these areas.
28. DO NOT twist, kink or wrap the power cord around the appliance, as this may cause the insulation to weaken and split, particularly in the location where it enters the unit.
29. WARNING: To reduce the risk of fire or electric shock, DO NOT remove any service covers. There are no user serviceable parts inside the coffee maker. Only authorized personnel should repair the coffee maker.
30. DO NOT pull out the coffee holder tray during the brewing process, as water vapor may rush out of the spout and burns may occur.

31. DO NOT leave appliance unattended while in use.
32. To protect against fire, electrical shock and personal injury, DO NOT place the cord, plugs or appliance in water or other liquids.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

POWER CORD INSTRUCTIONS

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised. If it is necessary to use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over unintentionally.
3. The electrical rating of the extension cord must be the same or more than the wattage of the appliance(the wattage is shown on the rating label located on the underside or back of the appliance).
4. Avoid pulling or straining the power cord at outlet or appliance connections.

POLARIZED PLUG

1. Your appliance is equipped with polarized plug (one blade is wider than the other).
2. To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.
3. If the plug does not fit fully into the outlet, reverse the plug. If it does not fit, please consult a qualified electrician. DO NOT attempt to defeat this safety feature by modifying the plug in any way.
4. **WARNING:** Improper use of the power cord may result in electric shock. Consult a qualified electrician if necessary.

KNOW YOUR COFFEE MAKER



- A. Water Tank
- B. Main Body
- C. Start Button
- D. Indicator Light
- E. Piercing Needle
- F. Detachable Pod Holder Tray
- G. Water Outlet
- H. Coffee Filter Basket
- I. Capsule Holder

BEFORE YOUR FIRST USE

Carefully unpack the single serve pod coffee maker and remove all packaging materials. To remove any dust that may have accumulated during packaging, wash the coffee filter basket, capsule holder with warm, soapy water. Rinse and dry thoroughly. DO NOT use harsh or abrasive cleansers on any part of the pod coffee maker. You may wipe the main body with a clean, damp cloth. Dry thoroughly.

DO NOT immerse the main body of the pod coffee maker, cord or plug in water or any other liquid.

NOTE: We recommend that prior to brewing your first cup, you “brew” a mug of water only, without the capsule. This will remove any dust that may have settled inside the pod coffee maker.

IMPORTANT: Use only cold water, the automatic brewing system has been designed to work only with cold water.

HOW TO USE YOUR MINI COFFEE MAKER

1. Make sure all parts are completely dry before and after each use.
2. Make sure the product is plugged in. see fig.1

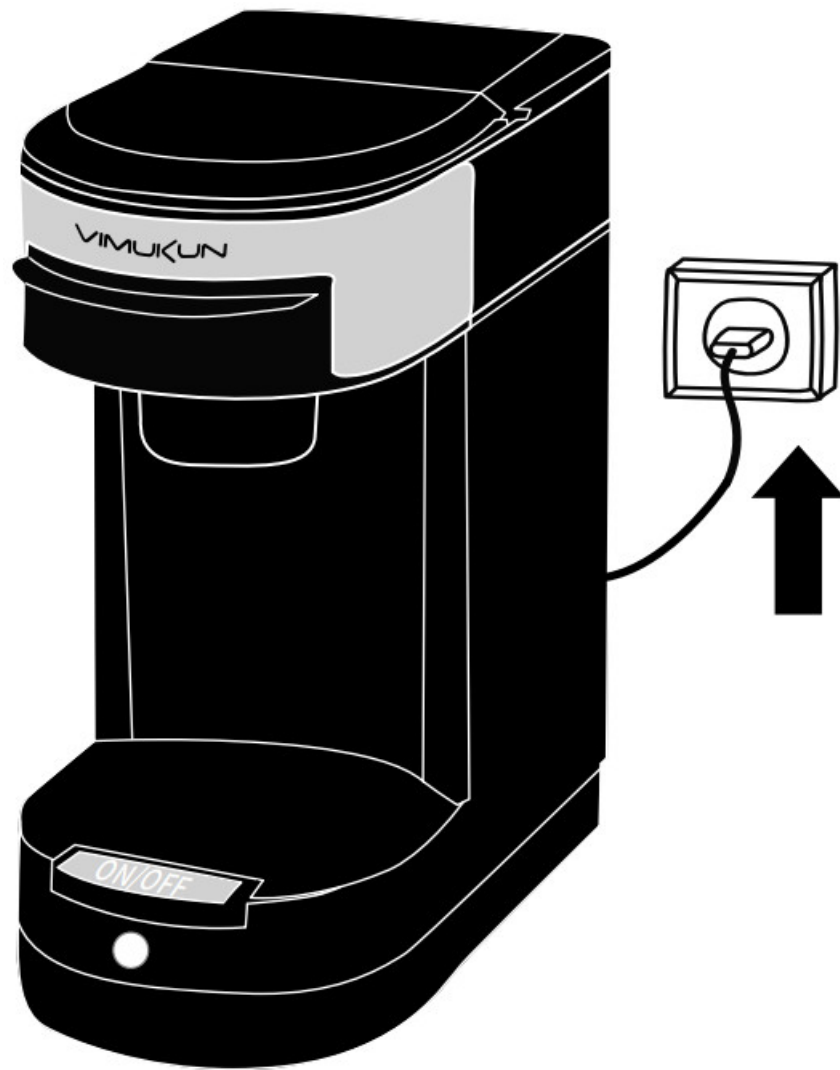


fig.1

3. Place your pod coffee maker on a flat, dry surface, such as a countertop.
4. Pull the coffee pod holder tray out and insert the capsule holder. And then insert your coffee capsule. see **fig.2**



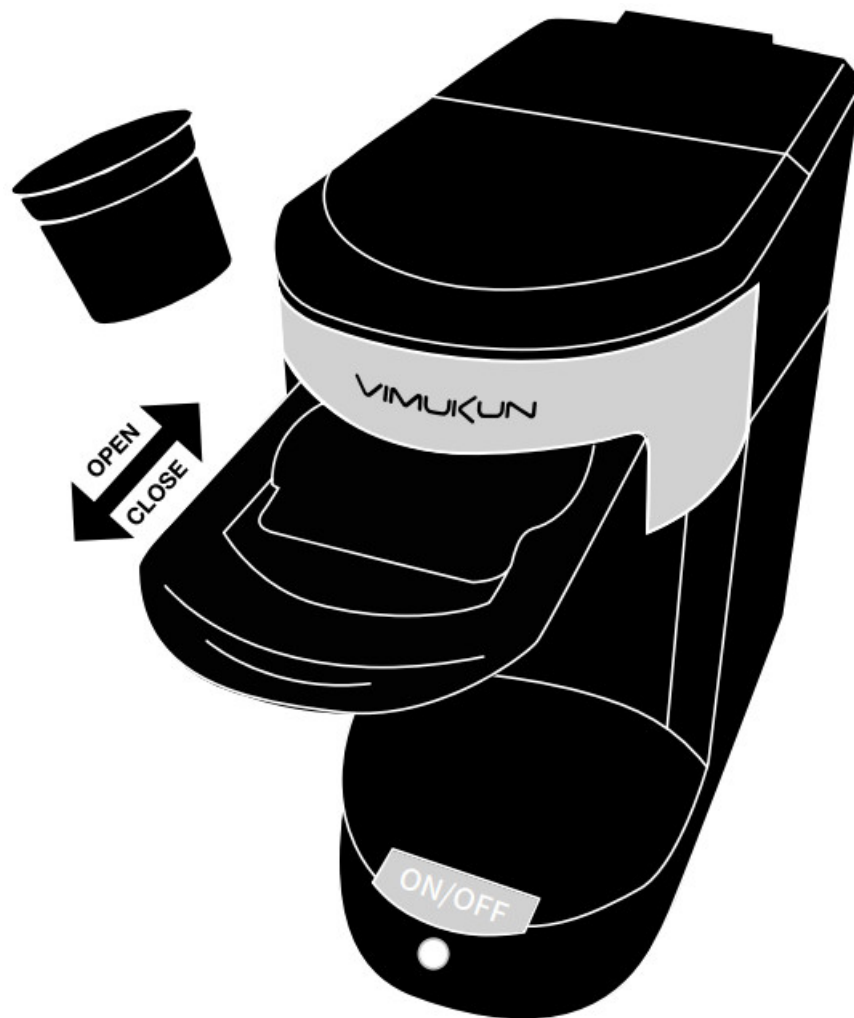


fig.2

CAUTION: There are sharp piercing needle on the lid of the coffee pod holder tray. Use caution when lid is opened.

5. Close the holder tray.
6. When brewing ground coffee, add ground coffee into the included coffee filter basket and close the lid. see fig.3
7. Put the coffee filter basket into the pod holder tray with the capsule holder. When placing, Note that the arrow on the coffee filter basket should be aligned with the capsule holder. Close the holder tray. see **fig.4**

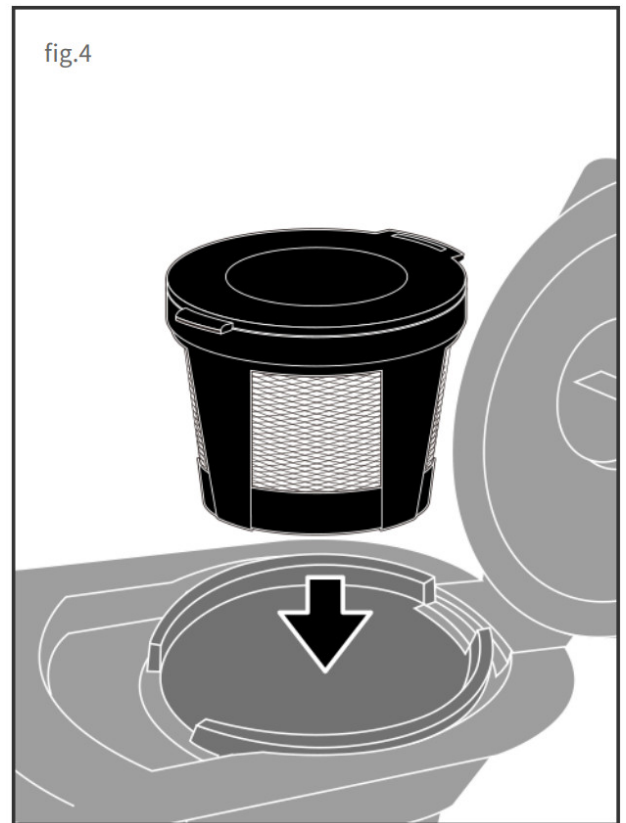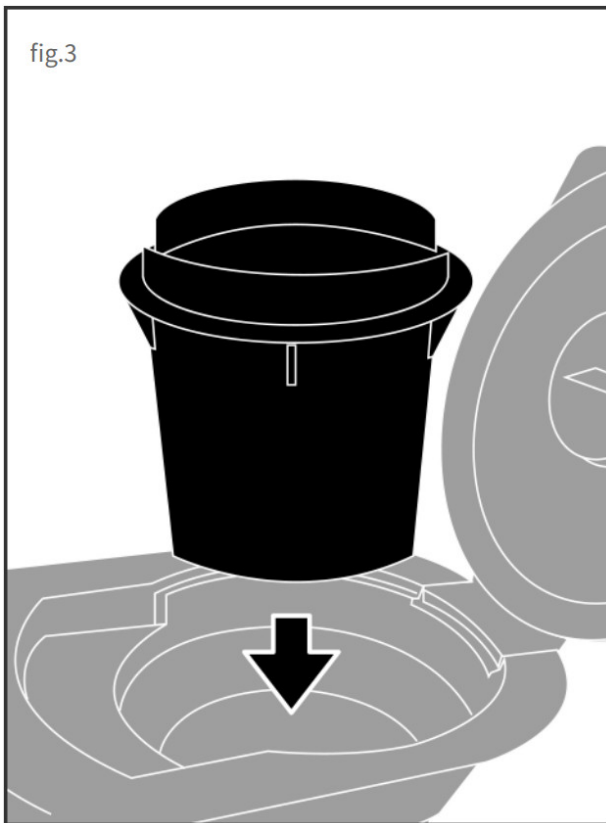

NOTE: We recommend that when using filter cup coffee powder, please don't use the extra fine powder of espresso coffee. The fine powder smaller than No.5(medium size) will easily block the cloth mesh, causing the water to not flow out normally and the coffee powder overflowing.

8. Fill your heat resistant mug with cold water and pour the water from the mug into the water tank. see fig.5 Close the water tank lid. If using the removable cup mat, ensure cup mat is centered in placing mug onto cup **mat**.



fig.5

IMPORTANT: Use only cold water the automatic brewing system has been designed to work only with cold water.

CAUTION: This pod coffee maker makes one fresh beverage at a time. You will need to add fresh cold water each time you brew. This unit does not store extra water in the water reservoir. DO NOT overfill the water tank. Maximum amount of cold water is 13oz. While you may use any mug that fits the pod coffee maker, ensure that the amount of cold water added into the water reservoir is no more than 13 oz and does not exceed the volume of the mug.

IMPORTANT: Check to make sure the Detachable pod holder tray is fully inserted into the machine and inserted correctly, keep the tank lid closed when making coffee to avoid burns.

9. Plug the unit into working 120 volt 60 Hz AC-only outlet.
10. Press the start button. The button will illuminate, indicating that your coffee maker has begun heating the water to prepare to brew. In a few minutes, your coffee maker will be finished brewing fresh coffee.
11. Once the brewing cycle has completed, the pod coffee maker will automatically turn itself off. You will know that the brewing cycle is over when the illuminated start button turns off. Unplug the power cord when not using the pod coffee maker.

WARNING:

- To avoid risk of personal injury or damage to property, DO NOT remove mug from pod coffee maker until the light turns off indicating that the brew cycle is complete.
- DO NOT pull out the pod holder tray during the brewing process, as hot water will continue to flow from the water outlet, or spray from the puncture needle, which may cause burn.

CLEANING AND MAINTENANCE

Other than the care and cleaning procedures mentioned in this manual, no other servicing or maintenance of this unit is necessary.

CAUTION: Be sure to unplug the pod coffee maker and allow to cool completely before cleaning. To protect against electric shock, DO NOT immerse cord, plug or pod coffee maker in water or any other liquid.

- Make sure to dispose of the used coffee grounds or cup immediately after each use.
- The detachable pod holder tray, coffee filter basket, capsule holder, reusable capsule, cup mat may be washed with warm, soapy water, then dried thoroughly before placing back into place.
- To clean the piercing needle and drain hole found at the bottom of the pod holder tray, insert a paper clip, toothpick or similar tool from below.(see fig.6)



fig.6

- Never use harsh detergents or abrasive cleaners on any part of your pod coffee maker.

- The main body may be wiped with a clean, damp cloth when necessary and dried thoroughly.

Note: Clean the permanent Coffee Basket regularly to prevent residue buildup.

IMPORTANT: Never immerse the heating stand, cord or plug in water or any other liquid. DO NOT try to clean the inside of the tank with cloth or paper towel, as this will leave a residue of lint and may clog your pod coffee maker. Simply rinse with cold water periodically.

CAUTION: The pod holder tray contain a sharp piercing needle. Use caution when cleaning these areas.

- Dry all parts thoroughly and store in a cool, dry place.
- Should your appliance require any maintenance, DO NOT attempt to service yourself. Consult qualified personnel.

DECALCIFYING

Calcium build-up frequently occurs in coffee makers. This build-up is quite normal and is caused minerals commonly found in drinking water. Your coffee maker will need to be descaled every 2-3 months to remove any calcium or mineral deposits that might have formed.

We recommend decalcifying your pod coffee maker with a solution of regular white vinegar and cold water. Use a solution of 2 tablespoons (30 ml) white vinegar in one mug of cold water.

Pour the vinegar solution into the water tank. Insert the capsule holder into pod holder tray, and then push it into place and close. Put the empty mug under the spout. *DO NOT use the reusable capsule.


Switch the pod coffee maker on and allow it to brew the vinegar solution. When the vinegar solution has finished "brewing", empty the mug and rinse it out with clean water.

Refill your mug with clean, cold water and run a second brew cycle. This will rinse out any remaining vinegar solution. If necessary, you may want to repeat this last step.

The frequency of decalcifying will depend on the hardness of your water. In normal water conditions, we suggest decalcifying your pod coffee maker every 2-3 months. In hard water conditions, we suggest decalcifying your pod coffee maker every 1-2 months.

Customer Service: support@vimukun.com

Documents / Resources

 <p>VIMUKUN MINI SINGLE SERVE COFFEE MAKER</p> <p>CM8009</p>	<p>VIMUKUN CM8009 Mini Single Serve Coffee Maker [pdf] User Manual</p> <p>CM8009 Mini Single Serve Coffee Maker, CM8009, Mini Single Serve Coffee Maker, Single Serve Coffee Maker, Serve Coffee Maker, Coffee Maker, Maker</p>
---	---

References

- [User Manual](#)