



VIOTEL TILT-V2.1-INT Wireless Triaxial Tiltmeter User Manual

[Home](#) » [VIOTEL](#) » VIOTEL TILT-V2.1-INT Wireless Triaxial Tiltmeter User Manual 







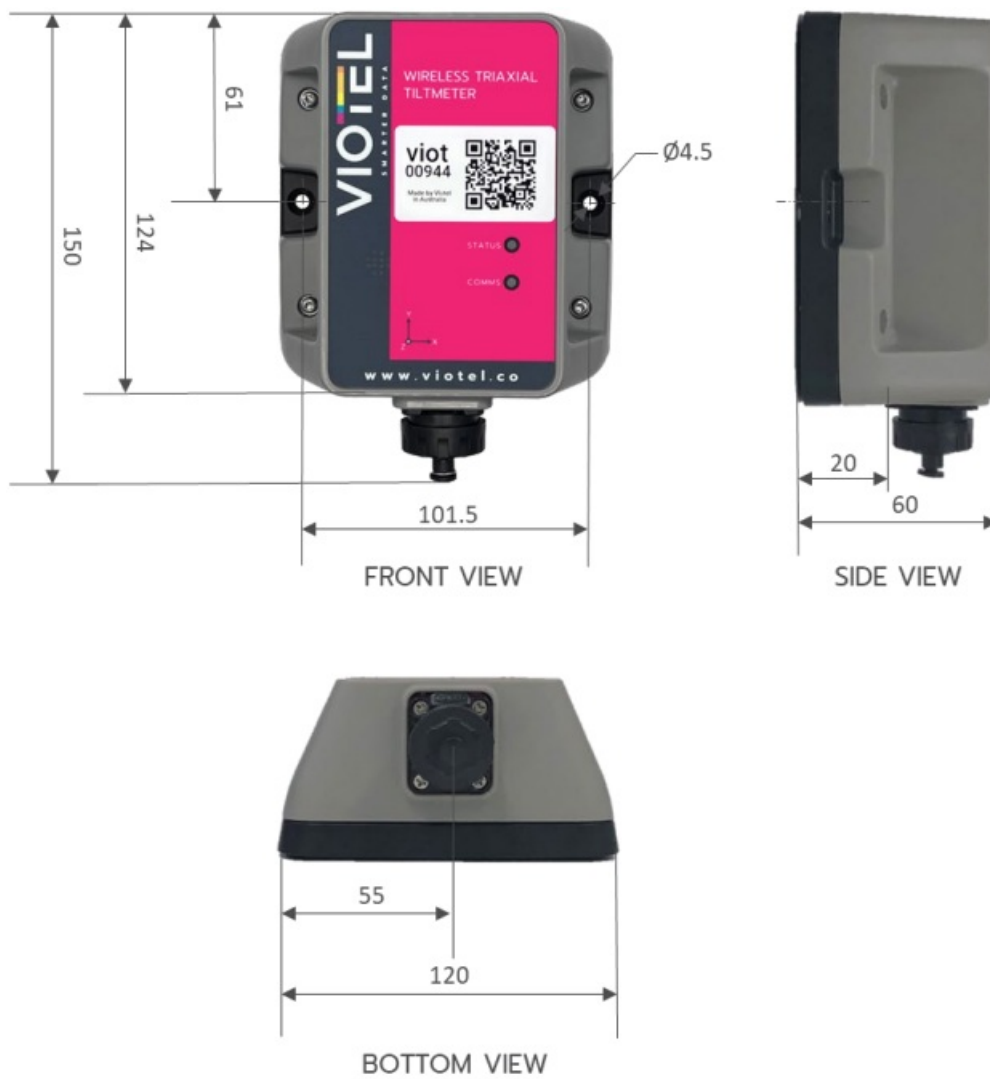


Figure 1 Dimensions in mm





Figure 3 Screw / Bolt Mount




Figure 4 Optional Pole Mount




Figure 5 Adhesive sticker on rear of tiltmeter




Figure 6: Photo showing X, Y, Z Axis Orientation

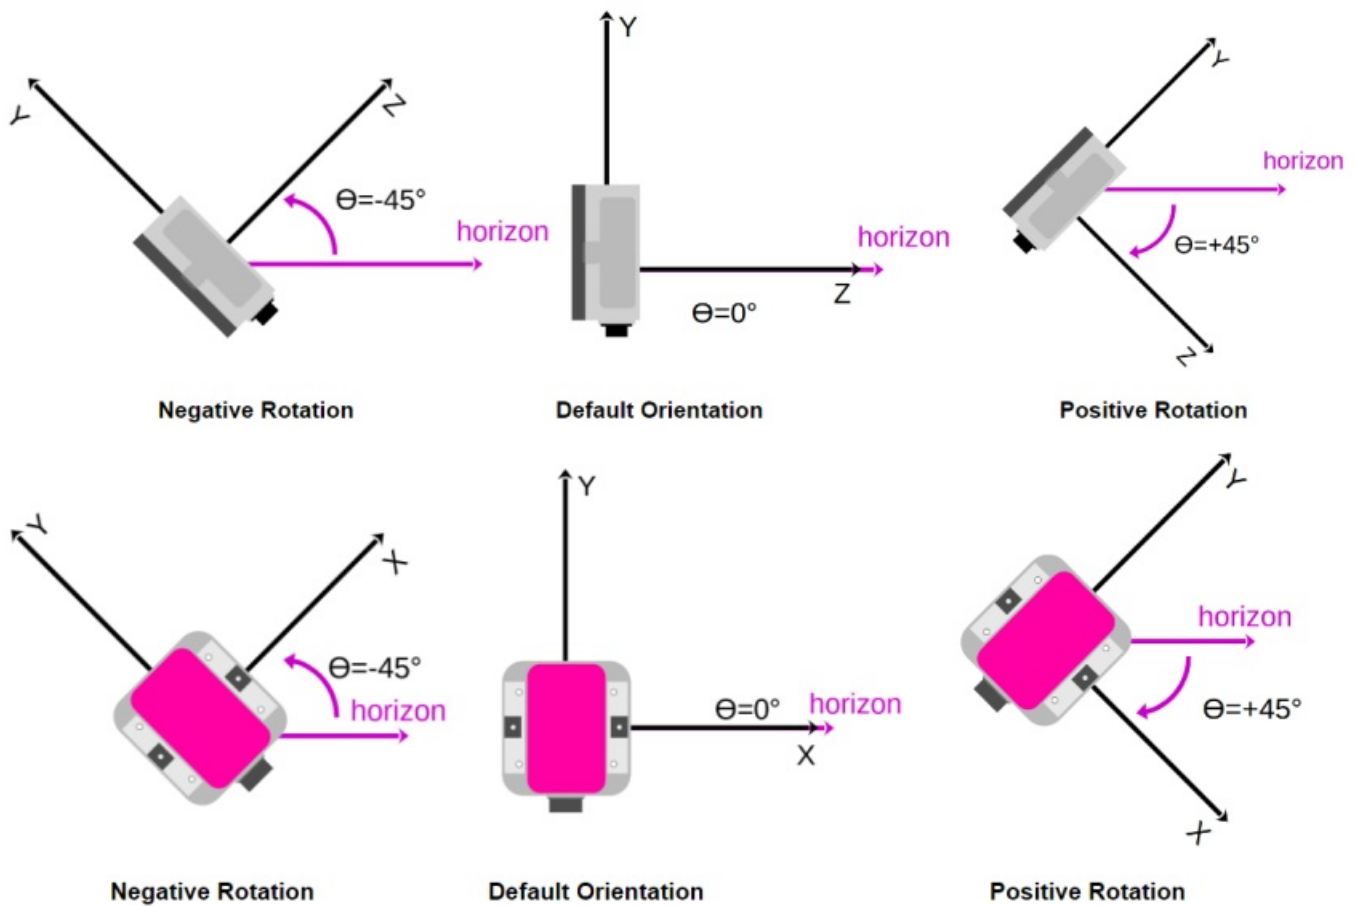


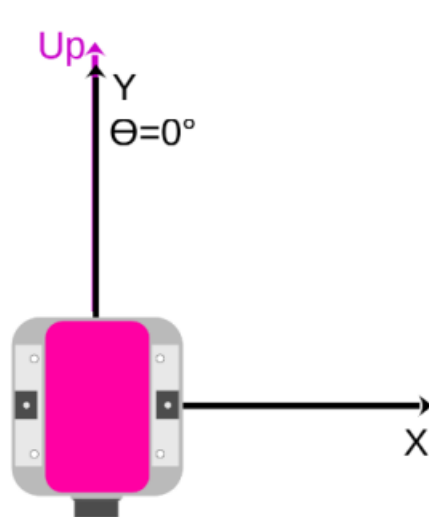


Default Orientation

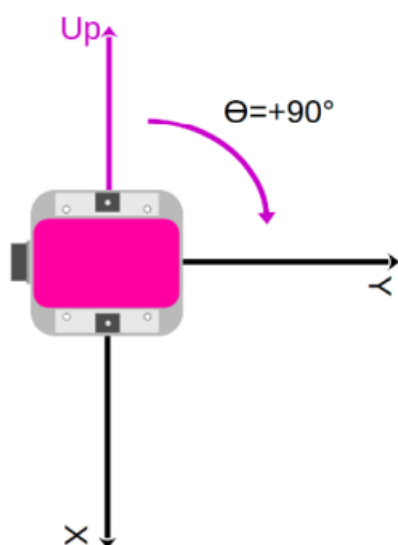


90 Degree Rotation

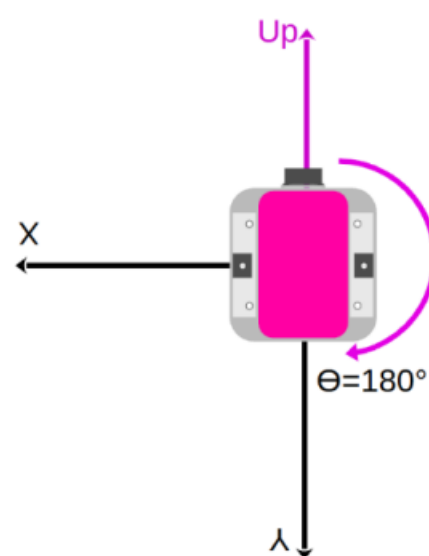


Max Rotation

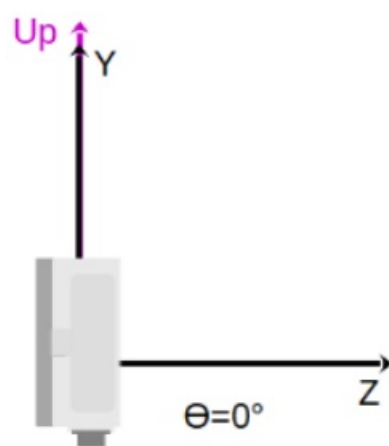

Default Orientation

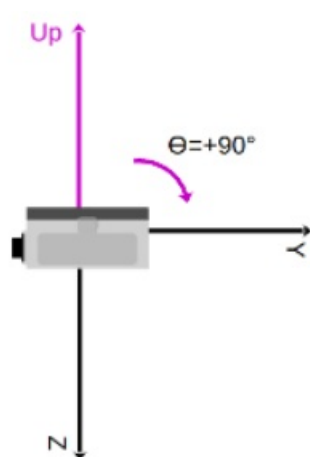

90 Degree Rotation

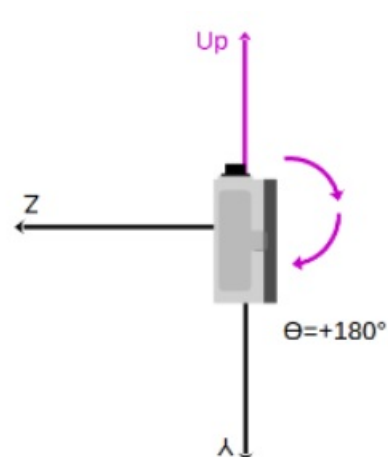

Max Rotation

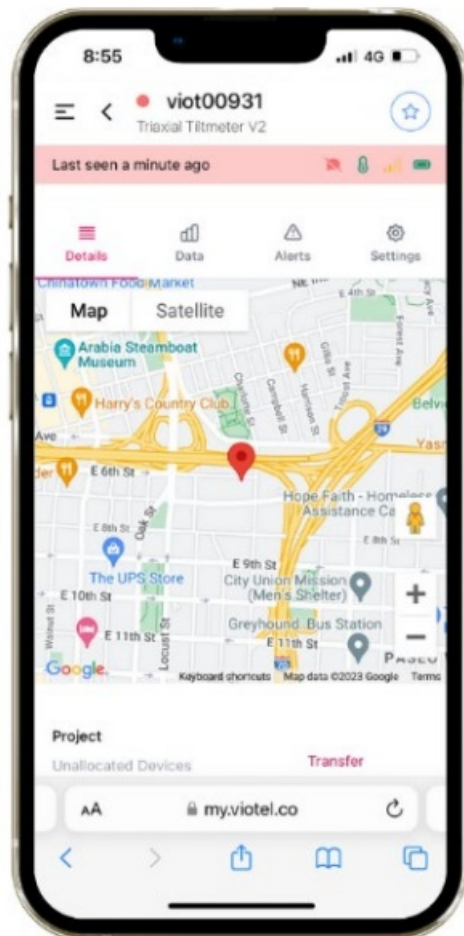
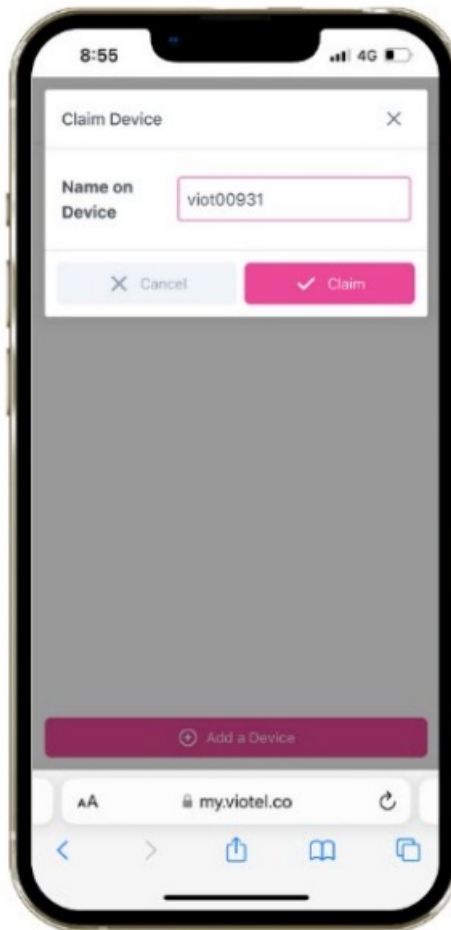
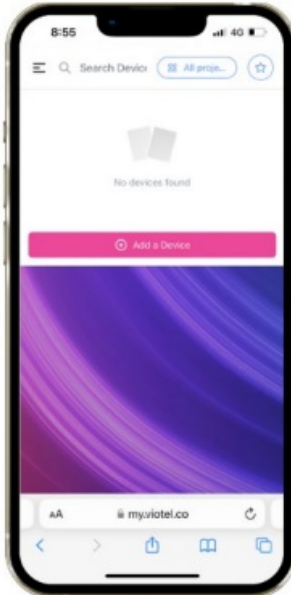
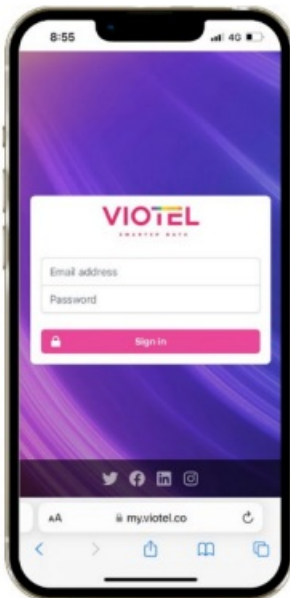




Figure 7 Tiltmeter with backing plate removed



Figure 8 Tiltmeter with battery removed

Documents / Resources

	VIOTEL TILT-V2.1-INT Wireless Triaxial Tiltmeter [pdf] User Manual Version 2.1, Version 2.0, TILT-V2.1-INT, TILT-V2.1-INT Wireless Triaxial Tiltmeter, Wireless Triaxial Tiltmeter, Triaxial Tiltmeter, Tiltmeter
--	--