


Vision Audio Visual F40 Wireless Controller Instruction Manual

[Home](#) » [VISION AUDIO VISUAL](#) » Vision Audio Visual F40 Wireless Controller Instruction Manual 

Vision Audio Visual F40 Wireless Controller

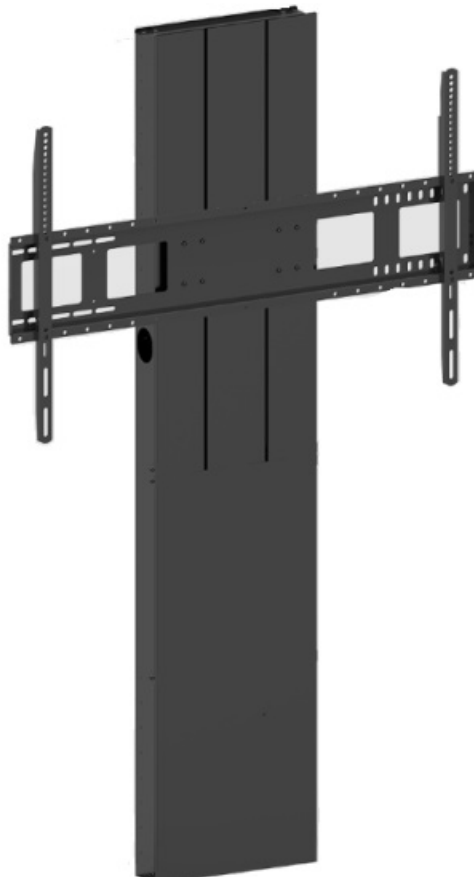

Contents

- [1 Wireless Controller](#)
- [2 Wired Controller](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

Wireless Controller

1. **PAIRING** Plug power in and within 15 seconds press UP MIDDLE DOWN once in turn. The controller will beep. Pairing is successful. If it doesn't work disconnect power for 30 seconds and retry.
2. **RESET** Press DOWN until it cannot go lower, release it. Then press and hold DOWN. The mechanism travels to the bottom, raises up, then lowers down again. The controller will beep. Release the button. Reset is successful.

If this doesn't work try:


1. Turn off the power, wait 10 seconds
2. Power on and respectively press the up, middle, and down buttons within 5 seconds.

Wired Controller

Press DOWN until it cannot go lower, release it.

Then press and hold DOWN. The mechanism travels to the bottom, raises up, then lowers down again. The controller will beep. Release the button. Reset is successful.

Documents / Resources

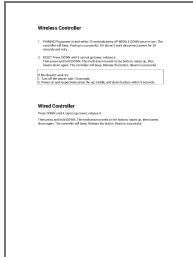	Vision Audio Visual F40 Wireless Controller [pdf] Instruction Manual F40 Wireless Controller, F40, Wireless Controller, Controller
---	---

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.