



VISION TECH SHOP TPD Series Interface Scale User Manual

[Home](#) » [VISION TECH SHOP](#) » VISION TECH SHOP TPD Series Interface Scale User Manual 

Contents

- [1 VISION TECH SHOP TPD Series Interface Scale](#)
- [2 CALIBRATION](#)
- [3 Full Capacity](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



VISION TECH SHOP TPD Series Interface Scale



CALIBRATION

1. ZERO

Press key to turn on the scale.

2. TARE

key during that start up ,display will be show "FO bL"

3. TARE

key until display show "EECH" Before enter the tech parameter,it's required to press the calibration switch, switch is locating below the scale

4. ZERO

Press ON/OFF key to confirm and display will be shown "APProu"

5. TARE

Press key to select "PI CAL"

6. ZERO

Press ON/OFF key to confirm, display will be shown "LAL Lb"

7. TARE

key to select "LAL L6" or "CAL FC"

8. ZERO

ON/OFF Press key to confirm, display show "UnloRd"

9. ZERO

ON/OFF Press key, display will be shown current calibration weight value

10. ERO


If necessary press key to shift location,press key to change the value.

11. ZERO

Press ON/OFF key to confirm,display will be show “LoAd” place the test weight on the platter.

12. ZERO


ON/OFF Once the stable indicator is shown on the display, press key, the display will be show “PH55” and come to normal weighing mode. In case the display will show any error message or incorrect measurement, repeat the calibration again.

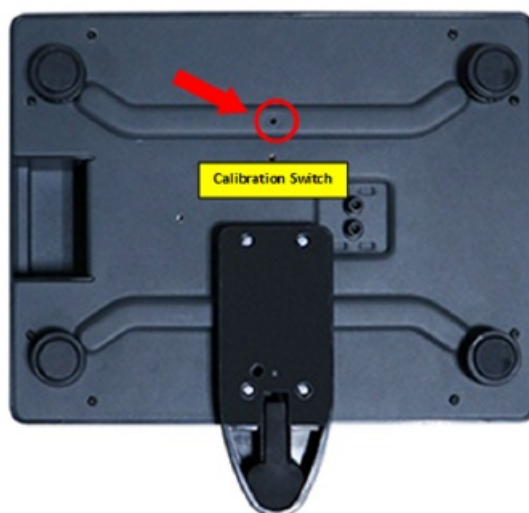

Full Capacity

Model #	Pounds test weights	Kilogram test weights
TPD-12lb	12 lb	6 kg
TPD-30lb	30 lb	12 kg
TPD-60lb	60 lb	30 kg

Documents / Resources

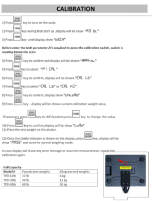	VISION TECH SHOP TPD Series Interface Scale [pdf] User Manual TPD Series Interface Scale, TPD Series, Interface Scale
---	--