



VISSLES V1 84 Keys Wireless Mechanical Keyboard User Manual

[Home](#) » [VISSLES](#) » VISSLES V1 84 Keys Wireless Mechanical Keyboard User Manual 

Contents

- 1 [VESSELS V1 84 Keys Wireless Mechanical Keyboard](#)
- 2 [INSTRUCTIONS](#)
- 3 [Backlight Preferences](#)
- 4 [Multimedia function keys](#)
- 5 [Documents / Resources](#)
- 6 [Related Posts](#)

 
VISSLES

VESSLES V1 84 Keys Wireless Mechanical Keyboard




INSTRUCTIONS

1. Wired Mode

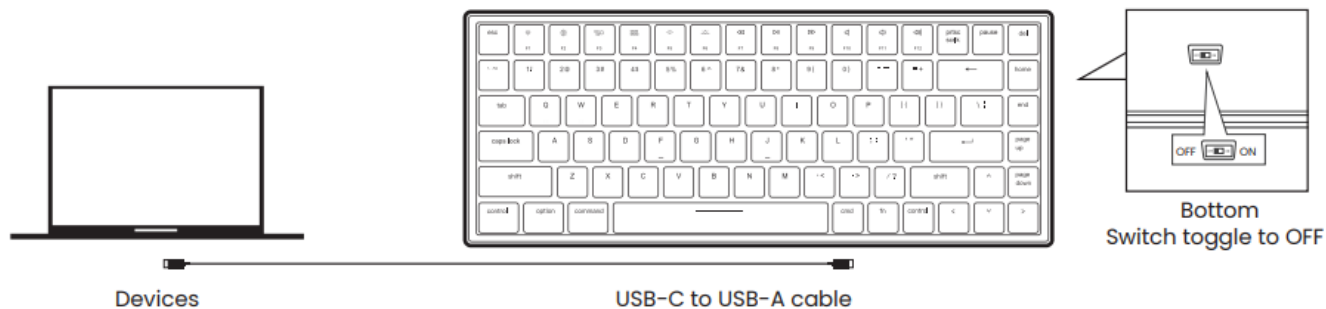

 
2. Wireless Mode

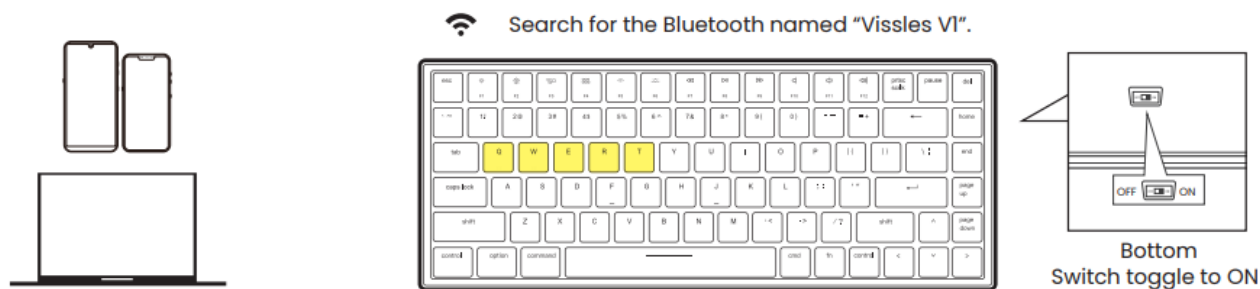

- Long press fn + q / w / e / r / t till the backlight of q / w / e / r / t flashes in white quickly, and pair with your device via the Bluetooth named "Vissles V1".

Backlight Preferences

 - Press fn + home to switch between 19 multi-light effects.
- Press fn + end to switch between 9 monochrome sets.
- Press fn + ↑ / ↓ to increase/decrease the brightness level.
- Press fn + → / ← to increase/decrease the lighting speed.

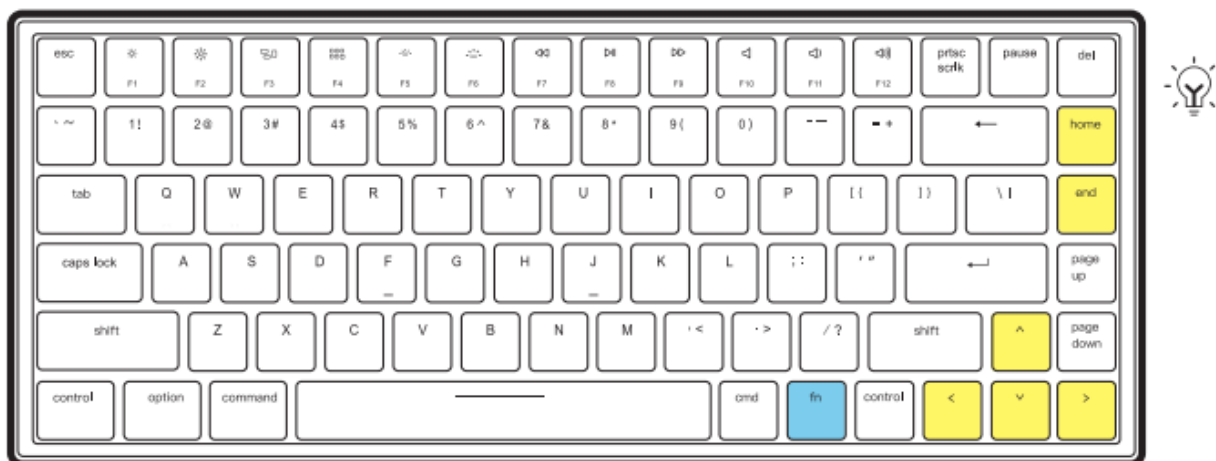

1. Macro Recording


- Press fn + tab to switch the keyboard to Macro mode.
- Long press fn + z for 3 seconds until the backlight flickers in white, and record.
- Long press fn + z for 3 seconds to save the macro recording content.
- Click z to trigger the corresponding macro recording result.

- Macro recording mode only supports the recording of 16 characters.

Multimedia function keys

Key	Mac Mode		Windows Mode	
	Without 'Fn' key	With 'Fn' key	Without 'Fn' key	With 'Fn' key
F1	Decrease display brightness level	F1	F1	Decrease display brightness level
F2	Increase display brightness level	F2	F2	Increase display brightness level
F3	Mission Control	F3	F3	3D cycle through programs on the Taskbar
F4	Launch Pad	F4	F4	Mission Control
F5	Nil	Decrease keyboard brightness level	F5	Decrease keyboard brightness level
F6	Nil	Increase keyboard brightness level	F6	Increase keyboard brightness level
F7	Previous track	F7	F7	Previous track
F8	Play/Pause	F8	F8	Play/Pause
F9	Next track	F9	F9	Next track
F10	Mute	F10	F10	Mute
F11	Decrease the volume	F11	F11	Decrease the volume
F12	Increase the volume	F12	F12	Increase the volume

 - The functions of Multimedia function keys vary from Mac mode and Windows mode. Please check the user manual for more details.

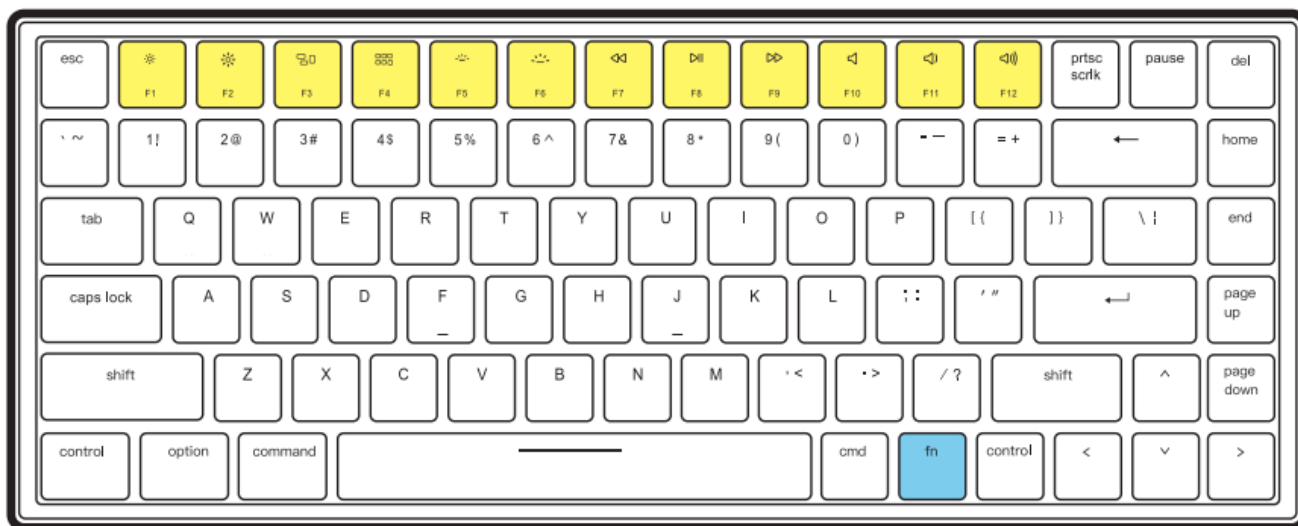

Documents / Resources

	VISSLES V1 84 Keys Wireless Mechanical Keyboard [pdf] User Manual V1, 84 Keys Wireless Mechanical Keyboard, V1 84 Keys Wireless Mechanical Keyboard
---	--