



VISUAL LAND SOUNDWAVEA1 Active Noise Cancelling True Wireless Bluetooth Headset User Guide

[Home](#) » [VISUAL LAND](#) » VISUAL LAND SOUNDWAVEA1 Active Noise Cancelling True Wireless Bluetooth Headset User Guide 

Contents

- [1 VISUAL LAND SOUNDWAVEA1 Active Noise Cancelling True Wireless Bluetooth Headset](#)
- [2 PRODUCT OPERATION](#)
- [3 LIMITED ONE \(1\) YEAR WARRANTY](#)
- [4 SAFETY INFORMATION](#)
- [5 COMPLIANCE INFORMATION](#)
- [6 Label](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



VISUAL LAND SOUNDWAVEA1 Active Noise Cancelling True Wireless Bluetooth Headset



PRODUCT OPERATION

1. **Charging:** Charge the earbuds by placing them into the charging case. Press the Wake/Sleep button on the back of the case to view the remaining battery level of the charging case.
2. **Power On:** Flipping open the charging case automatically turns on the earbuds.
3. **Power Off:** Put the earbuds into the charging case and close the cover will automatically shut down the earbuds and enter charging mode.
4. **Bluetooth Pairing:** Flip open the charging case, remove earbuds from the case and place earbuds into ears, voice prompt will immediately announce “Power On”, “Pairing”, then finally “Device Paired”. “Device Paired” signifies the Left and Right earbuds are paired; please note your earbuds are not yet connected to your Bluetooth device. To connect to your Bluetooth device, on your device’s Bluetooth settings, locate “SOUNDWAVE A1” from the list of available devices (this may take several seconds). Tap “SOUNDWAVE A1” to connect, a voice prompt stating “Device Connected” will be heard if pairing is successful. For future use, your device will remember the earbuds, no need to pair again, just put on the earbuds and your device will automatically pair with the earbuds. Only one device can be paired at a time. To pair another device to the earbuds, first “Forget the Device” through your device’s Bluetooth settings (the device that is currently connected), then repeat the pairing process.
5. **Phone Call Mode:** When the earbuds are on your ears and connected to your phone, press and hold the left earbud for 2 seconds to active your device’s voice assistant.
 1. When a call comes in: Single click on the left or right earbud to answer the call
 2. During the call: Single click on the left or right earbud to hang up
 3. To reject a call: Long press left or right earbud for 2 seconds
6. **Smart Touch Control Functions**
 1. Answer (when there is an incoming call): Single click on the left or right earbud
 2. Hang Up (during a call): Single click on the left or right earbud
 3. Reject (incoming call): Long press any earbud
 4. Sound Modes (Noise cancellation (ANC Mode)/ANC Off/Transparency Mode)(standby/music): Long press on right earbud to cycle through the different modes.
 5. Play/Pause (when music is playing): Single click on left or right earbud
 6. Decrease Volume (standby/play music): Double click the left earbud
 7. Increase Volume (standby/play music): Double click the right earbud
 8. Last song (when music is playing): Triple click on the left earbud
 9. Next Song (when music playing): Triple click on the right earbud
 10. Voice Assistant (Standby/Music): Long press the left earbud

11. Exit Voice Assistant: Long press the left earbud
12. Lower Battery Warning: A low battery warning tone will be reported every minute when the battery is low

7. Voice Prompt Notifications

1. Pairing Mode: Pairing
2. Bluetooth Connected: Device Connected
3. Bluetooth Disconnected: Device Disconnected
4. Lower Power Prompt: “Beep”
5. Noise Cancellation On: ANC Mode
6. Noise Cancellation Off: ANC Off
7. Transparency Mode: Transparency Mode

LIMITED ONE (1) YEAR WARRANTY

HOW CONSUMER LAW RELATES TO THIS WARRANTY

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE (OR BY COUNTRY OR PROVINCE). OTHER THAN AS PERMITTED BY LAW, VISUAL LAND DOES NOT EXCLUDE, LIMIT OR SUSPEND OTHER RIGHTS YOU MAY HAVE, INCLUDING THOSE THAT MAY ARISE FROM THE NONCONFORMITY OF A SALES CONTRACT. FOR A FULL UNDERSTANDING OF YOUR RIGHTS YOU SHOULD CONSULT THE LAWS OF YOUR COUNTRY, PROVINCE OR STATE.

WARRANTY LIMITATIONS SUBJECT TO CONSUMER LAW

TO THE EXTENT PERMITTED BY LAW, THIS WARRANTY AND THE REMEDIES SET FORTH ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. VISUAL LAND DISCLAIMS ALL STATUTORY AND IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS, TO THE EXTENT PERMITTED BY LAW. IN SO FAR AS SUCH WARRANTIES CANNOT BE DISCLAIMED, VISUAL LAND LIMITS THE DURATION AND REMEDIES OF SUCH WARRANTIES TO THE DURATION OF THIS EXPRESS WARRANTY AND, AT VISUAL LAND'S OPTION, THE REPAIR OR REPLACEMENT SERVICES DESCRIBED BELOW. SOME STATES (COUNTRIES AND PROVINCES) DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY (OR CONDITION) MAY LAST, SO THE LIMITATION DESCRIBED ABOVE MAY NOT APPLY TO YOU.

WHAT IS COVERED BY THIS WARRANTY?

Visual Land warrants the Visual Land-branded hardware product and accessories contained in the original packaging (“Visual Land Product”) against defects in materials and workmanship when used normally in accordance with Visual Land’s published guidelines for a period of ONE (1) YEAR from the date of original retail purchase by the end-user purchaser (“Warranty Period”). Visual Land’s published guidelines include but are not limited to information contained in technical specifications, user manuals and service communications.

WHAT IS NOT COVERED BY THIS WARRANTY?

This Warranty does not apply to any non-Visual Land branded hardware products or any software, even if packaged or sold with Visual Land hardware. Manufacturers, suppliers, or publishers, other than Visual Land, may provide their own warranties to you – please contact them for further information. Software distributed by Visual Land with or without the Visual Land brand (including, but not limited to system software) is not covered by this Warranty. Please refer to the licensing agreement accompanying the software for details of your rights with respect to its use. Visual Land does not warrant that the operation of the Visual Land Product will be uninterrupted

or error-free. Visual Land is not responsible for damage arising from failure to follow instructions relating to the Visual Land Product's use.

This Warranty does not apply: (a) to consumable parts, such as batteries or protective coatings that are designed to diminish over time, unless failure has occurred due to a defect in materials or workmanship; (b) to cosmetic damage, including but not limited to scratches, dents and broken plastic on ports; (c) to damage caused by use with another product; (d) to damage caused by accident, abuse, misuse, liquid contact, fire, earthquake or other external cause; (e) to damage caused by operating the Visual Land Product outside Visual Land's published guidelines; (f) to damage caused by service (including upgrades and expansions) performed by anyone who is not a representative of Visual Land; (g) to a Visual Land Product that has been modified to alter functionality or capability without the written permission of Visual Land; (h) to defects caused by normal wear and tear or otherwise due to the normal aging of the Visual Land Product, or (i) if any serial number has been removed or defaced from the Visual Land Product.

YOUR RESPONSIBILITIES

YOU SHOULD MAKE PERIODIC BACKUP COPIES OF THE INFORMATION CONTAINED ON THE VISUAL LAND PRODUCT STORAGE MEDIA TO PROTECT THE CONTENTS AND AS A PRECAUTION AGAINST POSSIBLE OPERATIONAL FAILURES.

Before receiving warranty service, Visual Land or its agents may require that you furnish proof of purchase details, respond to questions designed to assist with diagnosing potential issues and follow Visual Land's procedures for obtaining warranty service. Before submitting your Visual Land Product for warranty service you should maintain a separate backup copy of the contents of its storage media, remove all personal information that you want to protect and disable all security passwords.

DURING WARRANTY SERVICE THE CONTENTS OF THE STORAGE MEDIA WILL BE DELETED AND REFORMATTED. VISUAL LAND AND ITS AGENTS ARE NOT RESPONSIBLE FOR ANY LOSS OF SOFTWARE PROGRAMS, DATA OR OTHER INFORMATION CONTAINED ON THE STORAGE MEDIA OR ANY OTHER PART OF THE VISUAL LAND PRODUCT SERVICED.

SAFETY INFORMATION

WARNING: Using earbuds at high volumes for extended periods of time will result in permanent hearing damage. It is advised you keep volume levels moderate to low at all times for your safety. Turn the volume all the way down after connecting your earbuds, and then gradually increase the volume until you reach a comfortable listening level. Do not use earbuds while driving a car, cycling, operating machinery, or performing other activities that require hearing surrounding sounds.

Keep the device and packaging out of reach of children.

This device is designed and manufactured to operate within its defined design limits. Misuse may result in electric shock or fire. Read and follow these instructions carefully.

- If submerged in water, do not turn the device on until completely dried. Note: liquid submersion voids the warranty.
- To prevent fire or shock hazards, do not expose this unit to rain or moisture. If the device comes in contact with liquids, quickly wipe away. If submerged in water, do not turn the device on until completely dried. Note: liquid submersion voids the warranty.
- Danger of explosion or fire if batteries are damaged. Keep away from direct sunlight, naked flames, flammable gasses, or heat sources such as radiators or stoves
- Do not use around flammable gasses as fire or explosion may occur.
- There are no user-replaceable/reparable parts in the device. Disassembling it will void your warranty.
- Only use attachments/accessories specified by the manufacturer

Changes or modifications to this unit not expressly approved by Visual Land Inc. will void user's Limited One Year Warranty.

COMPLIANCE INFORMATION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) FCC RULES This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Label

Model: SOUNDWAVE A1
Input: 5V \equiv 1A
300 mAh 1.11wh
FCC ID: SI9SOUNDWAVEA1
Brand: Visual Land

Documents / Resources

	VISUAL LAND SOUNDWAVEA1 Active Noise Cancelling True Wireless Bluetooth Headset [pdf] User Guide SOUNDWAVEA1, SI9SOUNDWAVEA1, SOUNDWAVEA1, Active Noise Cancelling True Wireless Bluetooth Headset, SOUNDWAVEA1 Active Noise Cancelling True Wireless Bluetooth Headset
---	--