 




VISULAPEX S1 Projector User Manual

[Home](#) » [VISULAPEX](#) » VISULAPEX S1 Projector User Manual 

VISULAPEX

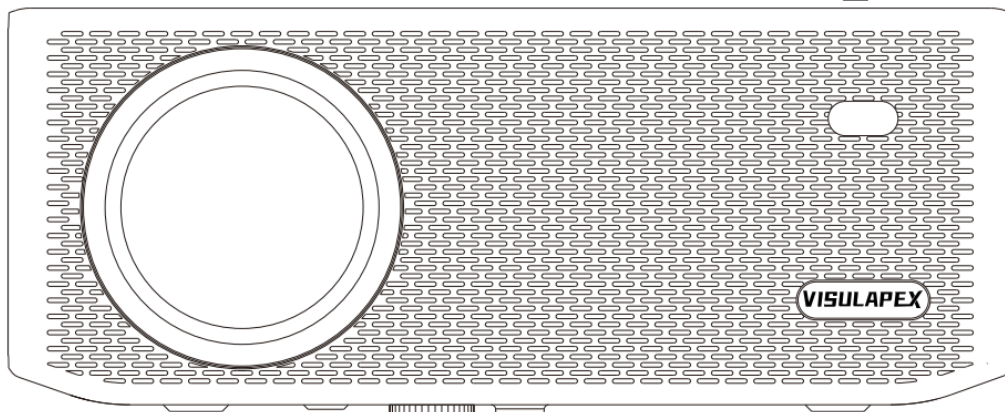

Visulapex S1 PROJECTOR USER MANUAL

Contents

- 1 PACKING LIST
- 2 FUNCTION OVERVIEW
- 3 QUICK START
- 4 INPUT SOURCE
- 5 SCREEN MIRRORING
- 6 PROJECTION CONNECTION
- 7 PLACING THE PROJECTOR
- 8 PROJECTION DISTANCE & SIZE
- 9 SPECIFICATION
- 10 WARNINGS AND PRECAUTIONS
- 11 TROUBLESHOOTING
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts

 
PACKING LIST




Projector



Remote Controller

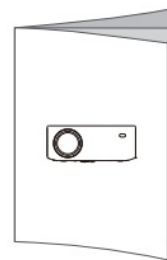


User Manual

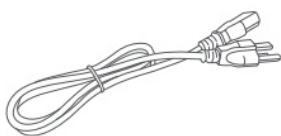 

Power Cable








 HDMI Cable

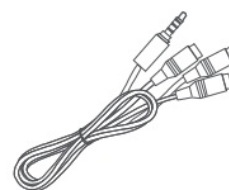


AV Cable

     FUNCTION OVERVIEW

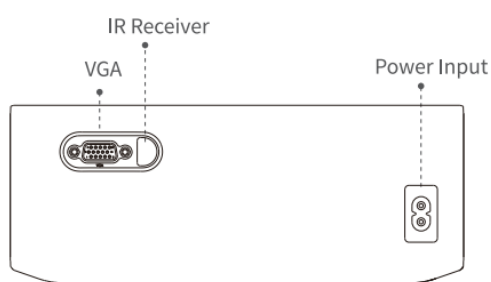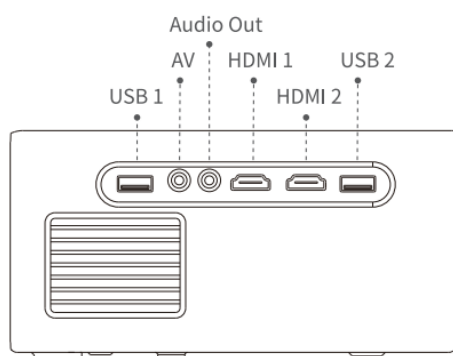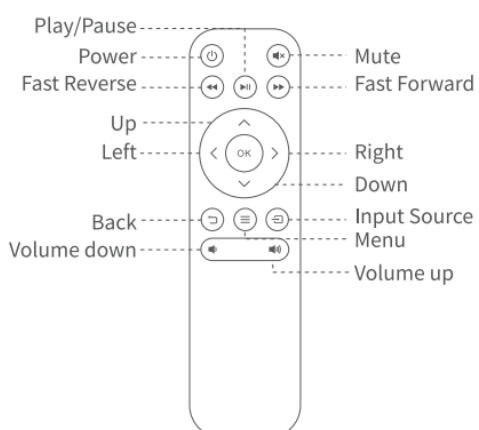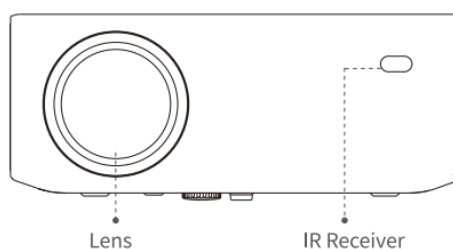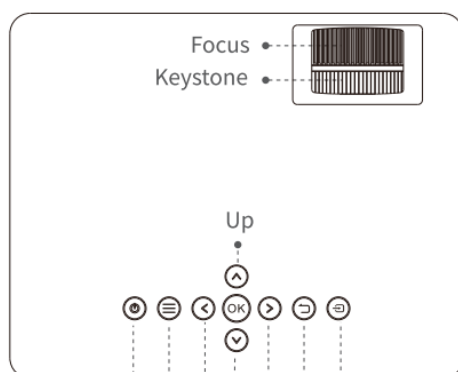


QUICK START

 
1. Connect the power cable to the projector.

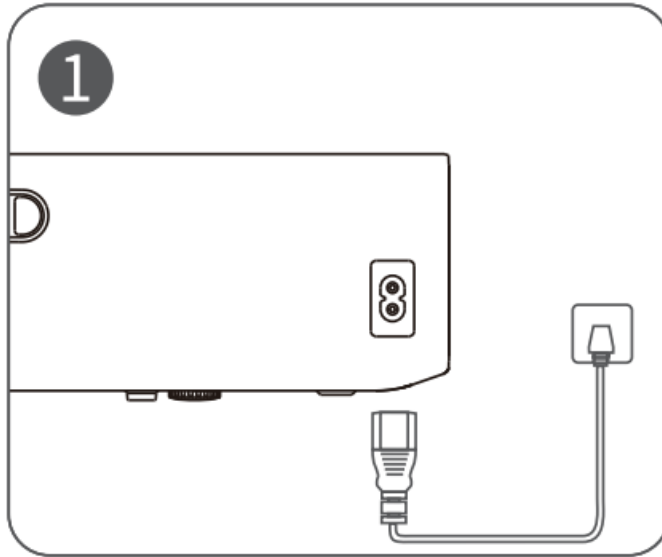

 
2. Take off the lens cover.

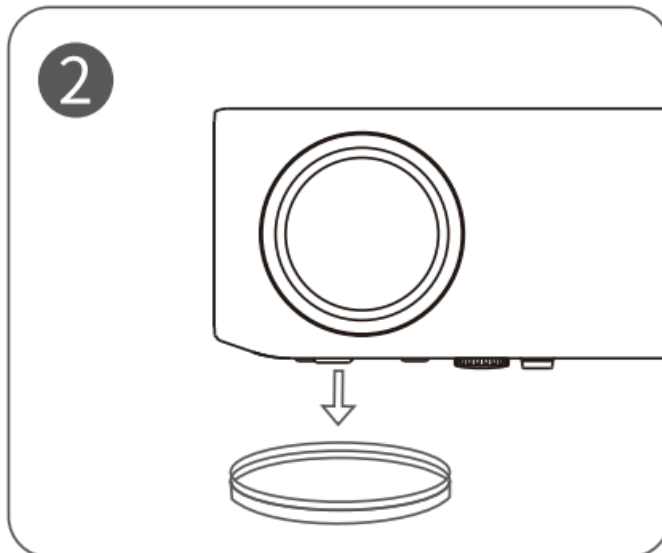

 
3. Connect your device to the projector correctly.

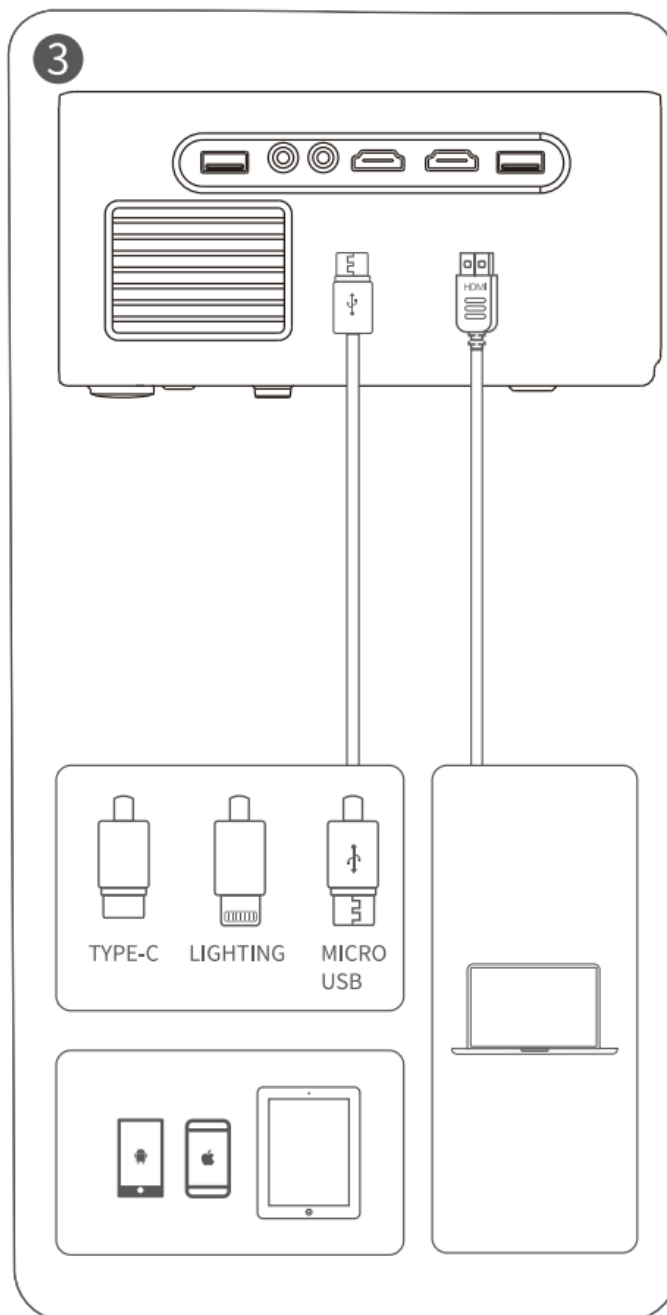

 
4. Press the power button to turn on the projector.

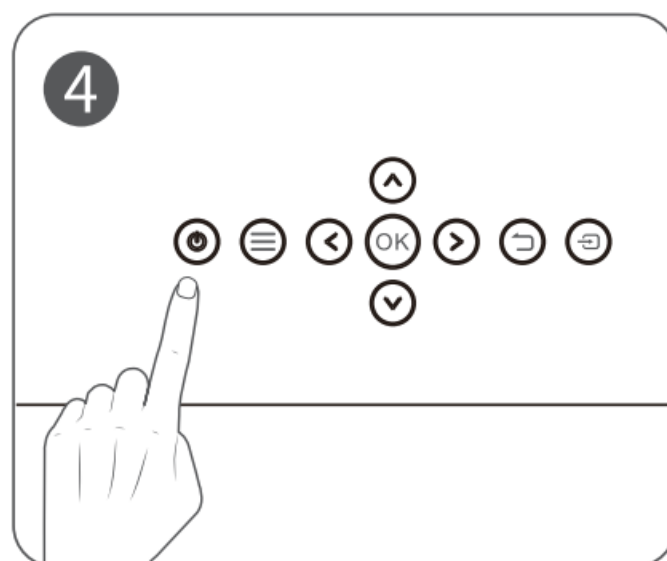

 
5. Choose the right type of program to play.

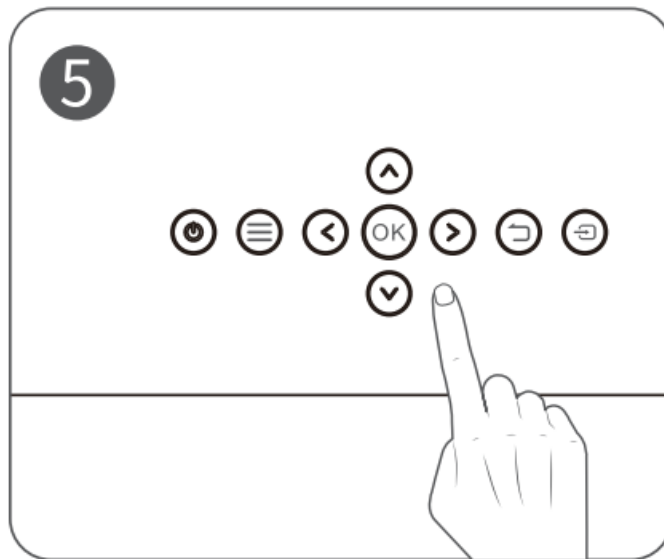

 6. Adjust the keystone and focus ring to get best image performance.

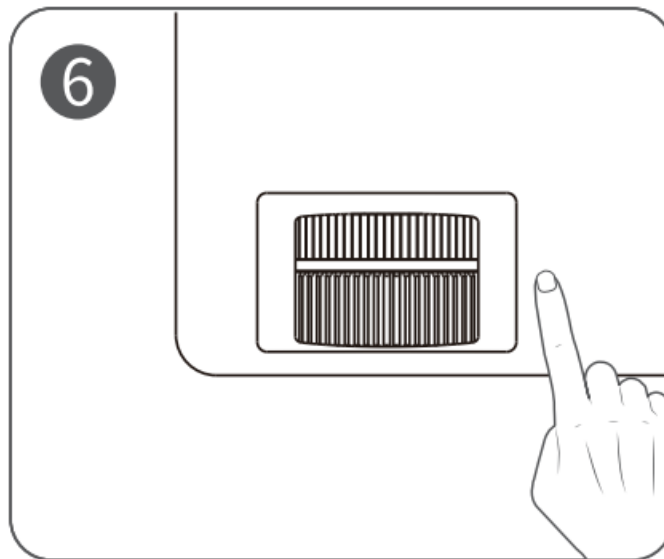


 7. Press the power button twice to turn off the projector.

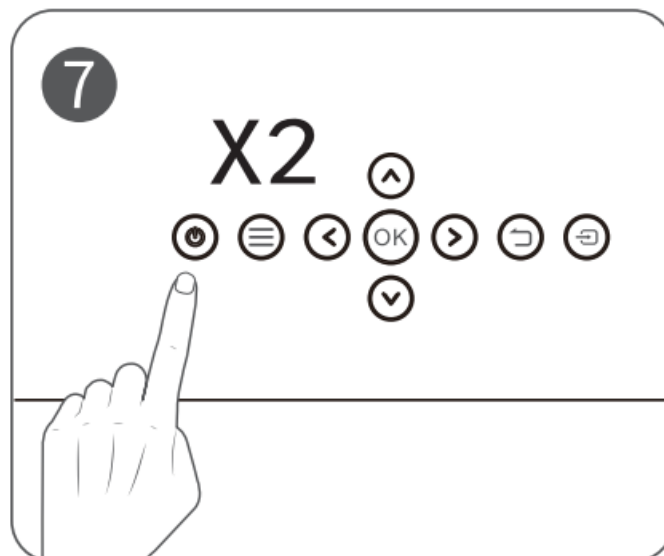


INPUT SOURCE

 A. Media Connection

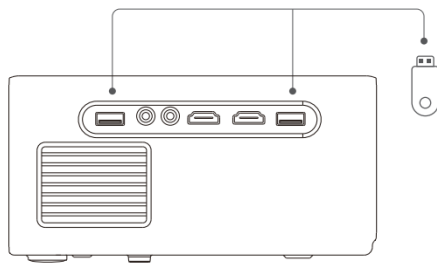


Input Source
AV
VGA
HDMI1
HDMI2
Screen Mirroring
USB

 B. HDMI Connection

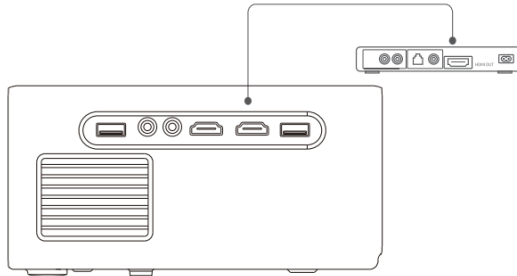


Input Source
AV
VGA
HDMI1
HDMI2
Screen Mirroring

 C. VGA Connection

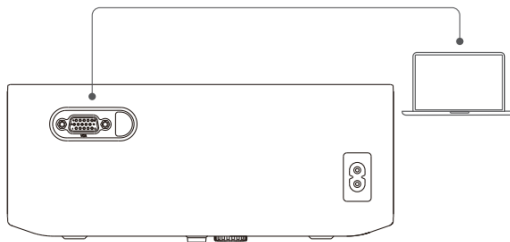


Input Source
AV
VGA
HDMI1
HDMI2
Screen Mirroring
USB

 D. AV Connection

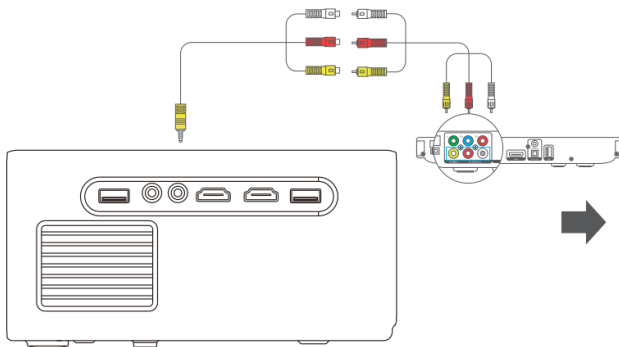

Input Source
AV
VGA
HDMI1
HDMI2
Screen Mirroring
USB

 
E. TV Stick Connection

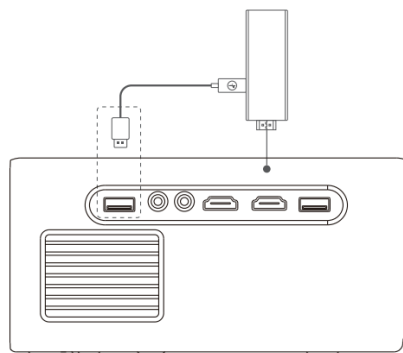



Input Source
AV
VGA
HDMI1
HDMI2
Screen Mirroring

F. Bluetooth Speaker Connection

Master Mode:

1. Enter "Bluetooth Speaker Mode" via the remote control or projector  button.
2. Find the "SOUND" setting and Open the projector Bluetooth setting.
3. Open your devices Bluetooth settings, search and pair your devices via the projector.


Slave Mode:

 
1. Enter "Bluetooth Speaker Mode" via the remote control or projector  button.
2. Find the "SOUND" setting and Open the projector Bluetooth setting.
3. Switch "Bluetooth setting " to "receiver" via the remote control or projector  button.
4. Open your devices Bluetooth settings, search and pair the projector.

SCREEN MIRRORING

For iOS devices

Wired Mirroring

1. Enter Apple Cast Screen.
2. Connect iOS devices to the projector via the USB cable (the slot marked USB ).

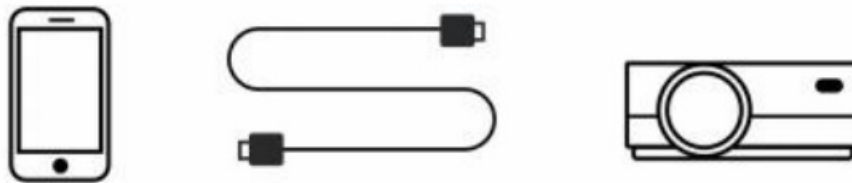


WiFi Display

 
1. Connect WiFi via 2 methods:
 - a. Open the mobile device WiFi setting and connect the projector WiFi.
DEVICE: VisulapexS1 PIN: 12345678
 - b. Make sure mobile device and projector connected under the same WiFi.
For example, connect the home or office WiFi.
2. Find the screen mirroring settings on the mobile device, click and search projector.
3. Select the projector device: VisulapexS1, click and connect.



For Android devices

Wired Mirroring

1. Enter Android Cast Screen.
2. Connect mobile device to the projector via the USB cable (the slot marked USB ).
3. Download and install the projection software apk according to the prompts.

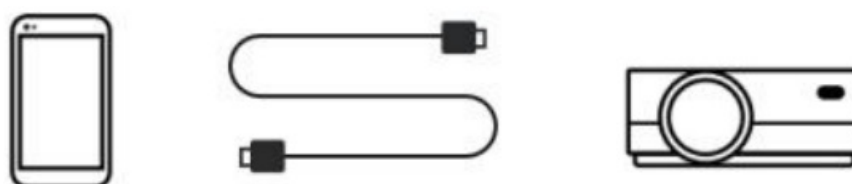


WiFi Display

1. Find the screen mirroring settings on the mobile device, click and search projector.
2. Select the projector device: VisulapexS1 , click and connect.



 PROJECTION CONNECTION

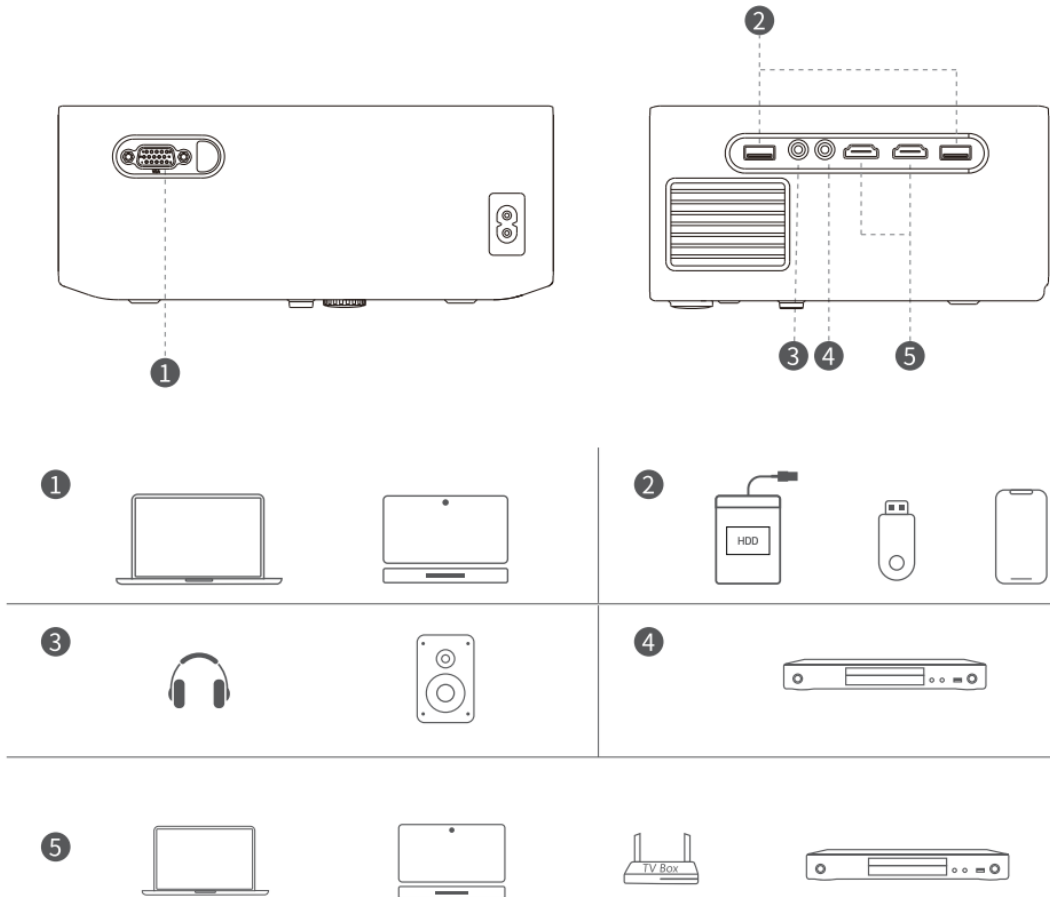


PLACING THE PROJECTOR


The projector can be used to project onto a wall or screen, mounted from the ceiling or on a table. When projecting from the rear position, a rear projection will be needed (not included) to display the image. Be sure to aim the remote at the sensor on the front or rear of the projector.



 
Front Table

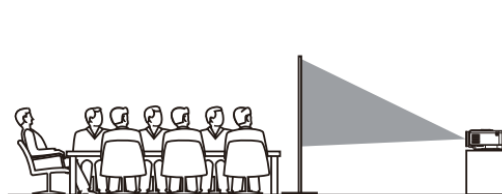

Rear Table

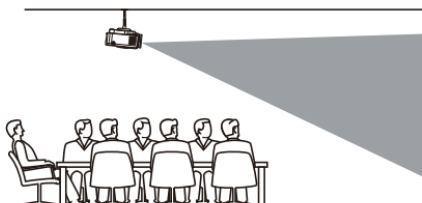 


Front Ceiling

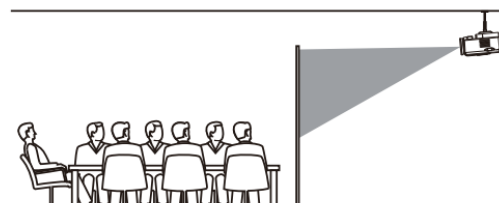 

Rear Ceiling

 PROJECTION DISTANCE & SIZE

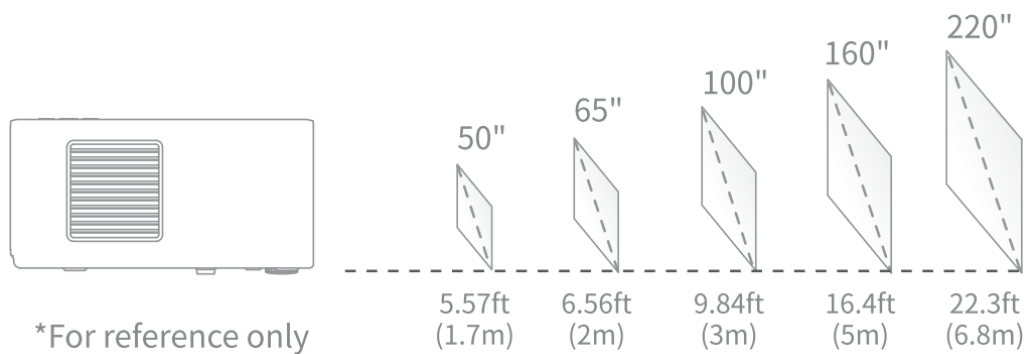

SPECIFICATION

Display Technology	Light Source	Bluetooth Speaker Name	Projection Distance
LCD	LED	Projector BT	1.7-6.8m

 

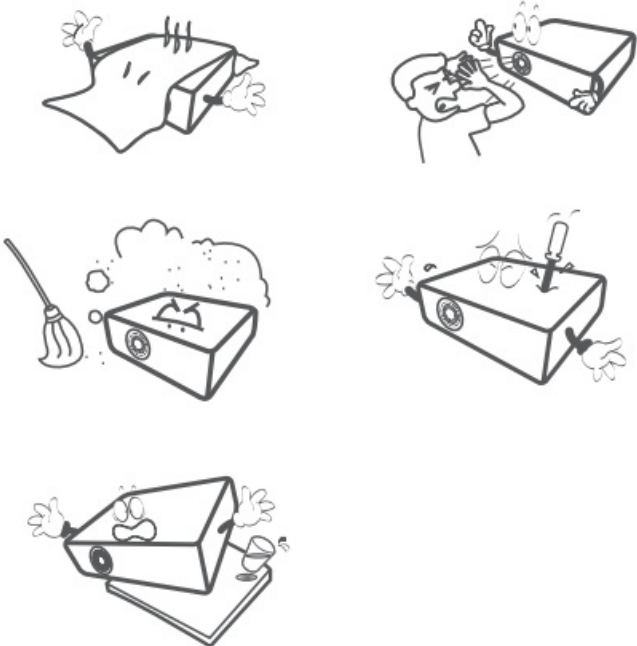 

Projection Size	Focus	Keystone	Aspect Ratio
50-220 inches	Manual	Manual Correction $\pm 15^\circ$	4:3 / 16:9

Installation Type	Power Supply	Integrated Watt	Net Weight
Front/Rear/Ceiling	AC 100-240V 50/60Hz	90W	1.4KG

Video Format Supported	Photo Format Supported	Audio Format Supported	Text Format Supported
AVI/MP4/M-KV/MOV/MPEG/MPG/3GP/ASF/TS/VOB/FLV	BMP/JPG/JPEG/PNG	MP3/OGG/AAC/M4A/WAV/FLAC	TXT

Speaker	Ports		
3W x1	VGA x1 / HDMI x2 / USB x2 / AVInx1/ Audio Out x1		

ATTENTION

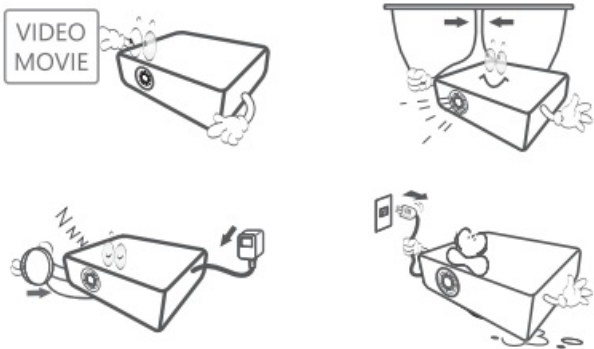	 <p>Recommended</p>
	 <p>NOT Recommended</p>

WARNINGS AND PRECAUTIONS

1. Do not look directly into the projector light.
2. Don't touch the projector lens.
3. Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
4. Changes or modified to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
5. Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
6. Shock hazard – Please do not dismantle the projector without permission.
7. To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
8. Objects fill with liquids, such as vases, shall not be placed on the apparatus.

TROUBLESHOOTING

1. **Blurry Image**

- a. Adjust focus ring or keystone.
- b. Projector and screen/wall must be in effective distance.

2. **Remote Control Unresponsive**

- a. Make sure remote control points at IR receiver directly.
- b. Do not cover IR receiver window.
- c. Check the battery.

3. **USB Unrecognized**

- a. Make sure your USB stick is not over 64GB.

4. **No Sound**

- a. Turn off Dolby Audio in your device.
- b. If a movie's audio number is "ac3" (Dolby Digital), then the sound may not be played (this kind of movie is very rare).

5. **The projector can't screen mirroring?**

- a. Firstly, please kindly check whether the projector selects the Screen Mirroring input source and whether the device is connected to the projector WiFi.
- b. Please make sure the device and projector connect to the same WiFi if the projector features WiFi function.
- c. Please unplug the power and re-apply it again if the Screen Mirroring input source is selected and the WiFi is connected while the projector still can't screen mirroring.
- d. Please reset the projector if it still can't work after unplugging the power.
- e. Please feel free to contact us.

NOTICE

Without the prior written permission of Oley Company Limited or its subsidiaries (the "Company"), no part of this Manual shall be used in any form or by any method, including copying, transmitting, translating, storing in a retrieval system or translating into any text or computer language by electronic, mechanical, optical, chemical, handwritten or any such method.

If the user or a third party suffers any damage, loss, cost or expense as a result of accident, improper use, or violation of the operating procedures of the machine, or any modification, overhaul without authorization, or replacement of the product in any form, or failure to strictly follow this Manual or the operating and maintenance manual provided by the Company during operation and maintenance, the Company shall not be held liable.

To the maximum extent permitted by law, this Manual and the Product described (including its hardware, software, firmware, etc.) are provided "as is", which may have some defects or errors.

The Company provides no warranty of any kind, express or implied, including but not limited to merchantability, quality satisfaction, fitness for a particular purpose, nor shall it indemnify any special, incidental, accidental or consequential damages arising from the use of this Manual or the Product, including but not limited to loss of business profit, system failure, loss of data or documents.


The description and images involved in this Manual may differ from actual products, please refer to actual products. Due to product version upgrade or other needs, the Company reserves the right to update this Manual at any time.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

VISULAPEX

Documents / Resources

	VISULAPEX S1 Projector [pdf] User Manual S1 Projector, S1, Projector
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.