 


VISULAPEX S3 Video Projector

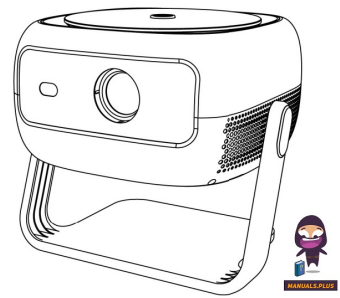

VISULAPEX S3 Video Projector User Manual

 
[Home](#) » [VISULAPEX](#) » VISULAPEX S3 Video Projector User Manual 

Contents

- [1 VISULAPEX S3 Video Projector](#)
- [2 Accessories](#)
- [3 Product](#)
- [4 Remote control](#)
- [5 Get started](#)
- [6 Projection settings](#)
- [7 Screen mirroring](#)
- [8 Wired connections](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)

VISULAPEX

VISULAPEX S3 Video Projector

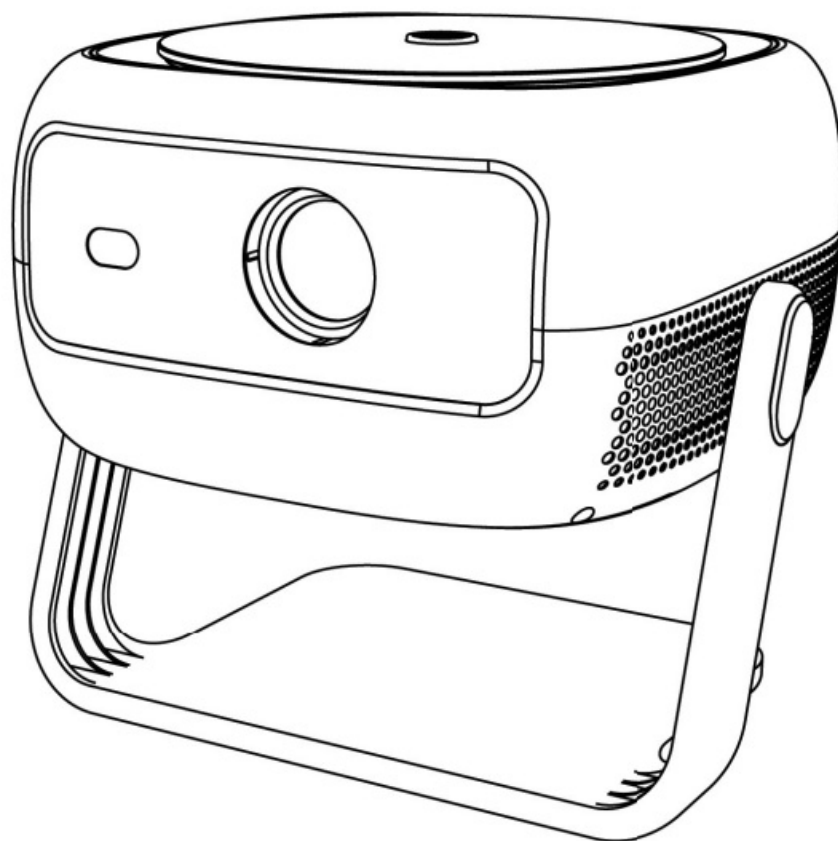

Accessories



 
Projector




Remote Control



User Guide

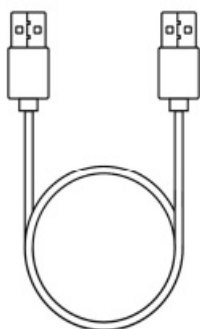

HDMI Cable


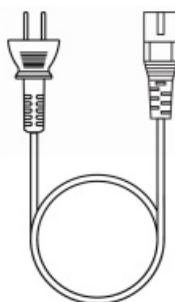 


Power Cable




Cleaning Cloth

  Product

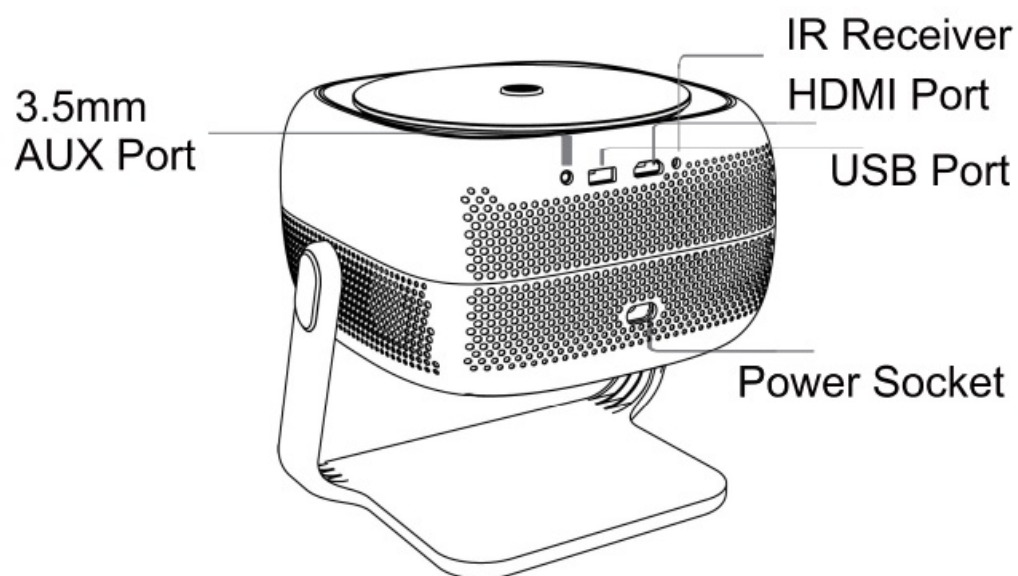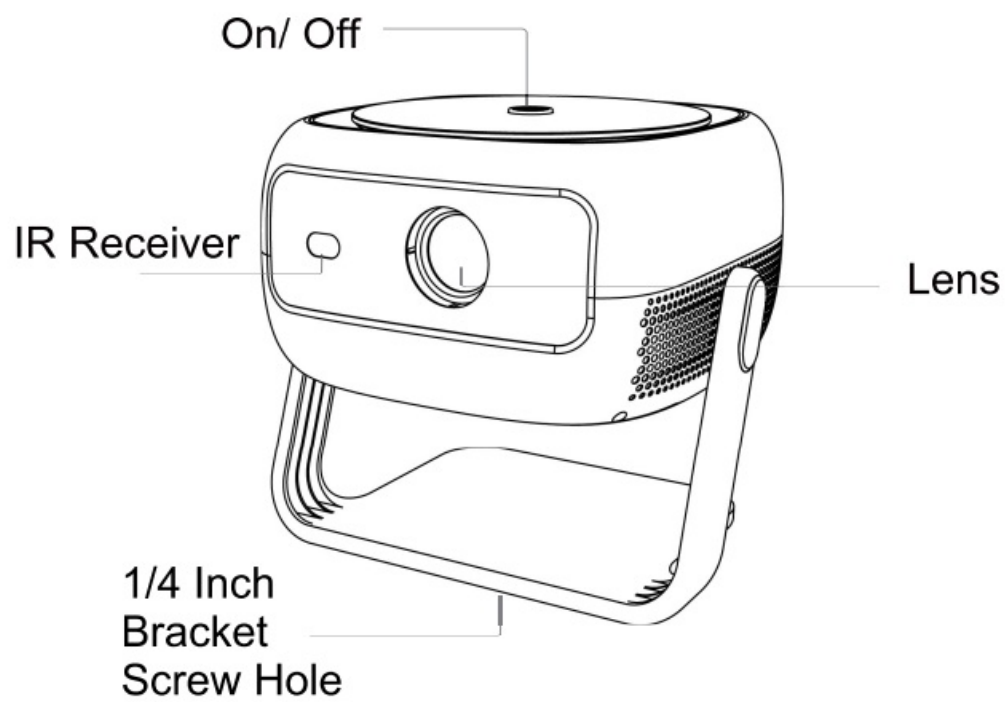


Remote control

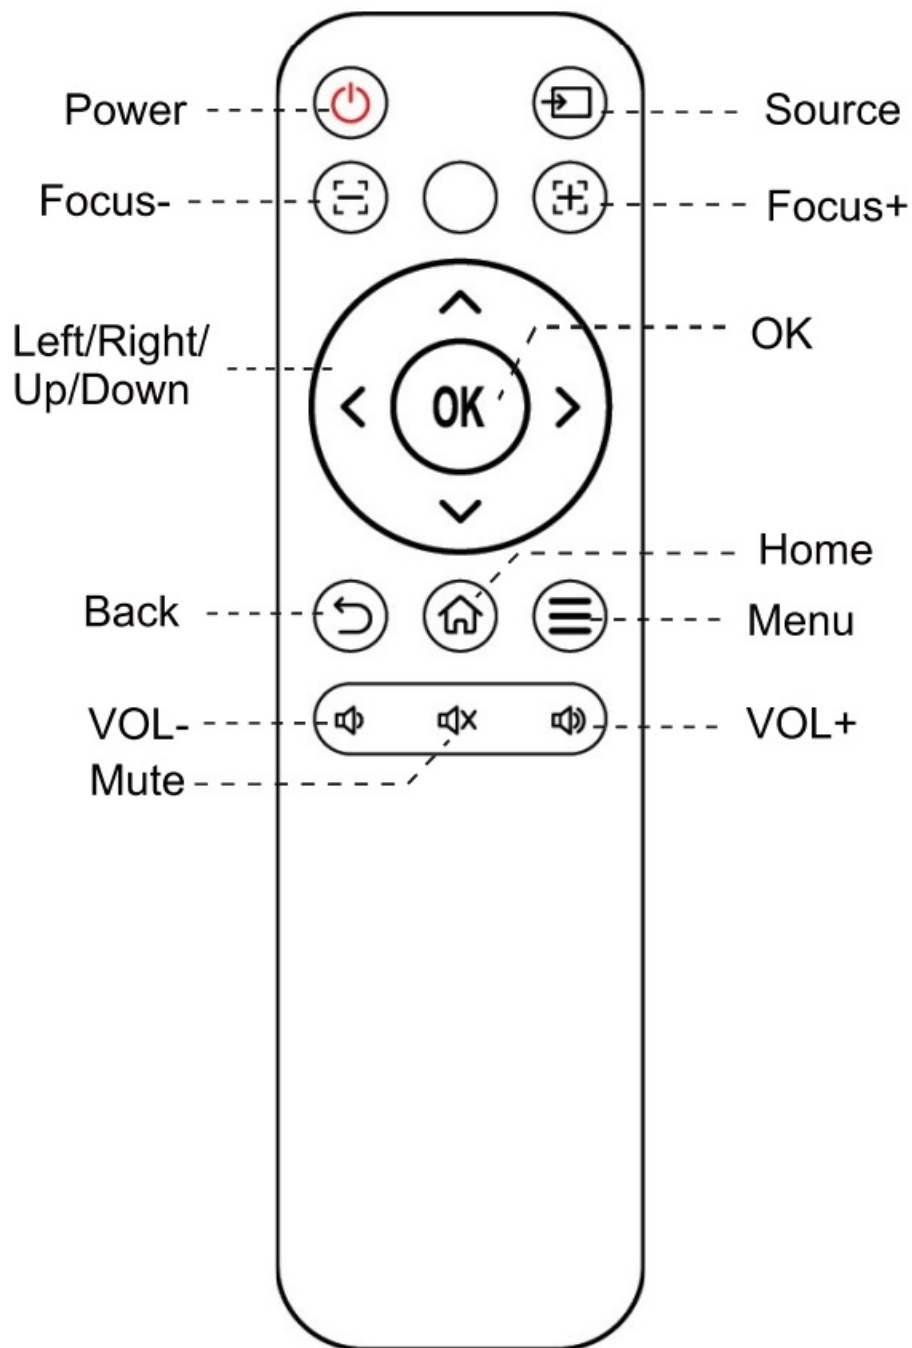 

Get started

Prepare the Remote Control

 - Open the battery holder cover of the remote control. Install two AAA batteries. Make sure to match the polarity (+/ -).
- Put back the cover as indicated picture.
- The distance between the remote and the projector should not exceed 5 m /16.4 ft.

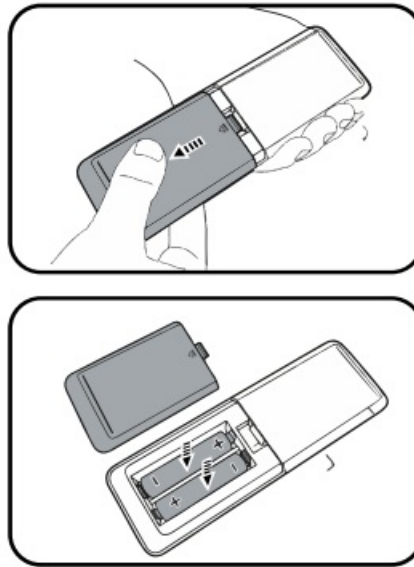

Note: Batteries not included.

Power On/Off

- Insert the power cord to the projector and plug it into power outlet.
- Press the power button or remote control power button once to power on.
- Press the power button or remote control power button twice to power off.
- Place the projector on a stable, flat surface in front of the projection screen.
- Please adjust the distance between the projector and the projection screen to get the desired projection image.

Projection Distance and Projection Image Size

Projection Image Size (inch)	Distance (m)	Distance (ft)
60	1.8	5.9
70	2.1	6.89
80	2.4	7.87
90	2.7	8.86
100	3.0	9.8
110	3.3	10.8
120	3.6	11.8

Tips: The projection image size refers to the distance of the diagonal of the image size instead of the length of the image size.

• Focus Manual

Press Focus+ or Focus- on the remote control to manually adjust the focus. Please carefully observe the focus icon until get a clear image.

- **Keystone Correction**

When positioning your projector in a fixed location, use digital keystone correction. Press the Menu button to enter the Projection Image Setting adjust menu and make vertical adjustments.

- **Keystone Correction Reset**

To restore the default settings, press the Menu button to go to enter the Projection Image Setting adjust menu, select [Trapezoidal Reset] and confirm.

 
 
- **Zoom in/out**

Press Menu button to go to enter the Projection Image Setting adjust menu, select [Window Zoom] on the option menu to adjust the image size.

Projection settings



Desktop Front Projection Ceiling Front Projection

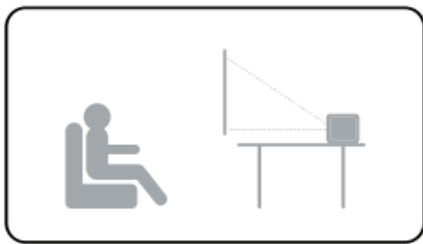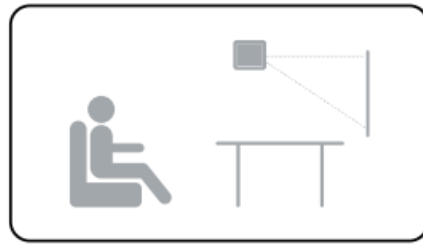

Desktop Rear Projection Ceiling Rear Projection

 


Press Menu, select [Flip] on the Option menu, and select the projection direction.

Screen mirroring

Wireless Screen Mirroring

1. Make sure your device and the projector are connecting with the same network.
2. Open the Wireless Screen to enter the interface.

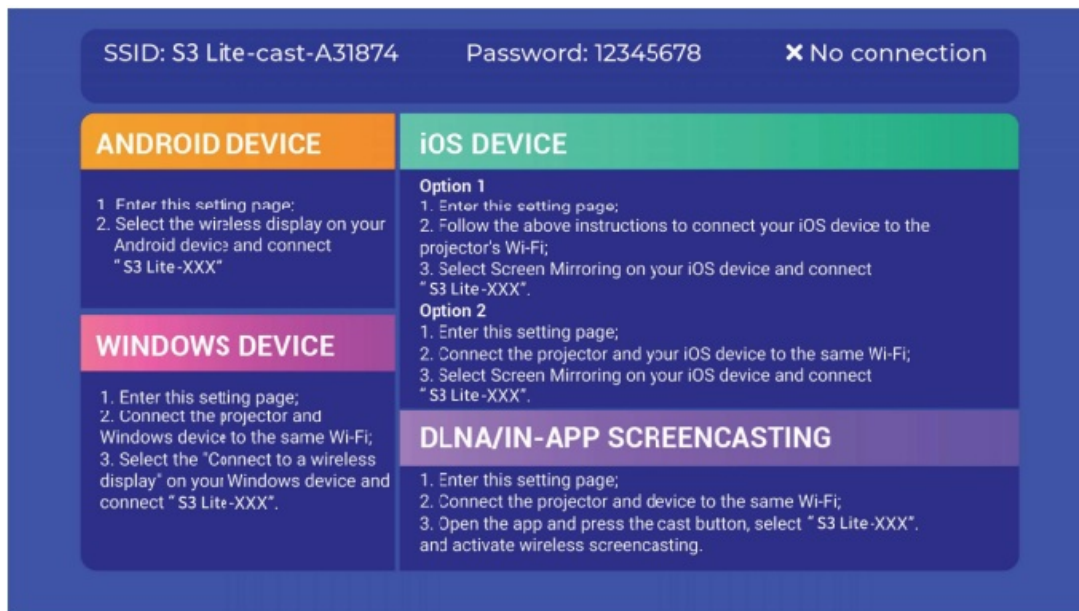

ANDROID DEVICE

1. Turn on the wireless projection function of your Android phone.
2. Search and connect the projector to start the screen mirroring.

IOS DEVICE

1. Turn on the Airplay of your iPhone/iPad
2. Search and choose the projector device name to share the screen.

Note: Due to HDCP copyright, the projector doesn't support cast Netflix or YouTube content from smartphones directly. To watch these channels you need a TV stick (Fire TV Stick, ROKU TV Stick, etc).

Wired Screen Mirroring

1. Open Wired Screen to enter the interface.
2. Connect your device to the projector through your mobile phone charging cable.



ANDROID DEVICE

1. When connect to the projector, it prompts to require download the app.
2. Install and enter the app it will cast your phone screen.

 
IOS DEVICE

1. Click "Trust" when the iPhone shows a pop-up window.
2. Enter device password to activate the screen mirroring.

Wired connections

Play from an HDMI Playback Device

This projector supports connections with various HDMI playback devices such as PC, TV stick, TV box, DVD player, set-top box (STB), game console or other devices.

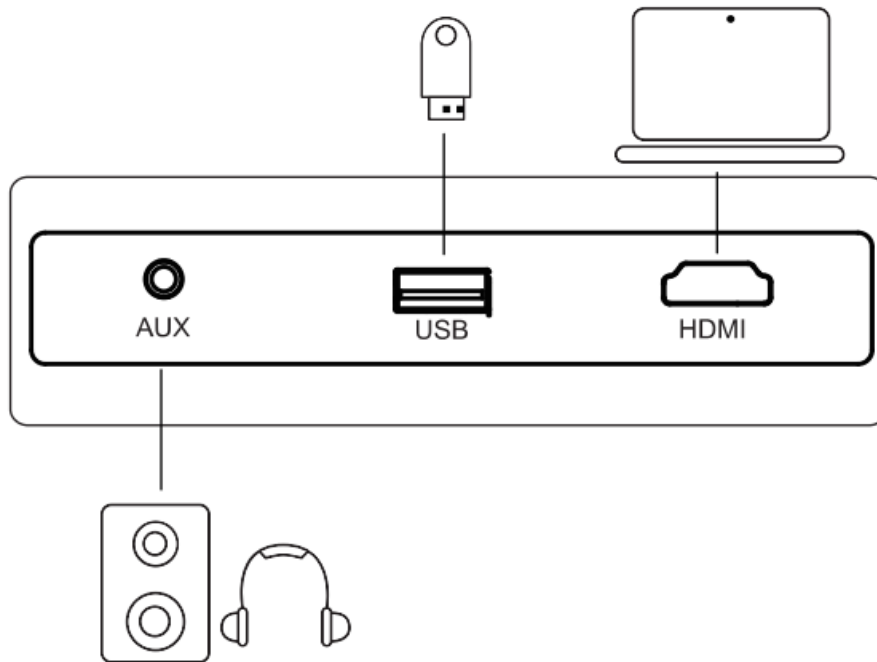

1. Connect this projector to an HDMI playback device with an HDMI cable.
2. Press the Source button on the remote control, select [HDMI] and confirm.

Note: Ensure your computer resolution matches the projector's, otherwise, compatibility issues may occur with the projector and computer.

Play from USB Storage Device

With this projector, you can enjoy music, video, and pictures that are stored on a USB storage device. Insert the USB storage device, select the file type you want to play on the home page, select and confirm the file you want to play.

Play Through External Sound Devices Via AUX Cable

1. Connect one end of the 3.5mm AUX cable to the AUX port on this projector.
2. Connect the other end of the 3.5mm AUX cable to the AUX port on headphones or external speakers.
3. Playback on the projector.

visulapex@outlook.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Documents / Resources

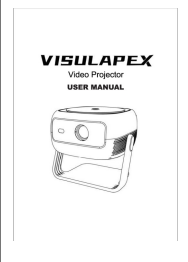	<p>VISULAPEX S3 Video Projector [pdf] User Manual 2BKJG-S3, 2BKJGS3, S3 Video Projector, S3, Video Projector, Projector</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.