

VIVITAR V60097BT Wireless Speaker With Multi Color LED Lighting



VIVITAR V60097BT Wireless Speaker With Multi Color LED Lighting User Manual

[Home](#) » [Vivitar](#) » VIVITAR V60097BT Wireless Speaker With Multi Color LED Lighting User Manual 

Contents

- [1 VIVITAR V60097BT Wireless Speaker With Multi-Color LED Lighting](#)
- [2 Product Usage Instructions](#)
- [3 Important Safety Precautions](#)
- [4 Introduction](#)
- [5 Buttons and Ports](#)
- [6 Charging Your Speaker](#)
- [7 Using Your Speaker](#)
- [8 Maintenance and Care](#)
- [9 FCC Statement](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)

VIVITAR

VIVITAR V60097BT Wireless Speaker With Multi-Color LED Lighting



Specifications

- **Bluetooth Specification:** V5.3
- **Working Distance:** Up to 10 Meters
- **Speaker Power Output:** 10W
- **Charging Input:** DC 5V
- **Battery Type:** Rechargeable Lithium Battery
- **Charging Time:** Approximately 2 Hours
- **Play Time:** Approximately 4 hours* (*When music is played at 50% volume or lower)

Product Usage Instructions

Charging Your Speaker

1. The included USB charging cable has a USB-C plug and a standard USB plug.
2. Insert the USB-C end of the included charging cable into the USB-C charging port on your speaker.
3. Insert the USB charging cable's standard USB plug into the USB ports of a computer or suitable USB charging adapter.
4. Leave your speaker to fully charge before pairing to a Bluetooth device.

Pairing Your Speaker with a Bluetooth Device

1. Press and hold the power button for approximately 3-4 seconds to power ON or power OFF your speaker. Once your speaker is powered ON it will go into Bluetooth Pairing Mode.
2. Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as V60097BT.

Using Your Speaker

- **Play/Pause:** Press the play/pause button to play or pause a track.
- **Next Track (+):** Press the + button to skip to the next track in a playlist. Press and hold the + button to increase volume.
- **Previous Track (-):** Press the – button to go back to the last track in a playlist. Press and hold the – button to decrease volume.
- **Light Button:** Press and hold the Light button to change the speaker light.

Modes/TWS Pairing

Your speaker has 5 different music-playing modes: Bluetooth mode, TF memory card mode, USB mode, AUX mode, and FM Radio mode. To switch between modes, press the Power/Mode button until your desired music mode is reached.

FM Radio Mode

Use the + and – buttons to navigate through radio channels.

TF Memory Card Mode

Insert a suitable memory card into the TF memory card slot on your device. The speaker will play any .mp3 files it reads.

USB Mode

Insert a USB drive into the USB port on your device. The speaker will play any .mp3 files it reads.

FAQ

- **Q: Can I replace the battery in the Vivitar Wireless Bluetooth Speaker?**
 - **A:** No, the battery in the device is integrated and cannot be replaced. Please do not attempt to remove it.
- **Q: How long does it take to charge the speaker?**
 - **A:** The speaker takes approximately 2 hours to fully charge.
- **Q: What is the working distance of the Bluetooth connection?**
 - **A:** The Bluetooth connection can work up to a distance of 10 meters.

Important Safety Precautions

When using your Vivitar Wireless Bluetooth Speaker, basic safety precautions should always be followed,

including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR SPEAKER.
2. Do not use your speaker near water. Clean using a soft cloth or paper towel.
3. Do not place your speaker on any wet surfaces.
4. Do not allow children or the infirm to play with your speaker without adult supervision.
5. Do not expose your speaker to excessive heat, flames or fire.
6. Always press all buttons or switches carefully. Do not manhandle your speaker.
7. Do not use in extremely dry environments, as this can lead to static discharge during usage.
8. Do not expose your speaker to temperatures above 40°C. Keep out of direct sunlight.
9. Do not attempt to repair this product yourself. Contact a qualified service center if your speaker is in need of service.
10. Do not drop, puncture or expose your speaker to excessive trauma.
11. Your speaker is not intended for commercial use.
12. Do not place near objects that generate a strong magnetic field.
13. Unplug your speaker when not in use for long periods of time or during lightning storms.

CAUTION

BATTERY WARNING:

- The device is equipped with an integrated lithium-ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short-circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

Introduction

Thank you for purchasing your Vivitar Wireless Bluetooth Speaker. You can use your speaker with most smartphones and Bluetooth devices to stream music. In order to get the best results, please read this manual first before using your speaker.

Package Contents

- Vivitar Wireless Bluetooth Speaker.
- USB Charging Cable
- User's Manual with Warranty Information

 
Specifications

- **Bluetooth Specification:** V5.3
- **Working Distance:** Up to 10 Meters
- **Speaker Power Output:** 10W


- **Charging Input:** DC 5V
- **Battery Type:** Rechargeable Lithium Battery
- **Charging Time:** Approximately 2 Hours
- **Play Time:** Approximately 4 hours*
 - When music is played at 50% volume or lower.

A Quick Look at Your Device

Buttons and Ports

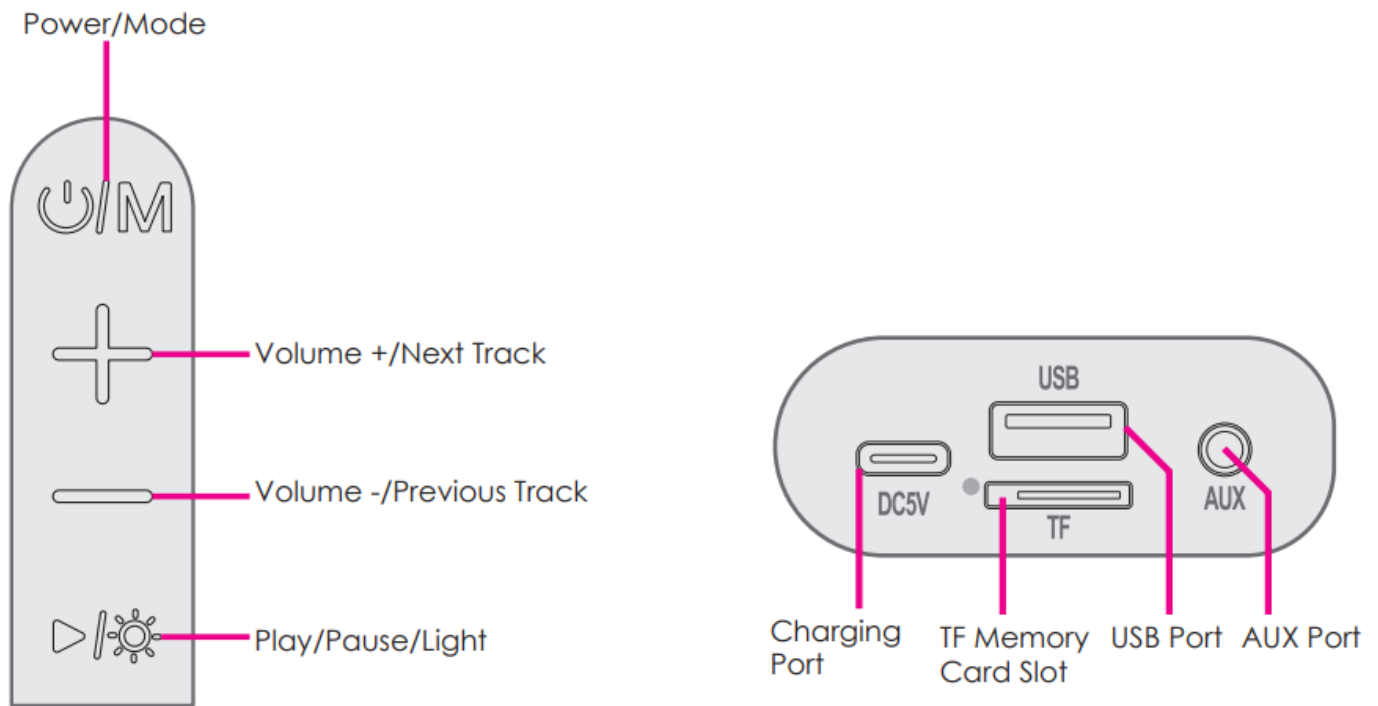

Charging Your Speaker

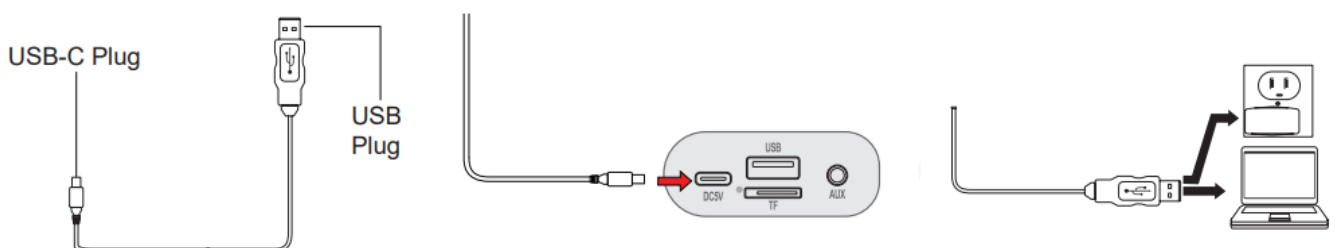 



1. The included USB charging cable has a USB-C plug and a standard USB plug.
2. Insert the USB-C end of the included charging cable into the USB-C charging port on your speaker.
3. Insert the USB charging cable's standard USB plug into the USB ports of a computer or a suitable USB charging adapter.
4. Leave your speaker to fully charge before pairing to a Bluetooth device

Pairing Your Speaker with a Bluetooth Device




1. Press and hold the power button for approximately 3-4 seconds to power ON or power OFF your speaker. Once your speaker is powered ON it will go into Bluetooth Pairing Mode.
2. Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "V60097BT".

  Using Your Speaker

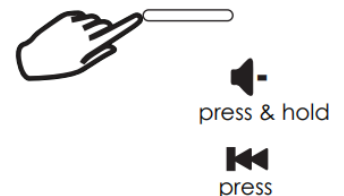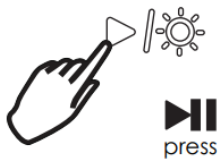

 - Press the play/pause button to play or pause a track.
- Press the + button to skip to the next track in a playlist. Press and hold the + button to increase volume.
- Press the – button to go back to the last track in a playlist. Press and hold the – button to decrease volume.

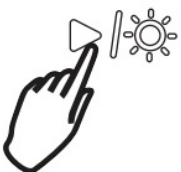

Press the and hold the Light button to change the speaker light.

• Modes/TWS Pairing

- Your speaker has 5 different music-playing modes: Bluetooth mode, TF memory card mode, USB mode, AUX mode, and FM Radio mode. To switch between modes, press the Power/Mode button until your desired music mode is reached.

• FM Radio Mode

- Use the + and – buttons to navigate through radio channels.

• TF Memory Card Mode

- Insert a suitable memory card into the TF memory card slot on your device. The speaker will play any .mp3 files it reads.

- **USB Mode**

- Insert a USB drive into the USB port on your device. The speaker will play any .mp3 files it reads.

- **AUX Mode**

- Insert a 3.5mm AUX cable (not included) into the AUX port. Connect the other end to the headphone jack on your audio device in order to listen to music using a wired connection.

- **TWS Pairing**

- If you have two of the same V60097BT speakers, you can pair them together to play music in sync. When both speakers are on Bluetooth mode with one speaker connected to a smartphone, double press the Power/Mode button on one speaker. A tone will ring to indicate that both speakers have successfully paired.

To disconnect TWS pairing, double press the Power/Mode button again.

Maintenance and Care

- Before using your speaker, inspect the ports to make sure that they are clear of dust and debris before charging.
- Use a soft cloth to clean your speaker. Never use any harsh chemicals or detergents. Make sure your speaker is dry before charging.
- When your speaker is not in use, it should be stored in a cool, dry place.
- Never tug or yank on either USB charging cables while they are connected to your speaker. Connect and disconnect these cables as carefully as possible.
- Never expose your speaker to high temperatures, extreme cold, high humidity or excessive moisture or water.
- Please recycle or dispose of your speaker properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your speaker for further information.



FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet the general RF exposure requirement. The device can be used in portable exposure without restriction

Vivitar One-Year Warranty

This warranty covers the original consumer purchaser only and is not transferable. This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:


Call 1-800-592-9541 or visit our website at www.vivitar.com.

To receive a Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepairs.

©2023 Sakar International
195 Carter Drive Edison, NJ 08817

- **Support:** 800 592 9541
 - www.vivitar.com
-

Documents / Resources

	VIVITAR V60097BT Wireless Speaker With Multi Color LED Lighting [pdf] User Manual V60097BT Wireless Speaker With Multi Color LED Lighting, V60097BT, Wireless Speaker With Multi Color LED Lighting, Speaker With Multi Color LED Lighting, Multi Color LED Lighting, LED Lighting, Lighting, Wireless Speaker, Speaker
---	---

References

- [🌐 Vivitar Consumer Electronics Store — Vivitar.com](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.