

## VIZOLINK FR50T Face Recognition Access Control User Manual


[Home](#) » [VIZOLINK](#) » VIZOLINK FR50T Face Recognition Access Control User Manual 



## Contents

- [1 VIZOLINK FR50T Face Recognition Access Control User Manual](#)
- [2 Specification](#)
- [3 Features](#)
- [4 Network Setup Instruction](#)
- [5 PC Setup](#)
- [6 Installation](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

## VIZOLINK FR50T Face Recognition Access Control User Manual

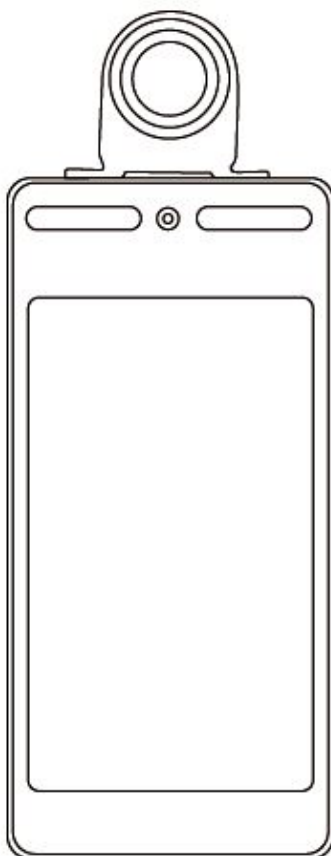

FR50T

## Specification


Model	FR50T
Screen	5.0 inch touch screen, 720 * 1280
	Touch screen with virtual button
OS	Android 9.0
	CPU: 4 core, 1.5G
Memory & Storage Capacity	1GB+8GB
Communication	Wi-Fi (2.4G), Bluetooth, LAN port
Temperature capture	Accuracy: 0.1°C Deviation: $\pm 0.2^{\circ}\text{C}$ (indoor) Best range: 0.4m-0.5m
Camera	2.0MP, 1080P
Interface	USB, Wiegand / Access Control
Housing	Ultra-thin edge design, Full-metal case
Supplement Light	White LED soft light
Weight	TBD
Dimension	TBD
Power supply	DC12V, 2A
Tripod	Optional
Working temperature	Environment temperature: 5°C ~ 45°C

## Features



## Network Setup Instruction

Turn on the device. Connect to local Wi-Fi network.

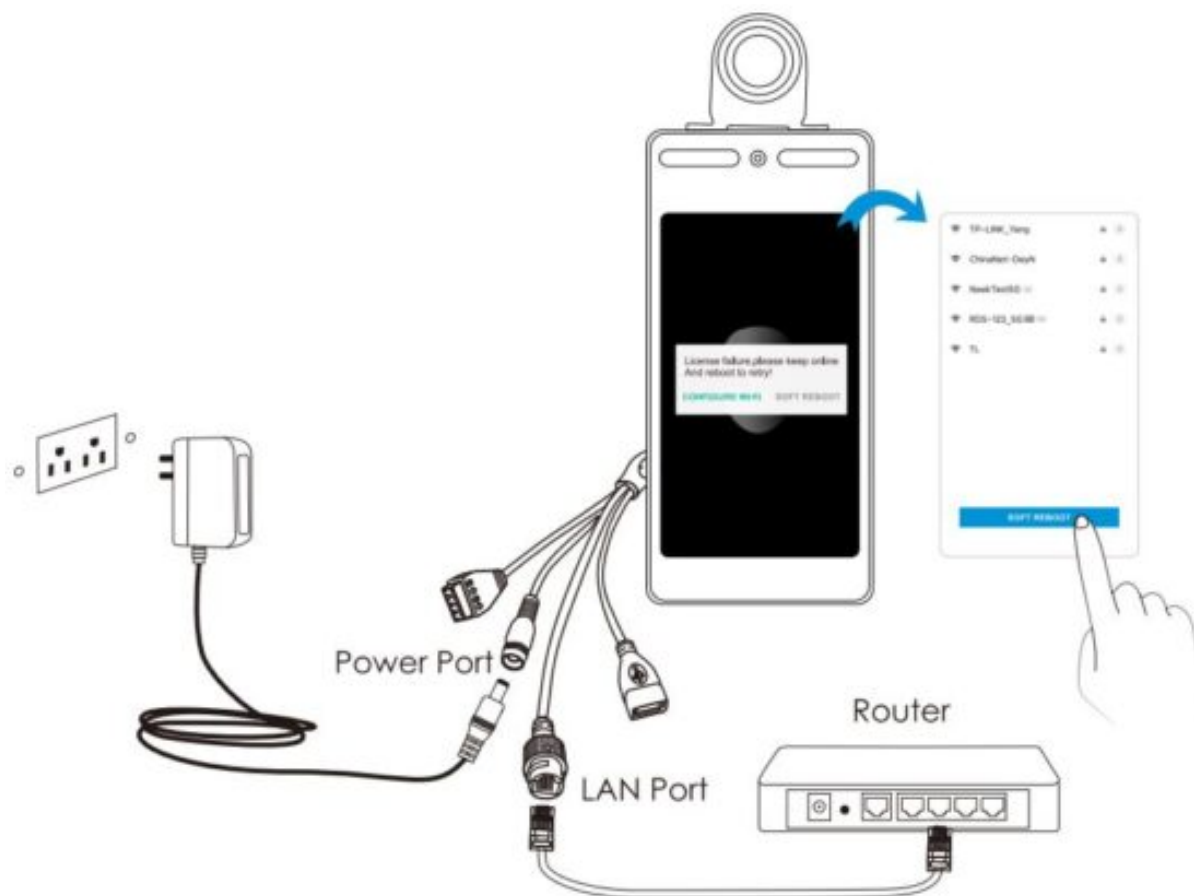

**Note:** The network must have WAN connection

## PC Setup

1. **Open internet browser. Input below address in address bar**  
<http://t01.memoyun.com:8080/font visgatep u s/#/Login>
2. **Input account name and password**

**Login Please**

tuling

.....

Login

### 3. Device binding

Add device X

Input device number

Input device number

Input device name


Select device direction

☐ None ☒ Entrance ☐ Exit

Select group

please select


Cancel Sure

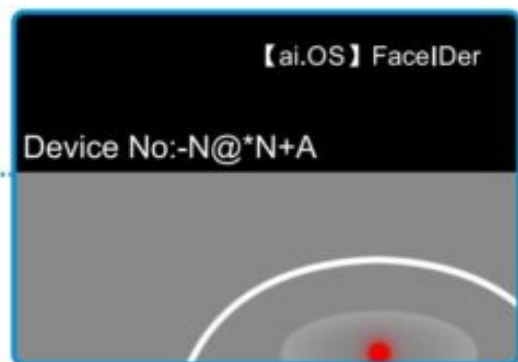


### Installation



Wall-mount

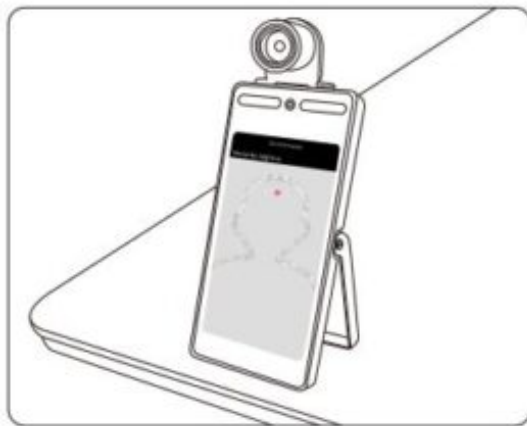

Desktop

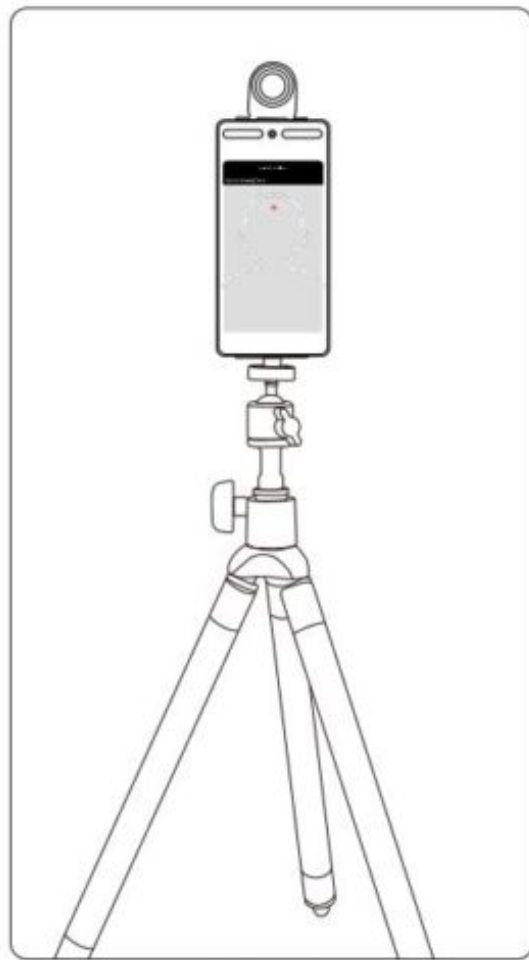

Tripod

**Warning:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** This device and its antenna(s) must not be co-located or operation in conjunction with


any other antenna or transmitter.

**RF Exposure Statement**

To maintain compliance with FCC’s RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

**Read More About This Manual & Download PDF:**

**Documents / Resources**

	<a href="#">VIZOLINK FR50T Face Recognition Access Control</a> [pdf] User Manual FR50T, 2AV9W-FR50T, 2AV9WFR50T, FR50T Face Recognition Access Control, Face Recognition Access Control, Recognition Access Control, Access Control
---	--