

# VIZOLINK WebCam 4K 800W Pixels Wide Angle Camera Web **User Manual**

Home » VIZOLINK » VIZOLINK WebCam 4K 800W Pixels Wide Angle Camera Web User Manual



#### **Contents**

- 1 VIZOLINK WebCam 4K 800W Pixels Wide Angle Camera
- 2 Packing list
- 3 System requirements
- **4 Product Overview**
- 5 How to use the camera?
- 6 Documents / Resources
- 7 Related Posts



VIZOLINK WebCam 4K 800W Pixels Wide Angle Camera Web



# **Packing list**


- 1 x Camera
- 1 x Manual
- 1 xTripod
- 1 x Privacy lid

# **System requirements**

- Support multiple PC operating systems. For example, Windows 7, Windows 8, Windows 10 or the latest version;
- Applicable to USB video equipment (UVC);
- Support macOS,i, 10.10 or latest version;
- Support Android TV BOX (Android 9.0 or above);


# **Product Overview**

**LED Status Indicator Video Recording Pause Button** 

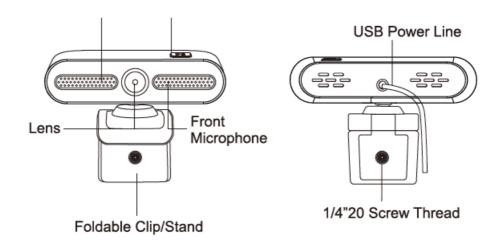

#### Place and connect the camera

Place on the tablet computer display or laptop screen: Open the bottom bracket of the Webcam, fold it and clamp it onto the screen. Then adjust the angle of the Webcam horizontally or vertically to obtain the best viewing angle.

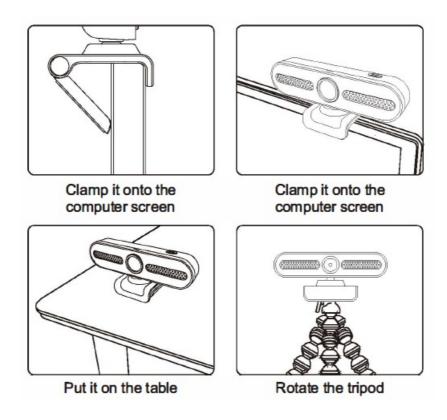

## On a table or the surface of other objects:

Adjust the angle of the Webcam horizontally or vertically to obtain the best viewing angle.

### On the tripod:

Fix the Webcam on the tripod, then adjust the angle of the Webcam horizontally or vertically to obtain the best viewing angle.

#### How to use the camera?

## Insert it into the computer directly:

Connect the computer via USB; the red indicator light of the camera will light up; then open the video tool; manually or automatically select the USB camera; when the Webcam is working, the green indicator light will light up.

#### Apply in Windows XPNista/7/8

Please download software AM CAP to check whether the camera can work, and you can use this software for

video recording.

# **Steps of using AMCAP software:**


When the webcam red indicator light is on, start the AMCAP software.

- If there is no image, please select "Preview" in "Options". Then check that "USB Camera" is applied in "Device".
- You can adjust the size of the video or photo, select "Video Capture Pine .. " in "Options".




# Apply In Window10:

C-Webcam rad Indicator light Is always on, select \*star\*\* select "Camera'.

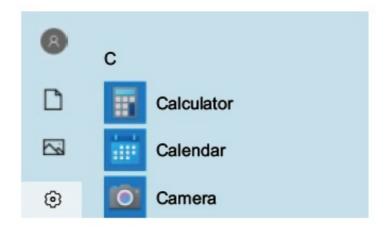

- If the Webcam g,-, the indicator light is always on, It means that the camera Is working normally, you can take a photo or record video.
- If the red indicator light is still on, please select" USB Cemera, then the green Indicator light will be on, and the camera will wark Connally.

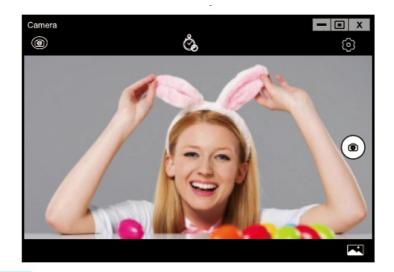

# Apply In Mac system:

• webcam rad indicator light is always on, open photo booth".



- Select "USB camera" In camera" menu.
- Webcam green Indicator light Is always on, the camera ia working normally



# **Documents / Resources**



<u>VIZOLINK WebCam 4K 800W Pixels Wide Angle Camera Web</u> [pdf] User Manual WebCam 4K 800W Pixels Wide Angle Camera Web

Manuals+,