

vizrt Viz CaptureCast Single Workflow Licensed Server User Guide

Contents

- [1 vizrt Viz CaptureCast Single Workflow Licensed Server](#)
- [2 Product Usage Instructions](#)
- [3 Setting up the Viz CaptureCast](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



vizrt Viz CaptureCast Single Workflow Licensed Server

Product Information

Specifications:

- **Brand:** Viz CaptureCast
- **Connections:** Keyboard & Mouse, Network Cable, USB-C cable
- **Power:** Mains cable
- **User:** capturecast_customer
- **Password:** customer101

Product Usage Instructions

Step 1: Connect Keyboard & Mouse

Release the Vizrt faceplate using the left-hand button to reveal the front connections. Connect the keyboard and mouse to the designated ports.

Step 2: Connect Network Cable

Connect the network cable to the network port on the unit backplane to establish a network connection.

Step 3: Connect your Display

Connect the USB-C cable from the Viz CaptureCast to your display, and then connect the display to a power outlet for display functionality.

Step 4: Power On

Connect the mains cable to the power source and press the power button on the Viz CaptureCast unit. Re-attach the faceplate once powered on.

Step 5: Login and Setup

After powering up, log in using the default user 'capturecast_customer' and default password 'customer101'. Follow any additional setup instructions provided or refer to hints and tips for further guidance.

Please consult the instructions inside the box for guidance on rack rail installation.

Frequently Asked Questions (FAQ)

- **Q: What should I do if I forget my password?**

A: If you forget your password, please contact customer support for assistance in resetting your password.

- **Q: Can I use a different keyboard and mouse with Viz CaptureCast?**

A: Yes, you can use compatible keyboards and mice with Viz CaptureCast by connecting them to the designated ports.

Thank you for purchasing Viz CaptureCast™, Vizrt all-in-one automated video capture, webcasting, and publishing solution for NDI® with advanced monitoring, management, playback, and direct integration with industry-leading video management platforms. Below are the first steps you need to take to get your new Viz CaptureCast™ up and running.

Setting up the Viz CaptureCast

Step 1. Connect Keyboard & Mouse

Release the Vizrt faceplate using the left hand button, to reveal front connections.



Step 2. Connect Network Cable

Connect network cable to the network port on the unit backplane.



Step 3. Connect your display

Connect USB-C cable to display and connect display to power outlet.



Step 4. Connect Viz CaptureCast to power.


Connect mains cable and press power button. Re-attach faceplate to unit.



Step 5. Connect Viz CaptureCast to power.

Once powered up, click on the default user: capturecast_customer and type in the default password: customer101 and hit enter. You can then click here for a hints and tips to set up your Viz CaptureCast. Please refer to instructions inside box for rack rail installation guidance

Documents / Resources

	<p>vizrt Viz CaptureCast Single Workflow Licensed Server [pdf] User Guide</p> <p>Viz CaptureCast Single Workflow Licensed Server, Viz CaptureCast, Single Workflow Licensed Server, Workflow Licensed Server, Licensed Server, Server</p>
---	---

References

- [NewTek Support](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.