

VODESON
KF04A Key Finder



Vodeson KF04A Key Finder Owner's Manual

[Home](#) » [Vodeson](#) » Vodeson KF04A Key Finder Owner's Manual 

Contents

- [1 Vodeson KF04A Key Finder](#)
- [2 Product Usage Instructions](#)
- [3 FAQ](#)
- [4 Introduction](#)
- [5 Product Diagrams](#)
- [6 Batteries Installation](#)
- [7 Operation](#)
- [8 Specification](#)
- [9 FCC STATEMENT](#)
- [10 Documents / Resources](#)
 - [10.1 References](#)
- [11 Related Posts](#)

VODESON

Vodeson KF04A Key Finder



Product Usage Instructions

The KeyFinder is a device designed to help you locate your keys within a certain range. Follow the steps below to effectively use the KeyFinder:

- **Step 1: Activation** Ensure the KeyFinder is properly activated by pressing the designated button.
- **Step 2: Pairing** Pair the KeyFinder with your keys or any other item you want to keep track of. Follow the pairing instructions provided with the device.
- **Step 3: Locating** To locate your keys, move around within the specified working range of 15-30 meters in an open space while pressing the search button on the KeyFinder.
- **Step 4: Battery Replacement** When the battery runs out, carefully replace it with a compatible button cell or coin battery as indicated in the user manual.


FAQ

- **Q:** What should I do if the KeyFinder does not work within the specified range?
- **A:** If the KeyFinder is not working within the specified range, try replacing the battery first. If the issue persists, contact customer support for further assistance.
- **Q:** Can I pair multiple items with one KeyFinder?
- **A:** Yes, you can pair multiple items such as keys, wallets, or bags with one KeyFinder. Follow the pairing instructions for each item you want to track.

Introduction

This key finder can help you to find lost keys, remotes, purses, eyeglasses, canes, and other easily lost items quickly. With just one press on the color-coded button, the beep sound and flashes will lead you to find the lost items. This is a unique key finder with LED flashlight and base support. The ON/OFF switch is located at the right side of the transmitter, which allows you to turn on and off the LED flashlight easily. This becomes extremely handy when you need to find something in the dark. The key finder with base support is also a good display for your tea table, TV bench, bed, computer desk, bookshelf, etc. The transmitter is removable from the base and can be carried with you to find lost items.

Product Diagrams

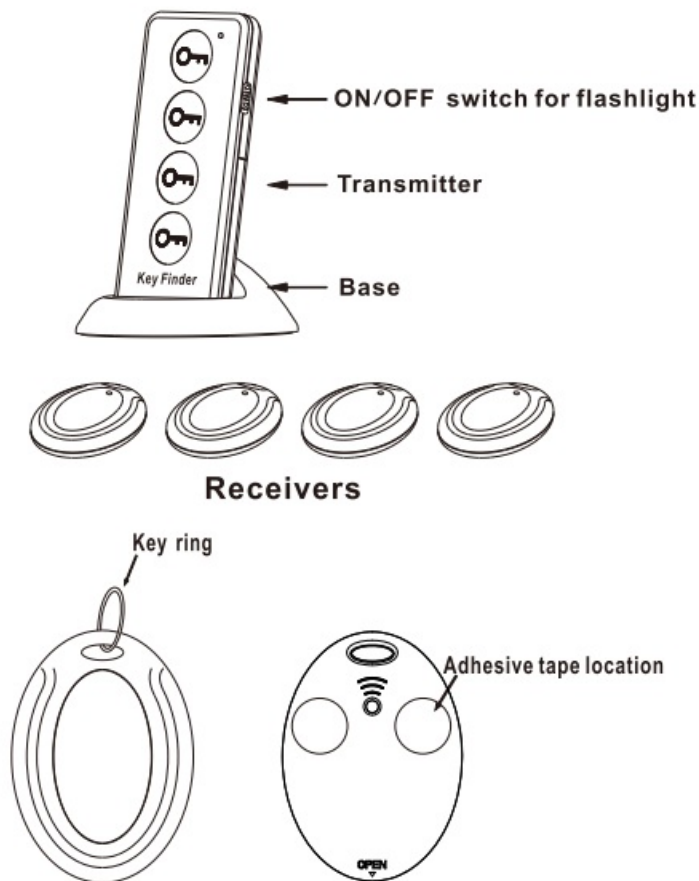

Batteries Installation

Transmitter


Requires 2 new AAA 1.5V batteries (not included). Follow the steps below to install batteries into the transmitter.

1. Remove the battery door located on the back of the transmitter.
2. Install the batteries according to the (+) and (-) marks inside the battery compartment.
3. Push the battery door back into place.

Receiver

Each receiver requires one CR2032 button cell battery (included).

1. Using a small coin, insert it in the slot on the battery cover and unscrew it in the arrowed direction.
2. Put the battery into the battery compartment, and make sure the "+" side of the battery is facing up.
3. Replace the battery cover and securely screw it into place.

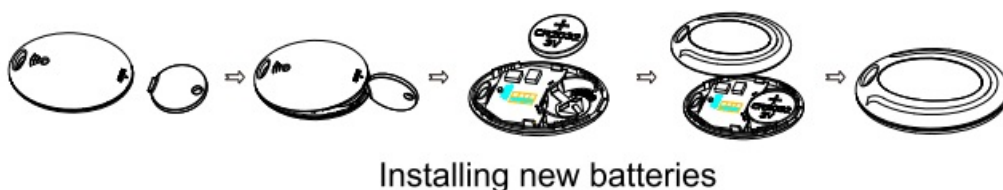

Warning:

- Do not mix old and new batteries.
- Do not mix Alkaline, standard (carbon-zinc) or rechargeable batteries.



Protect the environment and respect the law. Please handle the old battery properly. Never discard it by throwing it into a garbage bin.

Operation

1. Attach the color-coded receivers to your frequently lost items with the key rings or double-sided adhesive tape.
2. Press and release the corresponding color-coded button on the transmitter.
3. If the receiver is in range, it will beep and meanwhile the LED indicator will flash.
4. If no beep is heard, change your location or use new batteries and press the button again.

Specification

- **Battery:** AAA1.5V×2pcs (for transmitter); CR2032 (for receiver)
- **Working range:** 15-30 meters(open space)
- **Sound:** 75~80dB
- **Eranuancy:** 122 02MH-

Warning

1. Keep batteries out of the reach of children.
2. Always insert batteries correctly with regard to polarity (+ and –) marked on the battery and the equipment.
3. Do not short-circuit batteries.
4. Do not charge batteries.

WARNING

- Remove and Immediately recycle or dispose of used batteries according to local regulations and keep them away from children. Do NOT dispose of batteries in household trash or incinerate them.
- Even used batteries may cause severe injury or death a local poison control center for treatment information.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating is 40°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- The compatible battery type is CR2032.
- The nominal battery voltage: DC 3V
- Ensure the batteries are installed correctly according to polarity(+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

WARNING



- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- DEATH or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- KEEP new and used batteries OUT OF REACH of CHILDREN
- Seek immediate medical attention if a batter is suspected to be swallowed or inserted inside any part of the body.

FCC STATEMENT

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.



WARNING This product contains a button cell or coin battery.

Documents / Resources

	Vodeson KF04A Key Finder [pdf] Owner's Manual HB9907, 2AAXF-HB9907, 2AAXFHB9907, KF04A Key Finder, KF04A, Key Finder, Finder
	Vodeson KF04A Key Finder [pdf] Instruction Manual 2AAXF-HB9908, 2AAXFHB9908, hb9908, KF04A Key Finder, KF04A, Key Finder, Finder

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.