





VOLA NR.21 Chrome Flow Control Handle Installation Guide

Home » vola » VOLA NR.21 Chrome Flow Control Handle Installation Guide 1

Contents

- 1 VOLA NR.21 Chrome Flow Control
- Handle
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 Installation
- **5 Operation**
- **6 Maintenance**
- 7 Frequently Asked Questions (FAQ)
- 8 Documents / Resources
 - 8.1 References
- 9 Related Posts



VOLA NR.21 Chrome Flow Control Handle



Product Information

Specifications

• Model: VOLA NR.21/28/19/24

• Compatible with: VR2260/VR1400/VR2019

• Tile Thickness Range: 3 – 65 mm


Product Usage Instructions

Do not cut the membrane


Installation

- 1. Ensure the surface is clean and dry.
- 2. Select the appropriate tile thickness setting based on the range provided.
- 3. Adjust the product to the desired thickness level for your tiles.
- 4. Securely install the product according to the manufacturer's instructions.


Extension

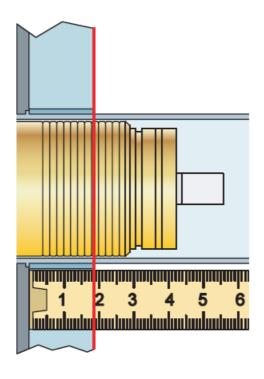

VR2260/VR1400/VR2019		
Tiles:	3 – 15 mm	Std.
	15 – 25 mm	+10
	25 – 35 mm	+20
	35 – 45 mm	+30
	45 – 55 mm	+40
	55 – 65 mm	+50

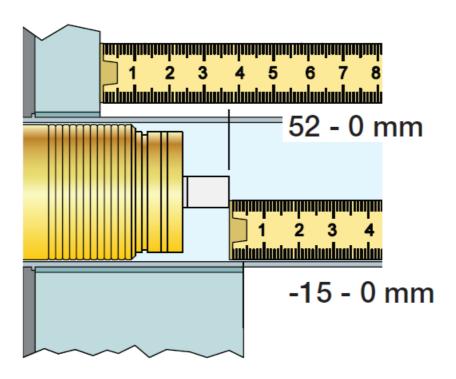

VR2260/VR1400/VR2019			
իուրույրուրույրուրուրուրուրուրուրուրուրուրուրուրուրուր	35 – 47 mm	Std.	
	25 – 35 mm	+10	
	15 – 25 mm	+20	
	5 – 15 mm	+30	
	-5 – 5 mm	+40	
	-15 – -5 mm	+50	

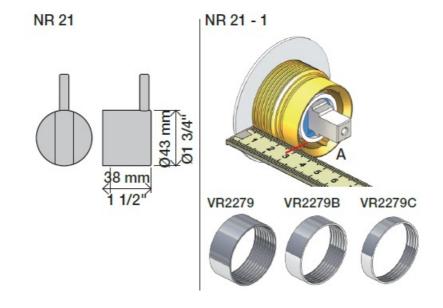



		A
VR2279	16 mm	30 – 34 mm
VR2279B	12 mm	26 – 30 mm
VR2279C	8 mm	22 – 26 mm

Operation

To operate the product:


- 1. Insert the tiles into the designated area.
- 2. Use the product adjustment features to align the tiles correctly.
- 3. Ensure proper positioning before finalizing the installation.

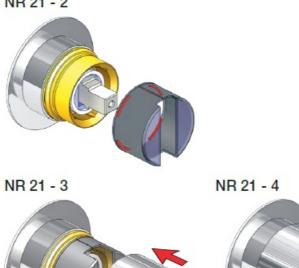

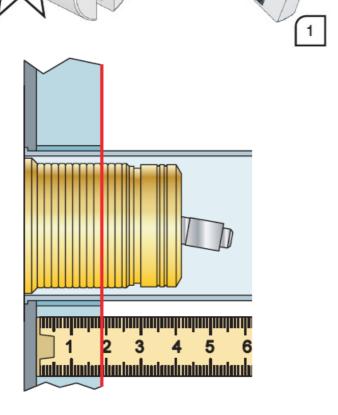

◯2 mm


VR1260/VR1400/VR2019			
Tiles:	3 – 15 mm	Std.	
	15 – 25 mm	+10	
	25 – 35 mm	+20	
	35 – 45 mm	+30	
	45 – 55 mm	+40	
	55 – 65 mm	+50	

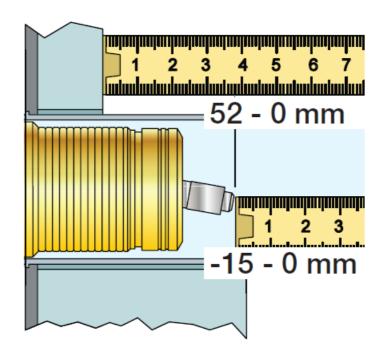


VR1260/VR1400/VR2019

- 40 52 mm Std.
- 30 40 mm +10
- 20 30 mm +20
- 10 20 mm +30
- 0 10 mm +40
- -10 0 mm +50

NR 19/NR24

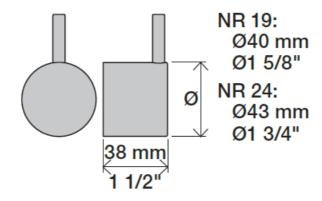

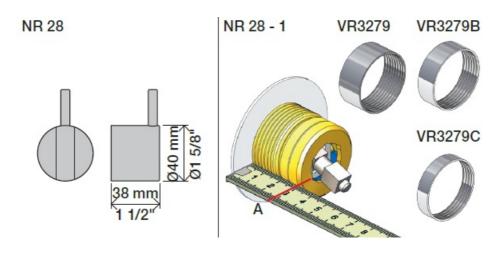


		А
VR3279	16 mm	31 – 36 mm
VR3279B	12 mm	27 – 32 mm
VR3279C	8 mm	23 – 28 mm


Maintenance

Regular maintenance is essential for product longevity.

- Clean the product with a mild detergent and water solution.
- Avoid using abrasive cleaners that may damage the surface.
- Inspect the product periodically for any signs of wear or damage.

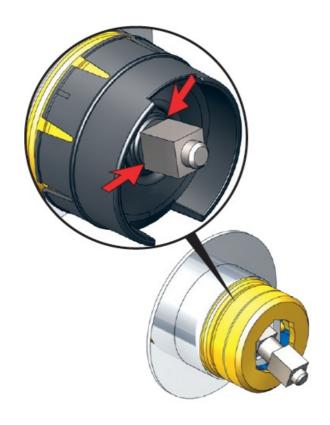



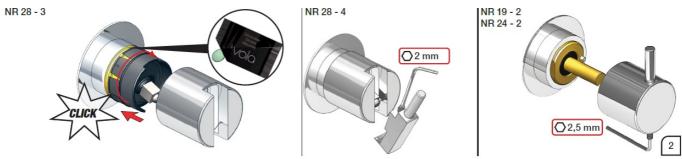

Frequently Asked Questions (FAQ)

- · Q: How do I adjust the tile thickness setting?
 - A: To adjust the tile thickness setting, use the provided controls on the product to select the appropriate range for your tiles.
- Q: Can this product be used for different tile sizes?
 - A: Yes, this product is designed to accommodate various tile thicknesses within the specified range for optimal versatility.
- Q: What is the recommended maintenance schedule for this product?
 - A: It is recommended to clean the product regularly and inspect it periodically to ensure proper functionality and durability.

Documents / Resources



VOLA NR.21 Chrome Flow Control Handle [pdf] Installation Guide NR.21, NR.21 Chrome Flow Control Handle, Chrome Flow Control Handle, Flow Control Handle, Control Handle, Handle

References

• Taps and accessories in timeless Scandinavian design | VOLA

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.