

Volcano
Panorama MIDI
Computer Case



Volcano Panorama MIDI Computer Case User Manual

[Home](#) » [VOLCANO](#) » Volcano Panorama MIDI Computer Case User Manual 

Contents

- [1 Volcano Panorama MIDI Computer Case](#)
- [2 Panel I/O](#)
- [3 Accessories](#)
- [4 Overview](#)
- [5 Installation of ARGB hub](#)
- [6 Dimensions](#)
- [7 Installing power supply](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)


Volcano

Volcano Panorama MIDI Computer Case



Panel I/O

1. USB-C
2. SPEAKER / MIC
3. USB 3.2 GEN 1*
4. USB 3.2 GEN 1*
5. RESET
6. POWER

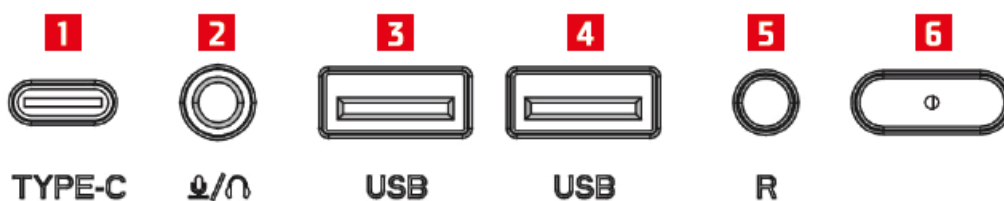


PREVIOUSLY 3.1 GEN 1 & 3.0


Accessories

- **A:** MOTHERBOARD SCREWS
- **B:** HDD/SSD SCREWS
- **C:** PSU/GPU SCREWS
- **D:** STANDOFFS
- **E:** COPPER PILLAR SLEEVE
- **F:** ZIP TIE

- **G:** BUZZER
- **H:** SCREWDRIVER
- **I:** CLOTH

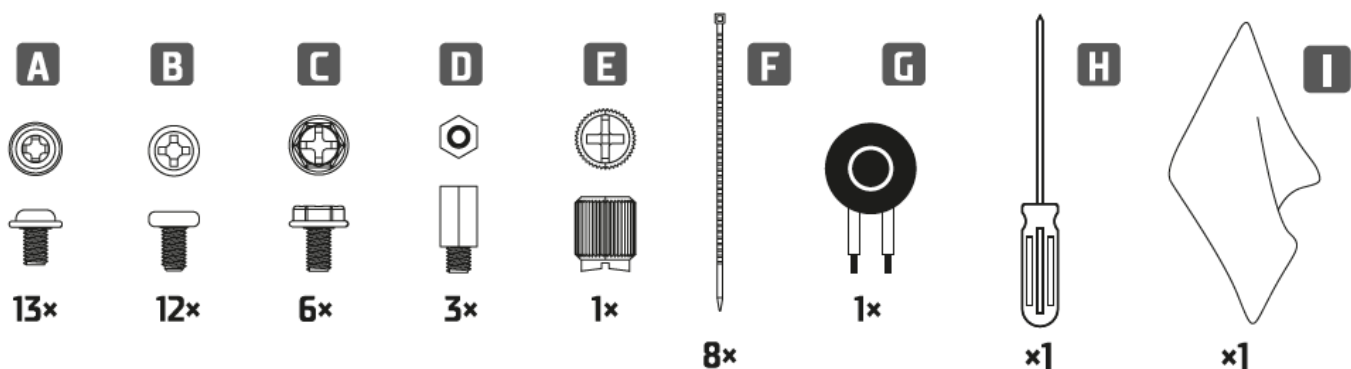

Overview

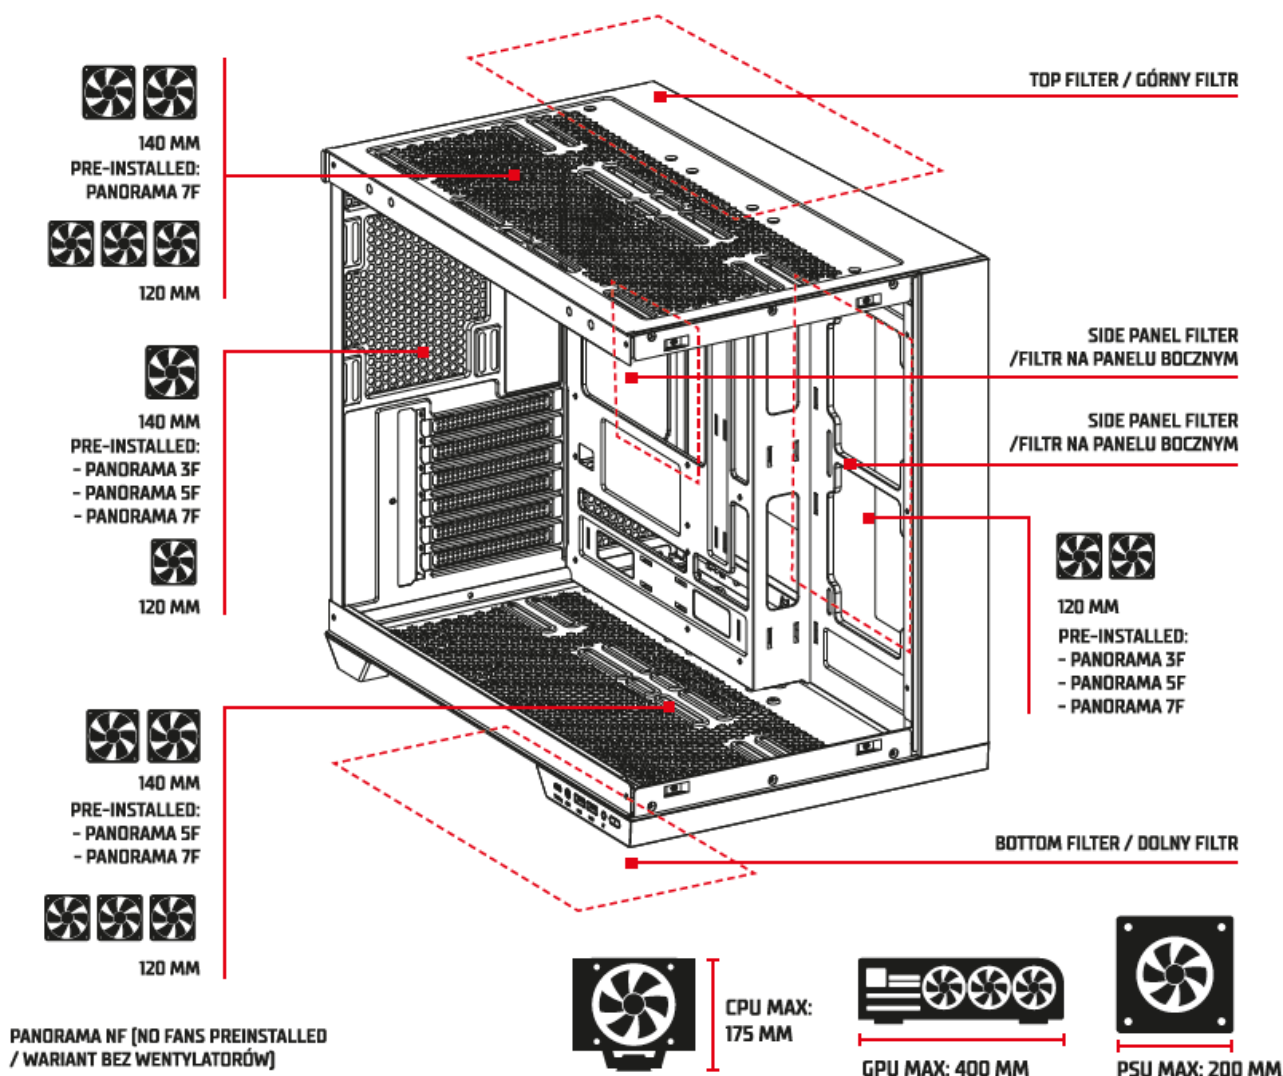

Installation of ARGB hub

FUNCTION


1. Short press LED button to cycle through LED modes.
2. Press the LED button for 3 seconds to change the mode to the motherboard control.

3. Press the LED button for 5 seconds to turn off the LED power.
4. Press the LED button to back to the manual control.
5. Through the mainboard's PWM control the PWM fan speed.
6. Memory Function after power off.


CONNECT CONTROLLER TO PROPER FAN CONNECTOR ON M/B.

(FOR A MOTHERBOARD EQUIPPED WITH ARG FAN CONTROL CONNEC- TORS, CONNECT IT TO THE LED CONTROL CONNECTOR ON MBI CONNECT THE POWER SUPPLY TO SATA.


CONNECT LED SW.

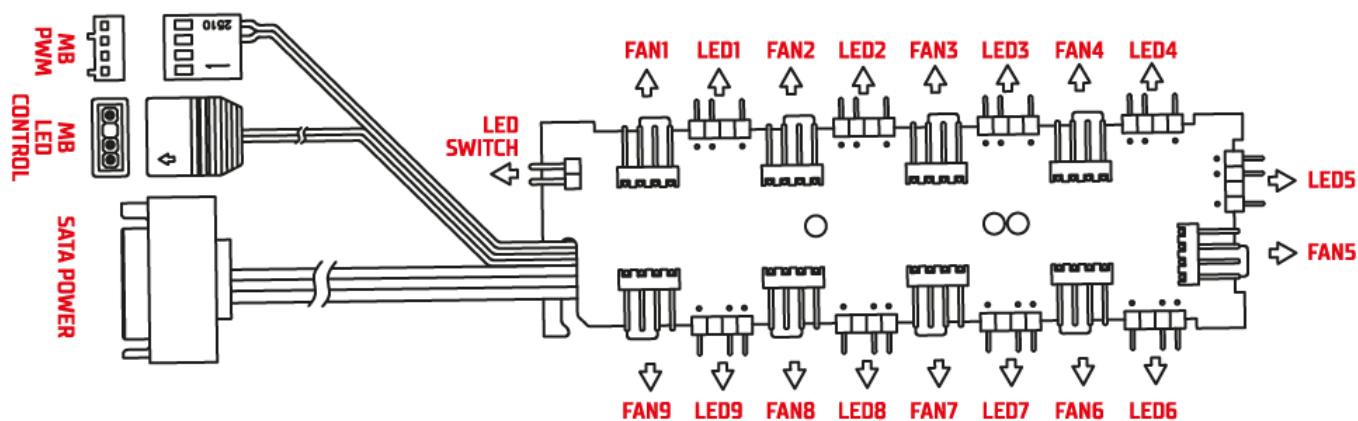



Dimensions

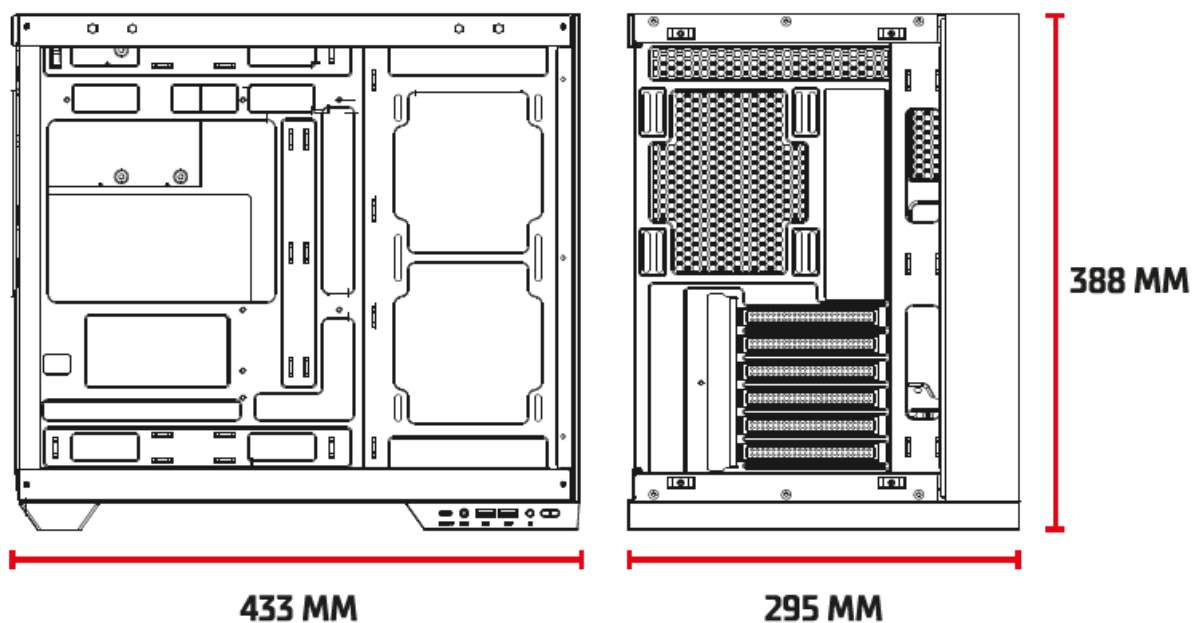



Installing motherboard

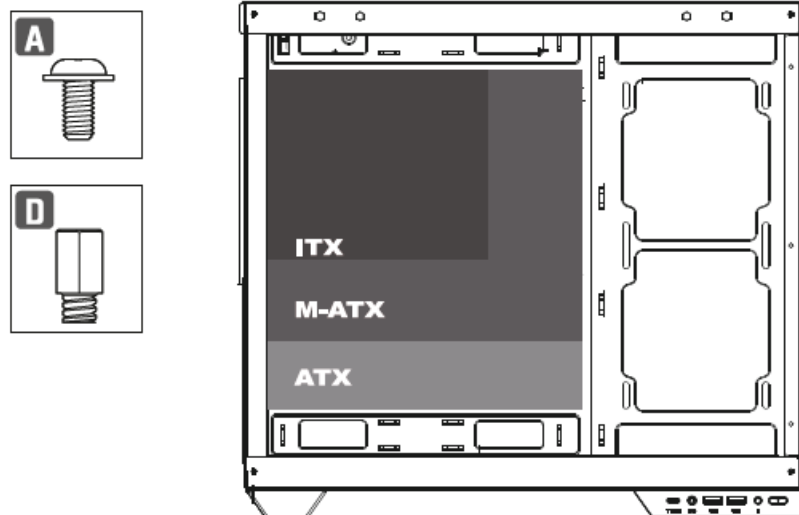


Installing power supply

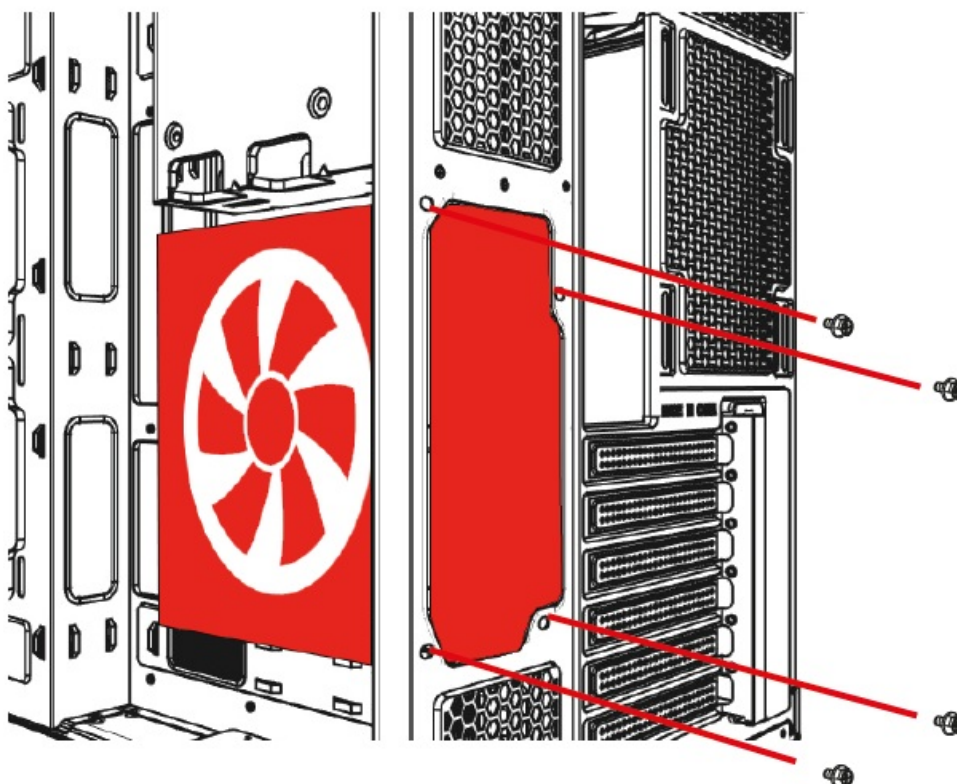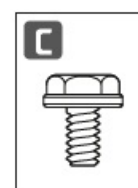

Installing CPU

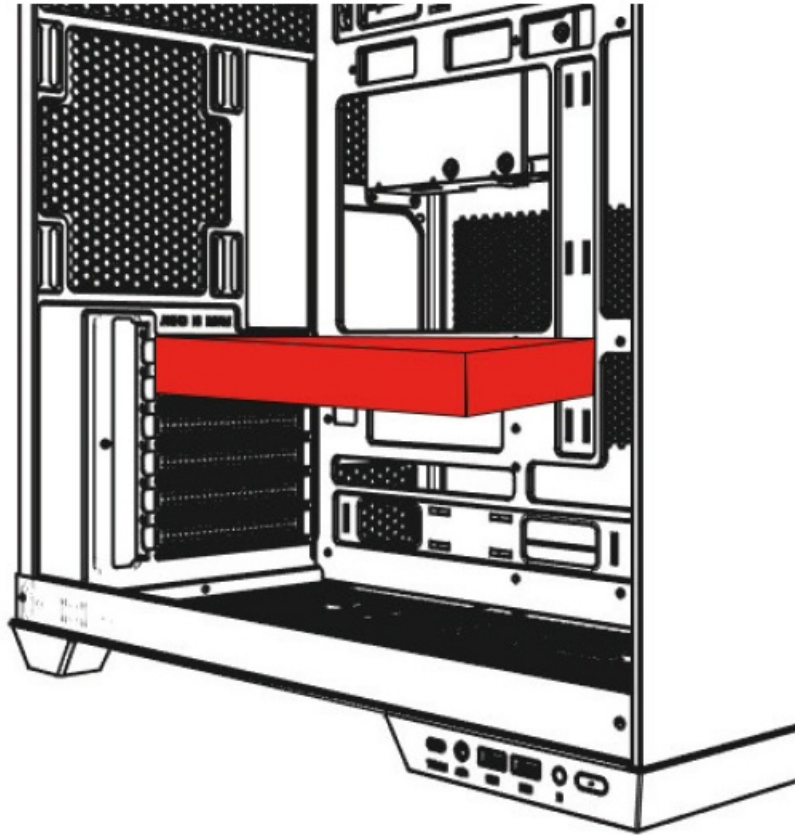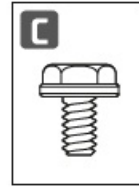

Installing HDD & SSD

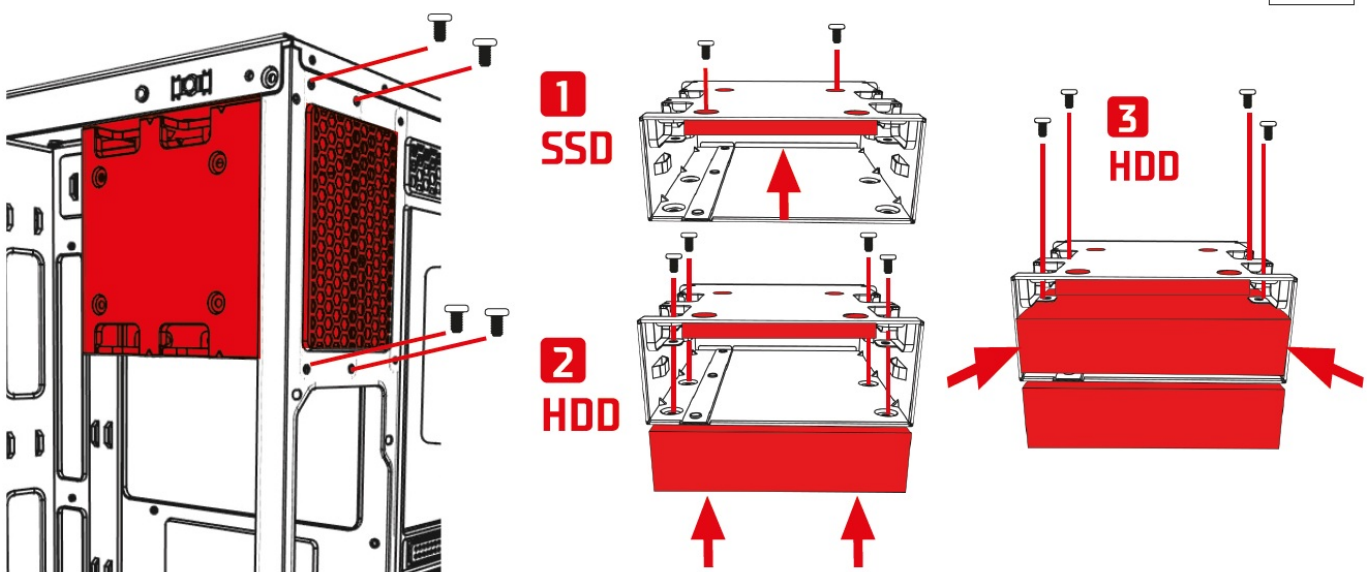

Quick start guide/installation


1. Open the housing.

2. Install all computer components following the instructions in the individual assembly instructions for each component.
3. Mount in the housing and connect the power supply to the required components, following the installation instructions of the power supply and the instructions of the components that require its connection. The power supply is mounted in a tunnel, in the lower part of the case, with the fan facing outside the case (down).
4. Check the correct assembly of components and the connection of power plugs.
5. Close the housing.
6. Connect the monitor, keyboard, and other accessories to the computer.
7. Connect the power cord to the socket in the power supply and the 230V mains socket.
8. Set the power switch on the PSU housing to the I position (if present).

This device was designed and made of high-quality reusable materials and components. If the device, its packaging, user's manual, etc. are marked with crossed waste containers, it means they are subject to segregated household waste collection in compliance with the Directive 2012/19/UE of the European Parliament and of the Council. This marking informs that electric and electronic equipment shall not be thrown away together with household waste after it's been utilized. The user is obliged to bring the utilized equipment to electric and electronic waste collection points. Those running such collection points, including local collection points, shops, or commune units, provide a convenient system enabling to scrapping of such equipment. Appropriate waste management aids in avoiding consequences that are harmful to people and the environment and result from dangerous materials used in the device, as well as improper storage and processing. Segregated household waste collection aids recycle materials and components of which the device was made. A household plays a crucial role in contributing to recycling and reusing waste equipment. This is the stage where the basics are shaped which largely influence the environment being our common good. Households are also one of the biggest users of small electrical equipment. Reasonable management at this stage aids and favours recycling. In the case of improper waste management, fixed penalties may be imposed under national legal regulations.



Documents / Resources

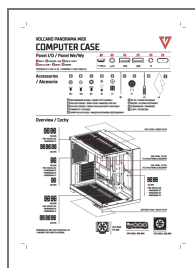

[Volcano Panorama MIDI Computer Case](#) [pdf] User Manual
Panorama MIDI Computer Case, MIDI Computer Case, Computer Case, Case

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.