



## volcano Smart Wireless Keyboard with Trackpad Mouse Instruction Manual

[Home](#) » [Volkano](#) » volcano Smart Wireless Keyboard with Trackpad Mouse Instruction Manual



**Freedom Series**



**SMART WIRELESS KEYBOARD  
WITH TRACKPAD MOUSE**

### **INSTRUCTION MANUAL**

Please read these instructions carefully and retain them for future reference.



V2.0  
VK-20141-BK [V2]

**Contents** [ [hide](#) ]

- [1 HIGHLIGHTS](#)
- [2 PACKAGE CONTENTS](#)
- [3 SPECIFICATIONS](#)
- [4 DESCRIPTION OF PARTS](#)
- [5 SETUP](#)
- [6 LOW POWER ALERT](#)
- [7 MULTIMEDIA SHORTCUT KEYS](#)
- [8 DEDICATED MULTIMEDIA SHORTCUT KEYS](#)
- [9 TRACKPAD GESTURE FUNCTIONALITY](#)
- [10 SAFETY PRECAUTIONS](#)
- [11 CLEANING & CARE INSTRUCTIONS – GENERAL](#)
- [12 ENVIRONMENTALLY-FRIENDLY DISPOSAL](#)
- [13 DISCLAIMER](#)
- [14 WARRANTY](#)
- [15 Documents / Resources](#)
- [16 Related Posts](#)

## HIGHLIGHTS

- Plug & Play USB Receiver
- Full QWERTY Keyboard
- Integrated Trackpad for Cursor Control
- Pinch & Scroll Trackpad Gesture Control
- 2.4GHz Wireless Keyboard
- Multimedia Shortcut Keys
- Mouse left & Right buttons
- Low Battery LED Indicator
- Windows Key
- 10 m Range

## PACKAGE CONTENTS

- Volcano Freedom Series Wireless Keyboard
- Volcano Freedom Series USB Nano Receiver
- Instruction Manual

## SPECIFICATIONS

- Connection Method: Wireless

- Batteries: 2 x AAA (Not Included)
- LED Indicators: Operation / Charge / Pairing
- Power Saving: Yes
- Operating Voltage: 3 V DC
- Function Keys: 12
- Key Type: Compact QWERTY
- Wireless Range: 10 m
- Wireless Type: 2.4 GHz
- Product Dimensions: 326 x 123 x 18 mm  
12.83 x 4.84 x 0.71 in

## DESCRIPTION OF PARTS

1. Function and Multimedia Shortcut Keys
2. Num, Caps, and Battery LED Indicators
3. Trackpad
4. Right Mouse Button
5. Left Mouse Button
6. Windows Shortcut Key
7. Function Key



## SETUP













Open the battery compartment of the keyboard to remove the Nano USB Receiver. Insert 2 x AAA batteries into the keyboard's battery compartment, and then turn the keyboard on. Finally, insert the Nano USB Receiver into the USB port of your computer, set-top box, or Smart TV. After a few seconds, your computer, set-top box, or Smart TV will install the device drivers and your Volkano Freedom Series Wireless Keyboard will be ready for use.

## LOW POWER ALERT







Please note that the keyboard's battery LED Indicator Light will flash red to indicate that the batteries are depleted. Please replace the batteries to continue using the keyboard should this arise.

## MULTIMEDIA SHORTCUT KEYS





To use multifunction keys, press and hold the Fn Key, and then press the preferred multifunction key.

Hotkey	Icon	Function	Description
<Fn> + <F1>		Open Internet Browser	Press the Function Button while pressing the F1 Key to open your Internet browser. Your internet browser will open your default homepage.
<Fn> + <F2>		Open Task View	Press the Function Button while pressing the F2 Key to open the task view.
<Fn> + <F3>		Open Settings	Press the Function Button while pressing the F3 Key to open your settings.
<Fn> + <F4>		Open Search	Press the Function Button while pressing the F4 Key to open the search bar.
<Fn> + <F5>		Open Action Center	Press the Function Button while pressing the F5 Key to open the action center.
<Fn> + <F6>		Lock Your PC	Press the Function Button while pressing the F6 Key to lock your PC.
<Fn> + <F7>		Open Share Center	Press the Function Button while pressing the F7 Key to open the share center on Windows 8.
<Fn> + <F8>		Open Default Music Player	Press the Function Button while pressing the F8 Key to open your media player.
<Fn> + <F9>		Play / Pause Media Playback	Press the Function Button while pressing the F9 Key to play or pause the media playback.
<Fn> + <F10>		Stop Media Playback	Press the Function Button while pressing the F10 Key to stop the media playback.
<Fn> + <F11>		Previous Track	Press the Function Button while pressing the F11 Key to skip to the previous track.
<Fn> + <F12>		Next Track	Press the Function Button while pressing the F12 Key to skip to the next track.

## DEDICATED MULTIMEDIA SHORTCUT KEYS

Icon	Function	Description
	Mute	Press the Mute Button to mute any media being played.
	Volume Down	Press the Volume Down Button to decrease the volume during media playback.
	Volume Up	Press the Volume Up button to increase the volume during media playback.
	Back	Press the Back Button to go back to the program being used.
	Forward	Press the Forward Button to go forward in the program being used.
	Lock / Unlock The Trackpad	Press the Lock / Unlock Button to Lock / Unlock the trackpad.

## TRACKPAD GESTURE FUNCTIONALITY

Gesture	Action	Mouse Function
	Single-finger slide	Move the mouse cursor
	Single tap	Left mouse click
	Two-finger slide vertically	Vertical scroll (mouse wheel)
	Pinch on the trackpad with two fingers.	Pinch open to zoom in or pinch close to zoom out.

## SAFETY PRECAUTIONS



- The product may only be used with the parts provided by the manufacturer.
- Always place your Volkano Freedom Series Wireless Keyboard on a solid flat surface.
- This product is intended for indoor use only.

- The Volkano Freedom Series Wireless Keyboard is intended for personal use only.

Commercial use invalidates the warranty and the supplier cannot be held responsible for injury or damage caused when using the device for any other purpose than that which it was intended for.

- This is not intended for use by children, or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the device by a person responsible for their safety. Extreme caution must be exercised. Packaging must never be left within reach of children since it is potentially dangerous.

## **CLEANING & CARE INSTRUCTIONS – GENERAL**

- Before Cleaning: Ensure that your Volkano Freedom Series Wireless Keyboard is off and the batteries are removed before cleaning or maintaining it.
- Cleaning: Wipe down the surface of your Volkano Freedom Series Wireless Keyboard using a soft, slightly damp cloth.
- Do not use any harsh or abrasive cleaning chemicals or materials on your Volkano Freedom Series Wireless Keyboard as doing so may damage or scratch the surface finish.
- Do not expose your Volkano Freedom Series Wireless Keyboard to high temperatures for extended periods of time.
- Do not store in temperatures over 140°F (60°C).

## **ENVIRONMENTALLY-FRIENDLY DISPOSAL**


### **IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT.**

- At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection center or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

o Never dispose of used electronics with ordinary solid wastes, since they contain toxic substances.

o Always dispose of used electronics in accordance with the prevailing community regulations that apply to the disposal of electronics. If there are no local regulations concerning electronics disposal, please dispose of the device in a waste bin for electronic devices.



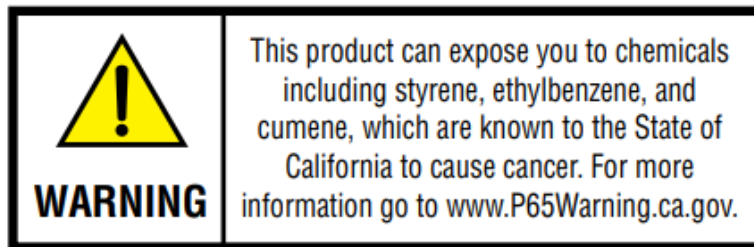

## DISCLAIMER

All product and company names are trademarks™ or registered trademarks of their respective holders. The use of them does not imply any affiliation with or endorsement by them.

## WARRANTY

This Volcano Freedom Series Wireless Keyboard includes a standard 12-month limited warranty against manufacturing defects and faults. Should your product be unboxed with any faulty parts, poor finishing or visible damage, or failure to perform due to a manufacturing defect or poor workmanship, please return it with your proof of purchase (till slip or invoice) to the store of purchase for an exchange, or repair, depending on the store's returns policy?

This warranty commences from the date of purchase.

Kindly retain your proof of purchase as well as the packaging for your warranty period.


**Note:** The warranty does not apply to products that:

1. Has failed due to excessive wear and tear beyond what is considered to be reasonable.
2. Has been misused or neglected.
3. Has been damaged accidentally or by Force Majeure including fire and flooding.
4. Has been used or operated contrary to operating or maintenance instructions outlined in this manual.

The Store of Purchase / Seller cannot accept any returned products that have not been returned in accordance with this warranty or which do not follow their own Returns Policy. Please refer to the Store of Purchase / Sellers Returns Policy for details.

Should you require any further assistance or have any questions about your warranty, please contact the store of purchase.

## Documents / Resources

 The image shows the product packaging for the Volcano Smart Wireless Keyboard with Trackpad Mouse. It features the Volcano logo at the top, a photograph of the keyboard, and the text "SMART WIRELESS KEYBOARD WITH TRACKPAD MOUSE" and "INSTRUCTION MANUAL".	<p><a href="#">volcano Smart Wireless Keyboard with Trackpad Mouse</a> [pdf] Instruction Manual Smart Wireless Keyboard with Trackpad Mouse</p>
--	---



