



volcano Wireless Mouse and Keyboard Combo Instruction Manual

[Home](#) » [Volcano](#) » volcano Wireless Mouse and Keyboard Combo Instruction Manual

Contents [[hide](#)]

- [1 volcano Wireless Mouse and Keyboard Combo](#)
- [2 HIGHLIGHTS](#)
 - [2.1 Keyboard:](#)
 - [2.2 Mouse:](#)
- [3 TECHNICAL SPECIFICATIONS](#)
- [4 PACKAGE CONTENTS](#)
- [5 DESCRIPTION OF PARTS](#)
- [6 SAFETY PRECAUTIONS](#)
- [7 CLEANING & CARE INSTRUCTIONS](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

volcano

volcano Wireless Mouse and Keyboard Combo



HIGHLIGHTS

Keyboard:

- Chocolate block style keycaps
- Multimedia and Windows shortcut keys
- Wireless operation up to 8 meters / 26 feet
- Plug and Play – No drivers required
- Suitable for Windows, MacOS, Linux and Android

Mouse:

- Left or right-handed use
- Adjustable DPI 800 / 1200 / 1600
- Wireless operation up to 8 meters / 26 feet
- Plug and play – no drivers required

TECHNICAL SPECIFICATIONS

Mouse Specifications:

- Mouse Lighting: Red
- DPI Switch: 800 / 1200 / 1600
- Buttons: 3
- Sensor Type: Optical
- Sensor Brand: Mosart
- Wireless Type: 2.4 GHz
- Batteries: 1 x AA
- Wireless Range: 8 m / 26 feet
- Power Saving: Yes
- Nano USB Receiver: Yes

- Mouse Size: 99 x 61.5 x 35.5 mm


Keyboard Specifications:


- Connection Method: Wireless
- Wireless Range: 8 m / 26 feet
- Function Keys: 12
- Multimedia Keys: 12
- Key System: Membrane
- Key Type: Chocolate block
- Batteries: 1 x AAA
- Operating Voltage: 1.5 V DC
- LED Indicators: Power
- Power Saving Yes
- Keyboard Size: 450 x 158 x 24 mm
- Compatibility: Windows, MAC OS, Linux, Android 4.4 up.

PACKAGE CONTENTS

- Volkano Cobalt Series Wireless Keyboard
- Volkano Cobalt Series Wireless Mouse
- Volkano USB Nano Receiver
- 1 x AAA Battery
- 1 x AA Battery
- Instruction Manual

DESCRIPTION OF PARTS

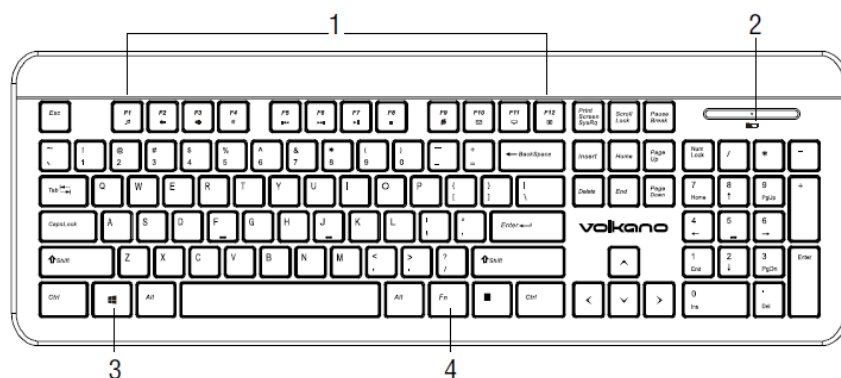

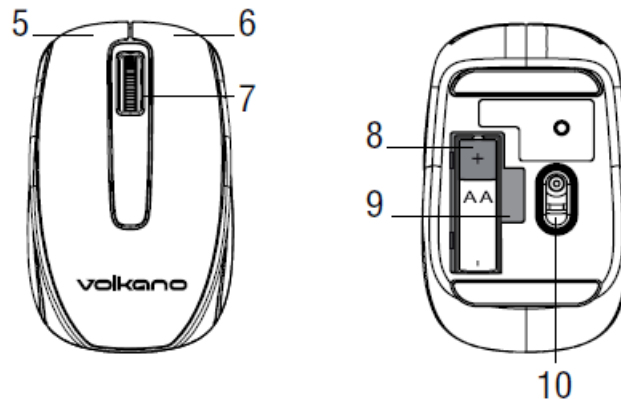

1. Function and Multimedia Shortcuts
2. Power Light
3. Windows Shortcut Key
4. Function Key
5. Left Mouse Button
6. Right Mouse Button
7. Scroll Wheel with Button
8. Battery Compartment
9. Nano Receiver
10. Power Switch

SETUP

Open the battery compartment of the mouse to remove the Nano USB receiver. Insert the AA battery into the mouse, and the AAA battery into the keyboard's battery compartment. Finally, insert the Nano USB receiver into the USB port of your computer. Slide the Power Switch to the On position. After a few seconds, your computer will install the device drivers and your combo will be ready for use.

MOUSE BUTTON FUNCTIONS

DPI Switch

To toggle the mouse's sensitivity settings between 800, 1200 or 1600 DPI, simply press and hold the Left Mouse Button and the Right Mouse Button at the same time for three (3) seconds. The mouse is set to 800 DPI by default. Higher DPI makes the mouse more sensitive for higher accuracy applications.

Hotkey	Icon	Function	Description
<Fn>+<F1>		Media Player	Press the Function Button while pressing the F1 Key to open your default media player.
<Fn>+<F2>		Volume Down	Press the Function Button while pressing the F2 Key to decrease the volume.
<Fn>+<F3>		Volume Up	Press the Function Button while pressing the F3 Key to increase the volume
<Fn>+<F4>		Mute Button	Press the Function Button while pressing the F4 Key to mute all sound.
<Fn>+<F5>		Previous	Press the Function Button while pressing the F5 Key to play the previous item in your media player's playlist.
<Fn>+<F6>		Next	Press the Function Button while pressing the F6 Key to play the next item in your media player's playlist.
<Fn>+<F7>		Pause / Play	Press the Function Button while pressing the F7 Key to play, or pause media playing from your media player.
<Fn>+<F8>		Stop	Press the Function Button while pressing the F8 Key to stop all media playing from your media player

<Fn>+<F9>		Homepage	Press the Function Button while pressing the F9 Key to open your internet browser. Your internet browser will open your default homepage.
<Fn>+<F10>		Email	Pressing the Function Button while pressing the F10 Key opens your default Email program.
<Fn>+<F11>		Computer	Pressing the Function Button while pressing the F11 Key will open a "This PC" window.
<Fn>+<F12>		Bookmark	Press the Function Button while pressing the F12 Key to open the bookmarks tab in your internet browser. Please note that this is only supported in certain browsers.

Low Power Alert

Please note that the keyboard's red low power light will flicker repeatedly to indicate that the batteries are depleted. Please replace the batteries to continue using the keyboard should this arise.

SAFETY PRECAUTIONS

- The product should only be used with the parts provided by the manufacturer.
- This product is intended for indoor use only.
- The Cobalt Series Wireless Set is intended for personal use only.
- Commercial use invalidates the warranty and the supplier cannot be held responsible for injury or damage caused when using the device for any other purpose than that which it was intended for.
- This is not intended for use by children, or persons with reduced physical, sensory or mental capabilities, or

lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the device by a person responsible for their safety. Extreme caution must be exercised.

- Children should be supervised to ensure that they do not play with the Cobalt Series Wireless Set.
- Packaging must never be left within reach of children, since it is potentially dangerous.

CLEANING & CARE INSTRUCTIONS

Before Cleaning:

Ensure that your Cobalt Series Wireless Set is not plugged into any device before cleaning or maintaining it. Remove the batteries before cleaning.

Cleaning:

Wipe down the surface of your Cobalt Series Wireless Set using a soft, slightly damp cloth. Do not use any harsh or abrasive cleaning chemicals or materials on your Cobalt Series Wireless Set as doing so may damage or scratch the surface finish. Do not expose your Cobalt Series Wireless Set to high temperatures for extended periods of time. Do not store in temperatures over 140°F (60°C).

ENVIRONMENTALLY FRIENDLY DISPOSAL

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well being.

DISCLAIMER

All product and company names are trademarks™ or registered® trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by trademark or registration holders.

WARRANTY


This Volcano Cobalt Series Wireless Combo includes a standard 12-month limited warranty against manufacturing defects and faults. Should your product be unboxed with any faulty parts, poor finishing or visible damage, or fail to perform due to a manufacturing defect or poor workmanship, please return it with your proof of purchase (till slip or invoice) to the store of purchase for an exchange, or repair, depending on the store's returns policy. This warranty commences from the date of purchase. Kindly retain your proof of purchase as well as the packaging for your warranty period.

NOTE:

The Warranty does not apply to a Product that:

- Has failed due to excessive wear and tear beyond what is considered to be reasonable.
- Has been misused or neglected.
- Has been damaged accidentally or by acts of God including fire and flooding.
- Has been used or operated contrary to operating or maintenance instructions outlined in this manual.
- The store of purchase / seller cannot accept any returned products that have not been returned in accordance to this warranty or which does not follow their own returns policy. Please refer to the store of purchase / sellers returns policy for details. Should you require any further assistance or have any questions on your warranty, please contact the store of purchase.

The logo for Volcano, featuring the word "volcano" in a bold, lowercase, sans-serif font. The 'v' is stylized with a thick, blocky design, and the 'o's are also thick and rounded.

 <p>The image shows the product packaging for the Volcano Wireless Mouse and Keyboard Combo. It features a black keyboard and a black mouse. The text on the box includes 'volcano' at the top, 'WIRELESS MOUSE & KEYBOARD COMBO' in the middle, and 'INSTRUCTION MANUAL' at the bottom. There are also some small icons and text at the bottom left.</p>	<p>volcano Wireless Mouse and Keyboard Combo [pdf] Instruction Manual Wireless Mouse and Keyboard Combo, VK-20120-BK</p>
--	--