

VOLLRATH FC-6DV-36 Flexvent Slide-In With Downdraftvent System and Fire Suppression User Manual

Home » VOLLRATH » VOLLRATH FC-6DV-36 Flexvent Slide-In With Downdraftvent System and Fire Suppression User Manual ™

Contents

- 1 VOLLRATH FC-6DV-36 Flexvent Slide-In With Downdraftvent System and Fire Suppression
- **2 SAFETY PRECAUTIONS**
- **3 FUNCTION AND PURPOSE**
- **4 SYSTEM OVERVIEW**
- **5 FLEXVENT™ UNIT OPERATION**
- 6 FLEXVENT™ FIRE SUPPRESSION SYSTEM OPERATION
- 7 AFTER FIRE SUPPRESSION SYSTEM DISCHARGE
- **8 MAINTENANCE**
- 9 TROUBLESHOOTING
- 10 SERVICE AND REPAIR
- 11 Technical Services
- 12 Documents / Resources
 - 12.1 References
- **13 Related Posts**



VOLLRATH FC-6DV-36 Flexvent Slide-In With Downdraftvent System and Fire Suppression



Thank you for purchasing this Vollrath® product! Save this manual for future reference, as well as the packaging for return shipping if needed.

SAFETY PRECAUTIONS

Please read and fully understand this manual and all safety messages before proceeding.

WARNING

Warning indicates a hazard that can cause severe injury or death.

CAUTION

Caution indicates a hazard that can cause minor or major injury.

NOTE: Indicates important information.

To reduce risk of injury or damage to the unit:

- Use only the grounded electrical outlet matching each electrical cooking appliance's nameplate rated voltage.
- Unit must be installed by qualified personnel in accordance with applicable codes and ordinances.
- Use the unit in a flat, level position.
- Do not use extension cords for electrical appliances.
- Before cleaning or maintenance, turn the unit off and disconnect the electrical supply.
- Electrical appliances used with the unit must conform to constraints and clearance requirements.
- Use only electrical appliances approved by the Authority Having Jurisdiction (AHJ). AHJ approvals are required for all electrical appliances and configurations.
- Do not block vents, fire pull, or discharge nozzles.
- Do not spray or pour liquids on any part of the unit. Use only damp cloths for cleaning.

· Always attend the unit when operating.

NOTE: Unit is not intended for use with gas appliances.

FUNCTION AND PURPOSE


This unit is intended to remove grease-laden air when cooking in commercial food-service settings. Personal, household, industrial, and lab use are not recommended.

NOTE: This product is UL Recognized. UL recognized components are incomplete in certain constructional features and require professional installation and subsequent evaluation to relevant standards. Additional components and fabricator preparation are required for UL, NFPA, AHJ, and applicable code compliance. Electrical cooking appliances used with this unit should be certified compliant with applicable UL and NFPA standards by a Nationally Recognized Testing Laboratory (NRT).


SYSTEM OVERVIEW


The FlexVent™ unit consists of three integrated systems:

- FlexVent Ventilation and Filtration System
- · Fire Detection System
- ANSUL® R-102 Restaurant Fire Suppression System

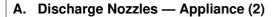


- B. Grease Filters (2)
- C. Grease Tray (1)
- D. Manual Pull Station
- E. Fire Suppression System Arming View Windo
- F. 1.5 Gallon ANSULEX R-102 Tank, ANSULEX Fir e Suppressant*
- G. Electrical Outlets*
- H. Pressure Control**
- I. Interlock Box**
- J. Circuit Breakers and Box*
- K. User Control
- L. Nitrogen (N) Cartridge LT-20-R*

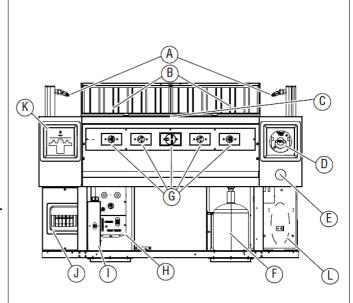

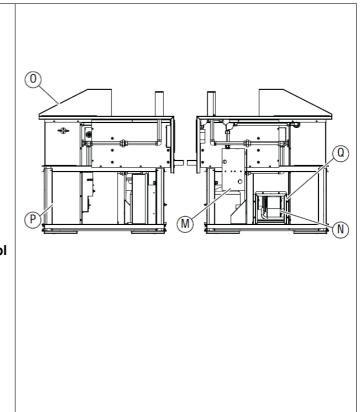

- M. ANSUL Automan Regulated Release Assembly
- N. Fan Motor
- O. Vent Hood
- P. Plenum Assembly
- Q. Damper Assembly

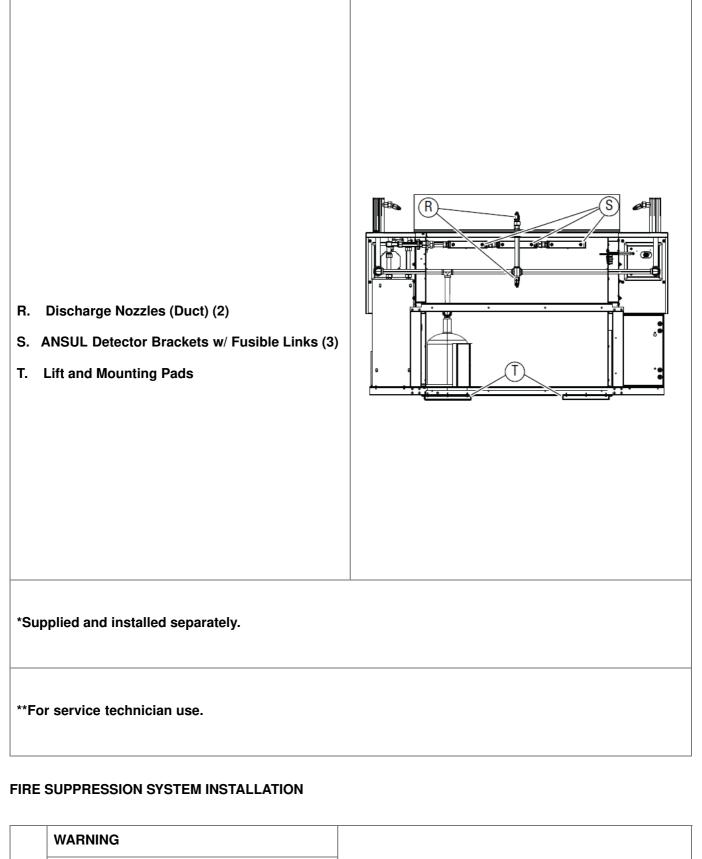

Fire, Injury, Death Hazard

This unit must be installed and adjusted by a qualified technician in accordance with all fed eral, state, and local codes. Failure to install, a djust, or maintain this unit properly can result in property damage, injury, or death.

NOTE: The Fire Suppression System must be charge d by an authorized ANSUL® representative before it will operate.

NOTE: The installer and owner assume full responsi bility for the unit and electrical appliance set up and compliance with all applicable codes and regulations.


The following information is for use by authorized ANSUL representatives only. Refer to ANSUL documentation for the following steps.


ANSUL representative to supply:

- Carbon Dioxide (CO₂) or Nitrogen (N) cartridge
- ANSULEX Low pH Liquid Fire Suppressant


Fusible Links and Gas Cartridges				
A ANSUL Model SL Fusible Link 165°F				
В	LT-20-R Cartridge (Not supplied)			

1. Replace the three temporary test links with the su pplied 165°F SL Fusible Links.

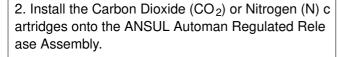

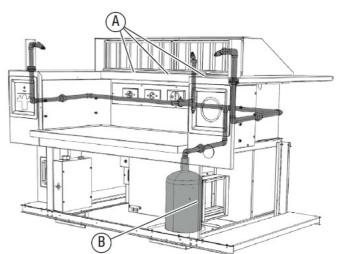

Fire Extinguishing Tank and Nozzles		
A	ANSUL R-102 1W Nozzle (Appliance)	
В	ANSUL R-102 1W Nozzle (Duct)	
С	ANSUL R-102 1.5 Gallon Tank	

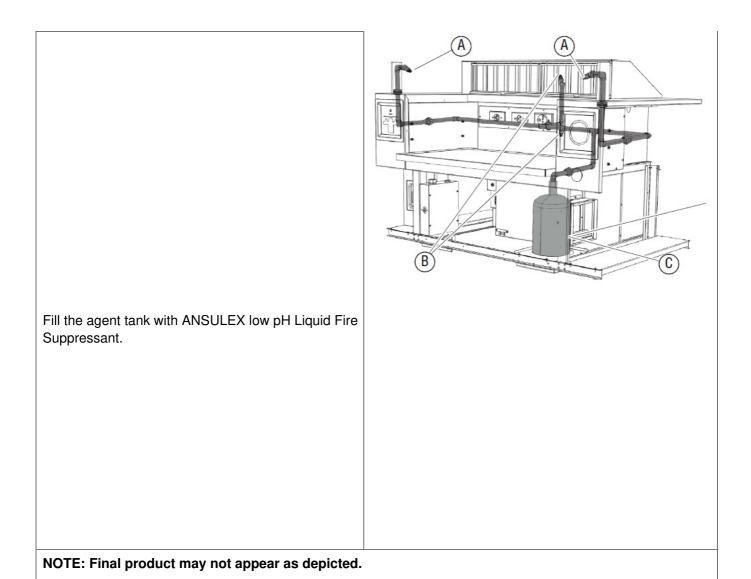


FLEXVENT™ UNIT OPERATION

OVERVIEW

The FlexVent unit will only operate when the ANSUL® Fire Suppression System is charged, and the Grease Filters and Particulate Filters are properly installed.

It e m	Description	Function
A	Main Power Indicator	The logo will glow when unit power is on. NOTE: If the Vollrath logo is not illuminated, ther e is no power to the FlexVent unit.
В	Main Power Switch	Turns the control system on or off.

С	System On/Off Switch and Indicator				Turns the ve		er to the electrical applian
D	System On/Off Indicator				Indicates the	e unit is running.	
E	Low Pressure Indicator				Indicates a for the correct		mproperly installed, or n
F	High Pressure Indicator				Indicates the	e filters are dirty	or are not the correct typ
G	LED Light Switch				Optional, sw e configured		otional lighting (may not b
Н	LED Light Indicator					tional lighting is ON.	
		high pressu re dirty or w rong filter	o n	main power system on light		low pressure missing or wr ong filter	main power Togy pressure dry or sworg filter yystem on Togy pressure Arry or sworg filter yystem on Togy pressure Arry or sworg filter yystem on

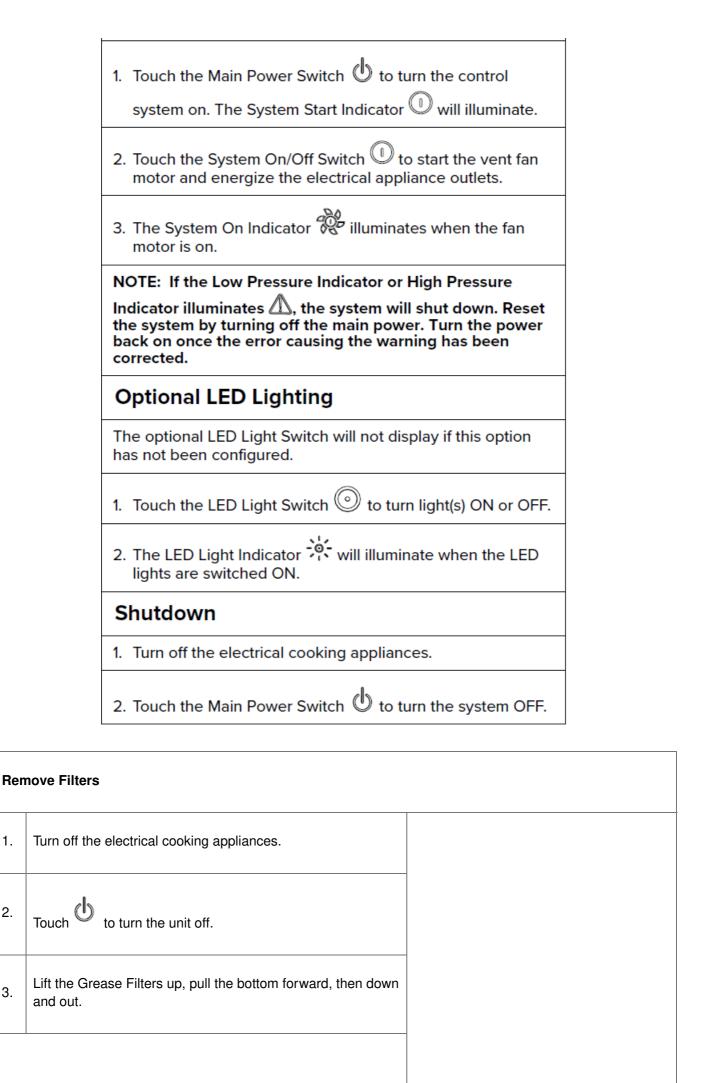

1.

2.

3.

 Lift the Drip Tray straight up to remove it. Lift the Particulate Filters straight up to remove them. Replace filters in reverse order. NOTE: Ensure the Particulate Filters are properly oriented the label.		
A. (Grease Filters (2) 352035-2	B. Drip Tray 352034-2
	Grease Filters (2) 352035-2 Particulate Filters (2) 352010-1	B. Drip Tray 352034-2

stem Cleaning and Maintenance

Procedure	Inspected
System Cleaning	
Monthly Interlock System Test	
Quarterly Plenum Cleaning	
Fire Suppression System Maintenan ce	
Semi-Annual Fire Suppression Inspection & Maintenance	

Annual Fire Suppression System Ins pection & Maintenance	
12-Year Fire Suppression System In spection & Maintenance	
Maintenance & Service Log	

Cleaning

Clean your FlexVent™ Unit daily.

WARNING

Fire Hazard

Do not allow grease to accumulate on any surface s of the appliance, or areas in and around the coo king area.

Accumulated grease could result in a fire hazard.

WARNING

Electrical Shock Hazard

Keep water and other liquids from entering the unit. Liquid in the unit could cause an electrical shock. Do not spray water or cleaning products. Liquid could contact the electrical components and cause a short circuit or an electrical shock.


CAUTION

Burn Hazard

Do not touch hot liquid or heating surfaces while u nit is heating or operating.

Hot liquids and food can burn skin. Induction heating surfaces heat very rapidly. Allow the heating surface to cool before handling.

NOTE: Do not use abrasive materials, scratching cle ansers, or scouring pads to clean the unit. These can damage the finish.

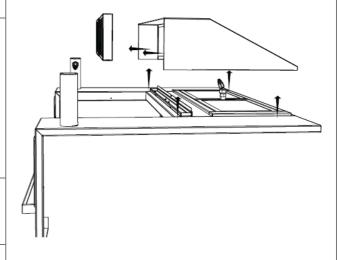

Wipe the exterior of the unit.

Wash Grease Filters, Grease Tray and Vent Hood.

NOTE: Failure to install the Grease Tray will allow grease and moisture from the Grease Filters to drop in to the vent, creating both a safety hazard and a heal th hazard.

- 1. Touch to turn off the unit. Unplug electrical cooking a ppliances; allow to cool.
- 2. Clean electrical cooking appliances per their respective instructions.

NOTE: Carefully remove electrical cooking applianc es from the unit if necessary to clean surround or appliances.

- 3. Lift the Vent Hood and Grease Filters to remove them
- 4. Empty the Grease Tray into an approved collection re ceptacle.
- 5. Wash Grease Filters, Vent Hood, and Grease Tray wit h mild detergent and warm water. Rinse and dry Grease Filters with a clean, soft nonabrasive cloth.

NOTE: Grease Filters can be washed and are dishwasher safe; Particulate Filters must be replace d with new filters when very dirty/clogged, after a fir e, or approximately every six months.

- 6. Use a damp cloth and mild soap to wipe exterior surfa ces of the unit, including the electrical cooking appliance space.
- 7. Thoroughly wipe soap away with a water-dampened c loth and dry surfaces with clean non-abrasive cloth. Res idue could corrode the surface.
- 8. Install Grease Filters, Grease Tray, and Vent Hood.

NOTE: Visually inspect the four Discharge Nozzles. Verify the Nozzle Caps are in place. Contact your lo cal ANSUL® authorized representative if the caps a re missing and/or the nozzles need to be repositione d.

FLEXVENT™ FIRE SUPPRESSION SYSTEM OPERATION

NOTE: The Fire Protection System utilized with this appliance is an ANSUL® R-102 RESTAURANT FIRE SUPPRESSION SYSTEM

Owners Role in Fire Protection

- · Keep all kitchen units free of grease build-up.
- Never use or store flammable solvents or cleaners on or near the unit.
- Keep utensils, pots, pans, or cooking materials, etc., stored in areas that do not obstruct the Fire Suppression System discharge.
- Never tamper with the system components (i.e., detectors, nozzles, agent storage container(s), or the releasing mechanism).
- DO NOT remove or reposition the nozzles. All nozzles have been factory installed and aligned in the proper
 operating position. Be sure that all nozzles have nozzle caps assembled to them. Contact your local ANSUL
 authorized representative if caps are missing and/or nozzles need to be repositioned.

Manual Activation


The ANSUL Fire Suppression System can also be manually activated.

- 1. Pull the ring on the red Manual Pull Station with enough force to activate the ANsUL Fire Suppression System.
- 2. When the ANSUL Fire Suppression System is manually activated, power to the electrical cooking appliances and the entire FlexVent Unit will shut off.

Controls and Operation

In the unlikely event of a fire:

- The integrated ANSUL Fire Suppression System will automatically deploy.
- Power to the electrical cooking appliances and the entire FlexVent unit will be shut off.

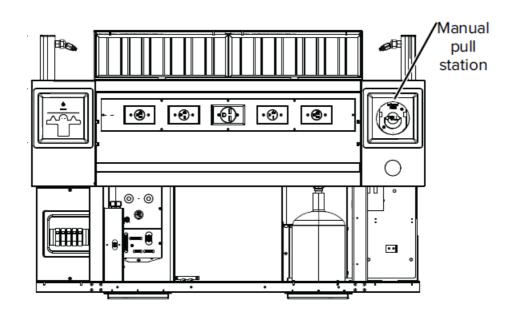

AFTER FIRE SUPPRESSION SYSTEM DISCHARGE

WARNING

Electrical Shock Hazard Keep water and other liquids from entering the unit. Liquid in the unit could cause an electrical shock. Do not spray water or cleaning products. Liquid could contact the electrical components and cause a short circuit or an electrical shock.

CAUTION

Burn Hazard Make sure all surfaces to be cleaned have cooled to room temperature. Do not use water to clean any electrical appliances that contain hot grease or cooking oils. Doing so may result in violent steaming and/or

spattering.

After discharge, the FlexVent™ unit will not operate until the ANSUL® Fire Suppression System is serviced by an authorized ANSUL representative.

- 1. After discharge, clean the FlexVent unit and surrounding area within 24 hours. Fire suppression chemicals can cause damage to surfaces.
- 2. Wear rubber gloves during cleanup, as sensitive skin may become irritated. If the ANSULEX agent or its residue comes in contact with skin or eyes, flush thoroughly with clean water.
- 3. Remove as much of the agent as possible using hot soapy water and sponges or clean rags. Dispose of sponges or rags in accordance with local regulations.
- 4. After thoroughly cleaning all affected surfaces, adequately rinse with clean water. Dry with a soft cloth.

 NOTE: The Fire Suppression System agent is non-toxic. However, food product and cooking grease/oil that has come in contact with the agent will no longer be suitable for human consumption and should be discarded.
- 5. After cleanup, call your authorized ANSUL representative to inspect, recharge, and re-commission the ANSUL Fire Suppression System.

NOTE: The ANSUL Fire Suppression System must be serviced by an authorized ANSUL representative per ANSUL documentation, and in accordance with local code requirements and NFPA standards.

MAINTENANCE

System maintenance must be performed semi-annually by an authorized ANSUL distributor.

NOTE: All ANSUL Fire Suppression System maintenance must be performed by an authorized ANSUL representative, per ANSUL documentation, and in accordance with local code requirements and NFPA standards. Contact your local ANSUL representative for maintenance details.

TROUBLESHOOTING

Problem Might be Caused By		Course of Action	
	There is no power.	Reconnect to electrical power. Reset circuit breaker for unit. Contact Vollrath Technical Services.	
Unit will not operate — lo go is not illuminated.	The ANSUL® Fire Suppression System was no t properly commissioned or needs service.	Contact an authorized ANSUL representative for repair.	
Low Pressure Indicator is illuminated and cooking u nit will not turn on.	Particulate or Grease Filters are out of position position, missing, or are not the correct type.	Properly install correct filters.	
High Pressure Indicator is illuminated and cooking u nit will not turn on.	Particulate or Grease Filters are dirty or are not the correct ty pe.	Install correct clean filters.	

SERVICE AND REPAIR

Serviceable parts are available on <u>Vollrath.com</u>. To avoid serious injury or damage, never attempt to repair the unit or replace a damaged power cord yourself. Do not send units directly to The Vollrath Company LLC. Please contact Vollrath Technical Services for instructions. When contacting Vollrath Technical Services, please be ready with the item number, model number (if applicable), serial number, and proof of purchase showing the date the unit was purchased.

WARRANTY STATEMENT FOR THE VOLLRATH CO. L.L.C.

This warranty does not apply to products purchased for personal, family, or household use, and The Vollrath Company LLC does not offer a written warranty to purchasers for such uses. The Vollrath company LLC warrants the products it manufactures or distributes against defects in materials and workmanship as specifically described in our full warranty statement. Model shown comes with a Vollrath® 12-month sale to End User OR 18-month sale to Dealer warranty against defects in materials and workmanship. Damage from improper use, abuse, modification, or resulting from improper packaging during return shipment for warranty repair will not be covered under warranty. This warranty does not apply to products purchased for personal, family, or household use, and The Vollrath Company LLC does not offer a written warranty to purchasers for such uses. The Vollrath company LLC warrants the products it manufactures or distributes against defects in materials and workmanship as specifically described in our full warranty statement. Model shown comes with a Vollrath® 12-month sale to End User OR 18-month sale to Dealer warranty against defects in materials and workmanship. Damage from improper use, abuse, modification, or resulting from improper packaging during return shipment for warranty repair will not be covered under warranty.

- For complete warranty information, product registration, and new product announcements, visit www.vollrath.com.
- ANSUL components are warranted by ANSUL. For details please visit <u>www.ansul.com</u>.
- ANSUL® is a registered trademark of Tyco Fire Protection Products

The Vollrath Company, L.L.C. 1236 North 18th Street Sheboygan, WI 53081-3201 U.S.A.

Main Tel: 800.624.2051 or 920.457.4851
Main Fax: 800.752.5620 or 920.459.6573

• Customer Service: 800.628.0830

• Canada Customer Service: 800.695.8560

Technical Services

• techservicereps@vollrathco.com

• Induction Products: 800.825.6036

• Countertop Warming Products: 800.354.1970

• All Other Products: 800.628.0832

© 2022 The Vollrath Company L.L.C. Part No. 354138 5/12/22

Documents / Resources



<u>VOLLRATH FC-6DV-36 Flexvent Slide-In With Downdraftvent System and Fire Suppression</u> [pdf] User Manual

FC-6DV-36 Flexvent Slide-In With Downdraftvent System and Fire Suppression, FC-6DV-36, Fl exvent Slide-In With Downdraftvent System and Fire Suppression, Downdraftvent System and Fire Suppression, Fire Suppression

References

- V Commercial Foodservice & Kitchen Equipment | Vollrath Foodservice
- Ansul Home
- V Commercial Foodservice & Kitchen Equipment | Vollrath Foodservice

Manuals+,